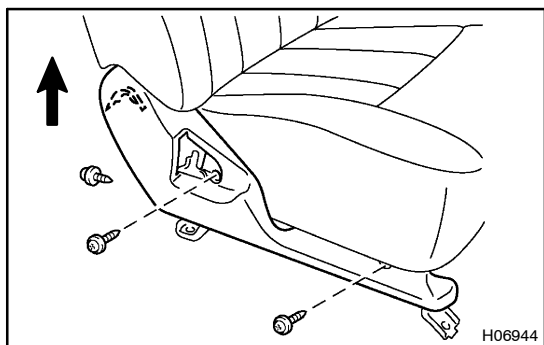


DISASSEMBLY

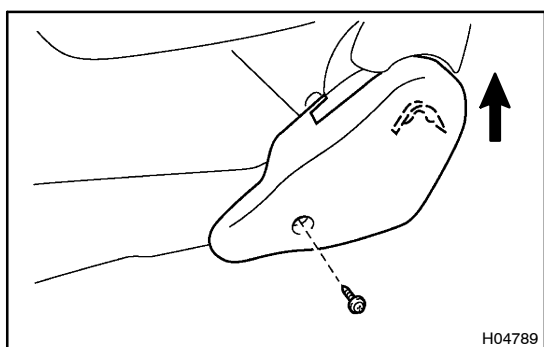
1. REMOVE HEADREST
2. REMOVE RECLINING ADJUSTER RELEASE HANDLE

Remove the screw and reclining adjuster release handle.



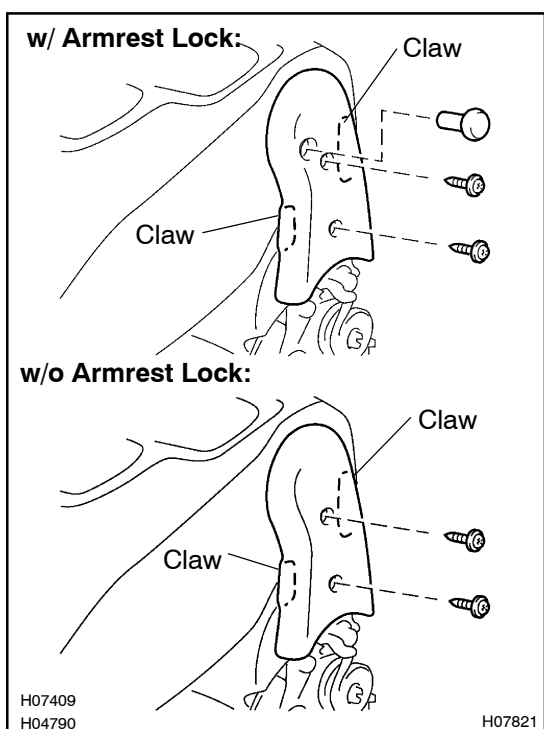
3. REMOVE SEAT CUSHION OUTER SHIELD

- (a) Remove the 3 screws.
- (b) Remove the seat cushion outer shield as shown in the illustration.



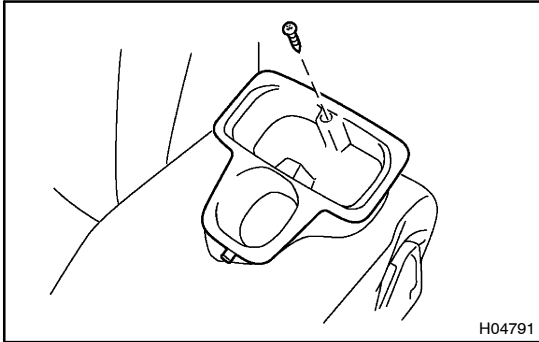
4. REMOVE SEAT CUSHION INNER SHIELD

- (a) Remove the screws.
- (b) Remove the seat cushion inner shield as shown in the illustration.



5. REMOVE CENTER ARMREST HINGE COVER

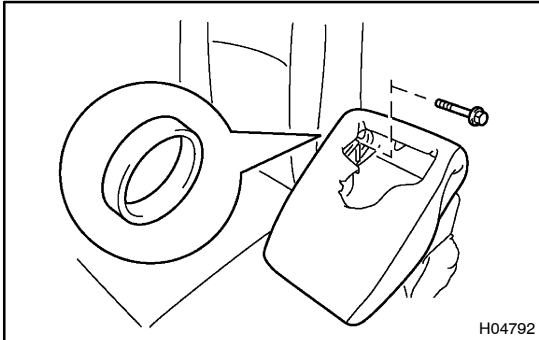
- (a) w/ Armrest Lock:
Remove the armrest lock release knob.
- (b) Remove the 2 screws and center armrest hinge cover.

**6. REMOVE CUP HOLDER**

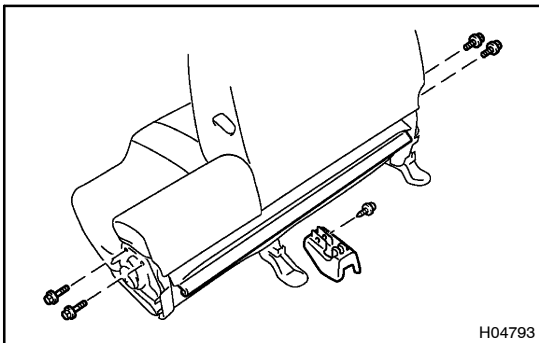
Remove the screw and cup holder as shown in the illustration.

7. REMOVE CENTER ARMREST HINGE

Remove the 4 bolts and center armrest hinge.

**8. REMOVE CENTER ARMREST**

Remove the bolt, spacer and center armrest.

**9. REMOVE SEATBACK ASSEMBLY**

- (a) Disengage the hook.
- (b) Remove the 4 bolts and seatback assembly.
- (c) Remove the screw and seat track upper rear cover.

10. REMOVE SEATBACK FRAME

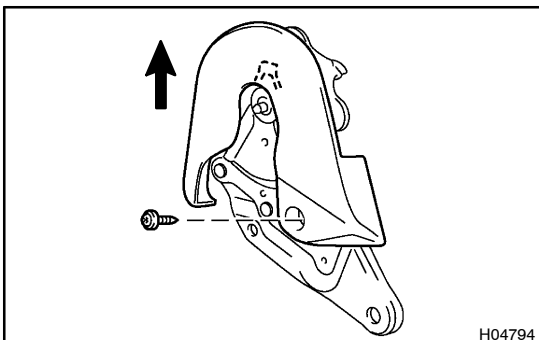
- (a) Remove the 2 hog rings.
- (b) Remove the headrest support.
- (c) Remove the seatback frame.

11. REMOVE SEATBACK COVER

Remove the 3 hog rings and seatback cover.

12. REMOVE LH RECLINING ADJUSTER

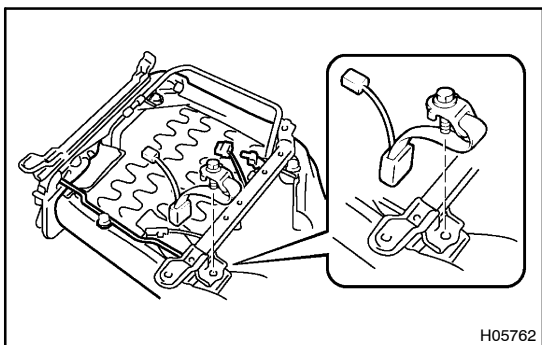
Remove the 2 bolts and LH reclining adjuster.

**13. REMOVE LH RECLINING ADJUSTER INNER COVER**

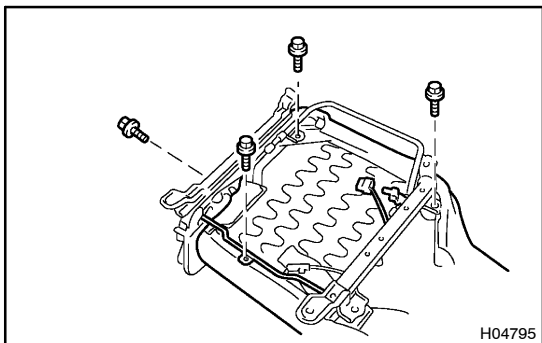
Remove the screw and LH reclining adjuster inner cover.

14. REMOVE RECLINING CONNECTING PIPE

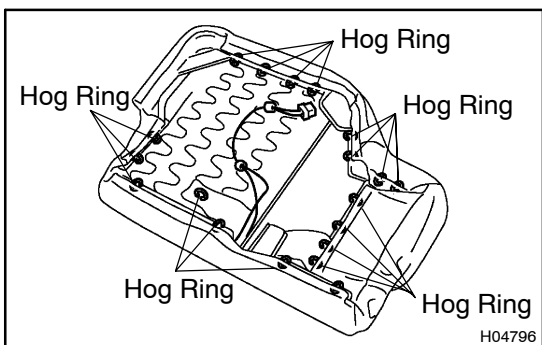
Remove the reclining connecting pipe.

**15. REMOVE FRONT SEAT CENTER BELT**

Unfasten the bolt and remove the front seat center belt.

**16. REMOVE SEAT CUSHION ASSEMBLY**

- (a) Remove the connector from the bracket.
- (b) Remove the 4 bolts and seat cushion assembly.
- (c) Remove the front seat inner belt.

**17. REMOVE SEAT CUSHION FRAME**

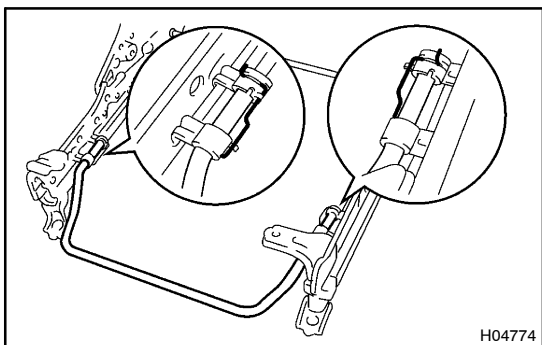
- (a) Remove the 2 clamps.
- (b) Remove the 19 hog rings and seat cushion frame.

18. REMOVE SEAT CUSHION COVER

Remove the 11 hog rings and seat cushion cover.

19. REMOVE RH RECLINING ADJUSTER INNER COVER

Remove the screw and RH reclining adjuster inner cover.

**20. REMOVE SEAT TRACK ADJUSTER HANDLE**

- (a) Using a screwdriver, remove the 2 springs.

HINT:

Tape the screwdriver tip before use.

- (b) Remove the seat track adjuster handle.

21. REMOVE REAR SEAT TRACK RETAINER

Remove the 4 bolts and rear seat track retainer.