


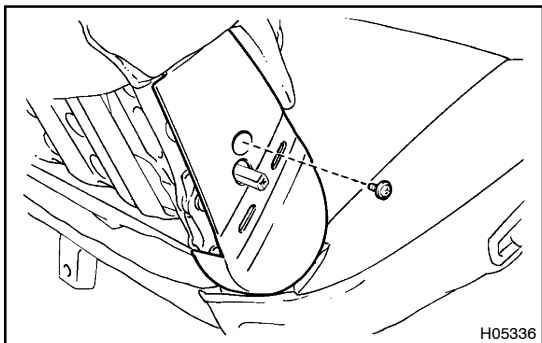


DISASSEMBLY

1. REMOVE HEADREST

2. REMOVE NO.1 RECLINING COVER

- Remove the 2 screws and reclining release control lever.
- Disengage the hooks.
- Remove the 2 screws and 2 No.1 reclining covers.

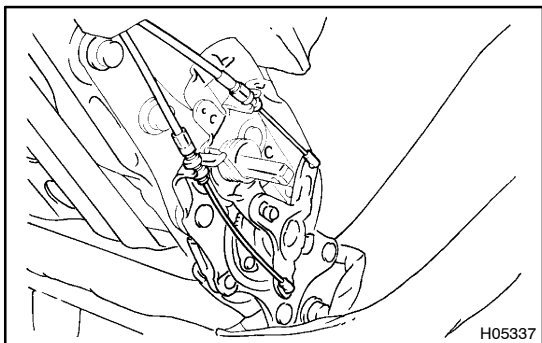

3. REMOVE RECLINING CONNECTING WIRE

Loosen the nut, remove the 2 wires.

4. REMOVE SEATBACK ASSEMBLY

Remove the 4 bolts and seatback assembly.


Torque: 37 N·m (380 kgf·cm, 27 ft·lbf)

5. REMOVE SEATBACK FRAME

- Remove the headrest supports.
- Remove the seatback frame.
- Remove the reclining connecting wire from the seatback frame.


6. REMOVE SEATBACK COVER

Remove the hog rings and seatback cover from the seatback pad.

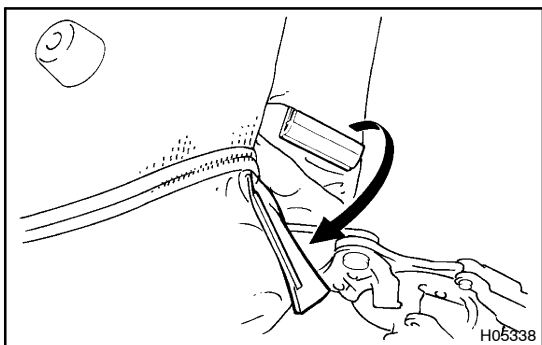


7. REMOVE REAR NO.1 SEAT ADJUSTER


- Disengage the hook.

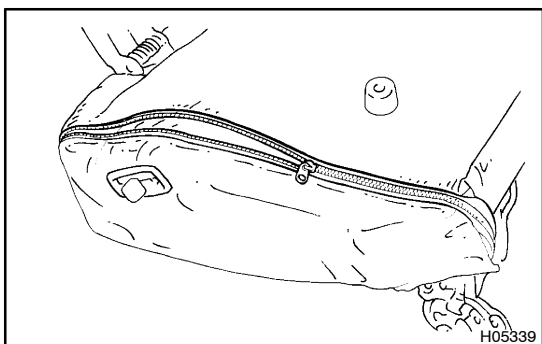


- Zip the seat cushion cover open.

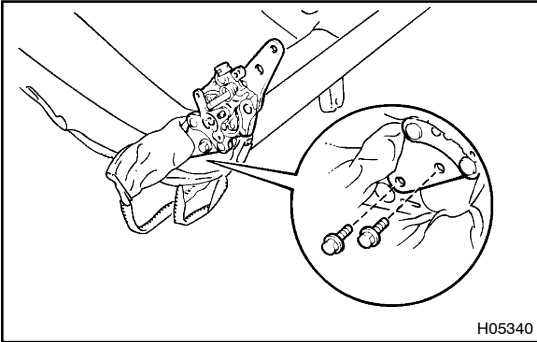


- (c) Remove the 2 bolts and rear No.1 seat adjuster.
Torque: 37 N·m (380 kgf·cm, 27 ft·lbf)

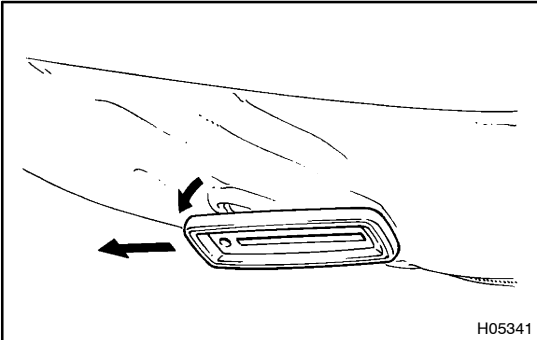


- 8. REMOVE RECLINING REMOTE CONTROL BEZEL**
 (a) Remove the screw and reclining remover control lever knob.
 (b) Remove the screw and reclining remote control bezel as shown in the illustration.

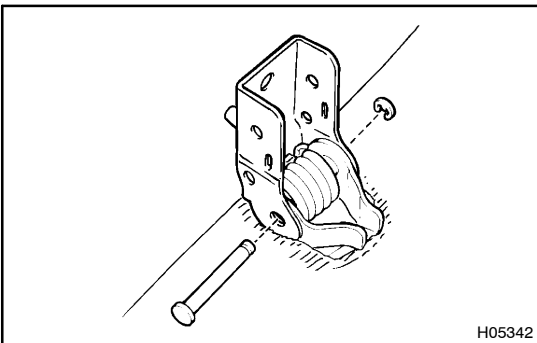


- 9. REMOVE LOWER SEAT CUSHION LEG HINGE**
 (a) Using a screwdriver, remove the E-ring.
 (b) Remove the hinge pin, cushion spacer, cushion support spring and lower seat cushion leg hinge.
10. REMOVE THESE PARTS:
 (a) Cushion
 (b) Fold seat stopper band

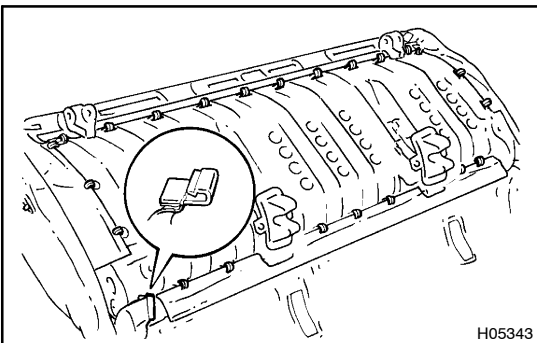

- 11. REMOVE SEAT CUSHION FRAME**
 (a) Open the seat cushion cover.
 (b) Disengage the hooks.
 (c) Remove the hog rings and seat cushion frame.

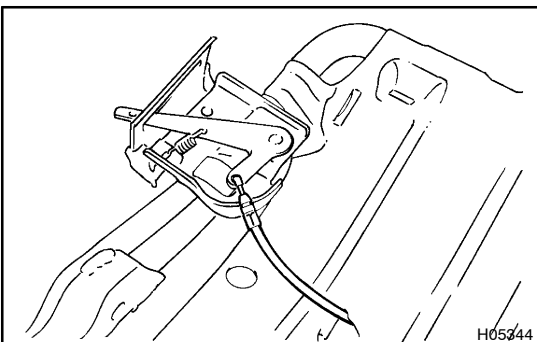

- 12. REMOVE REAR SEAT LOCK CONTROL CABLE**
 (a) Remove the control cable from the reclining remote control lever.

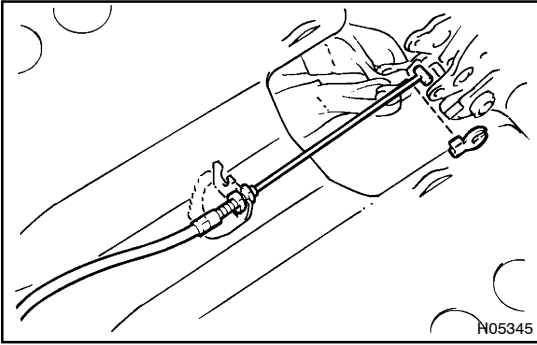

- (b) Loosen the nut, remove the control cable from the rear seat lock.
- (c) Remove the control cable from the seat cushion frame.

13. REMOVE REAR SEAT LOCK

- (a) Remove the 4 screws and rear seat back lock covers.
- (b) Remove the 2 bolts, inner belts, center belts and rear seat locks.

Torque: 43 N·m (440 kgf·cm, 32 ft·lbf)

14. REMOVE SEAT CUSHION COVER

Remove the hog rings and seat cushion cover.