



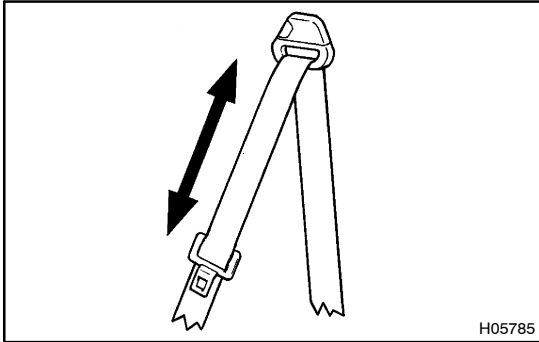

INSPECTION

- 1. INSPECT SEAT BELT PRETENSIONER ACTIVATION**
Replace the seat belt if the seat belt cannot be drawn out or does not retract.

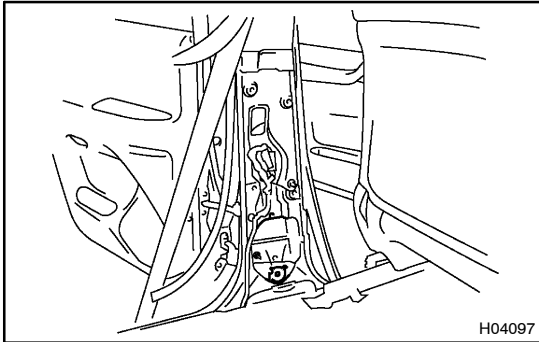

- 2. INSPECT SEAT BELT PRETENSIONER MOUNT**
Remove the seat belt pretensioner and check for deformation of the mount. If you find any deformation, repair the mount.