


FUEL TANK AND LINE COMPONENTS

B01XJ-01

w/o Sub-Fuel Tank:

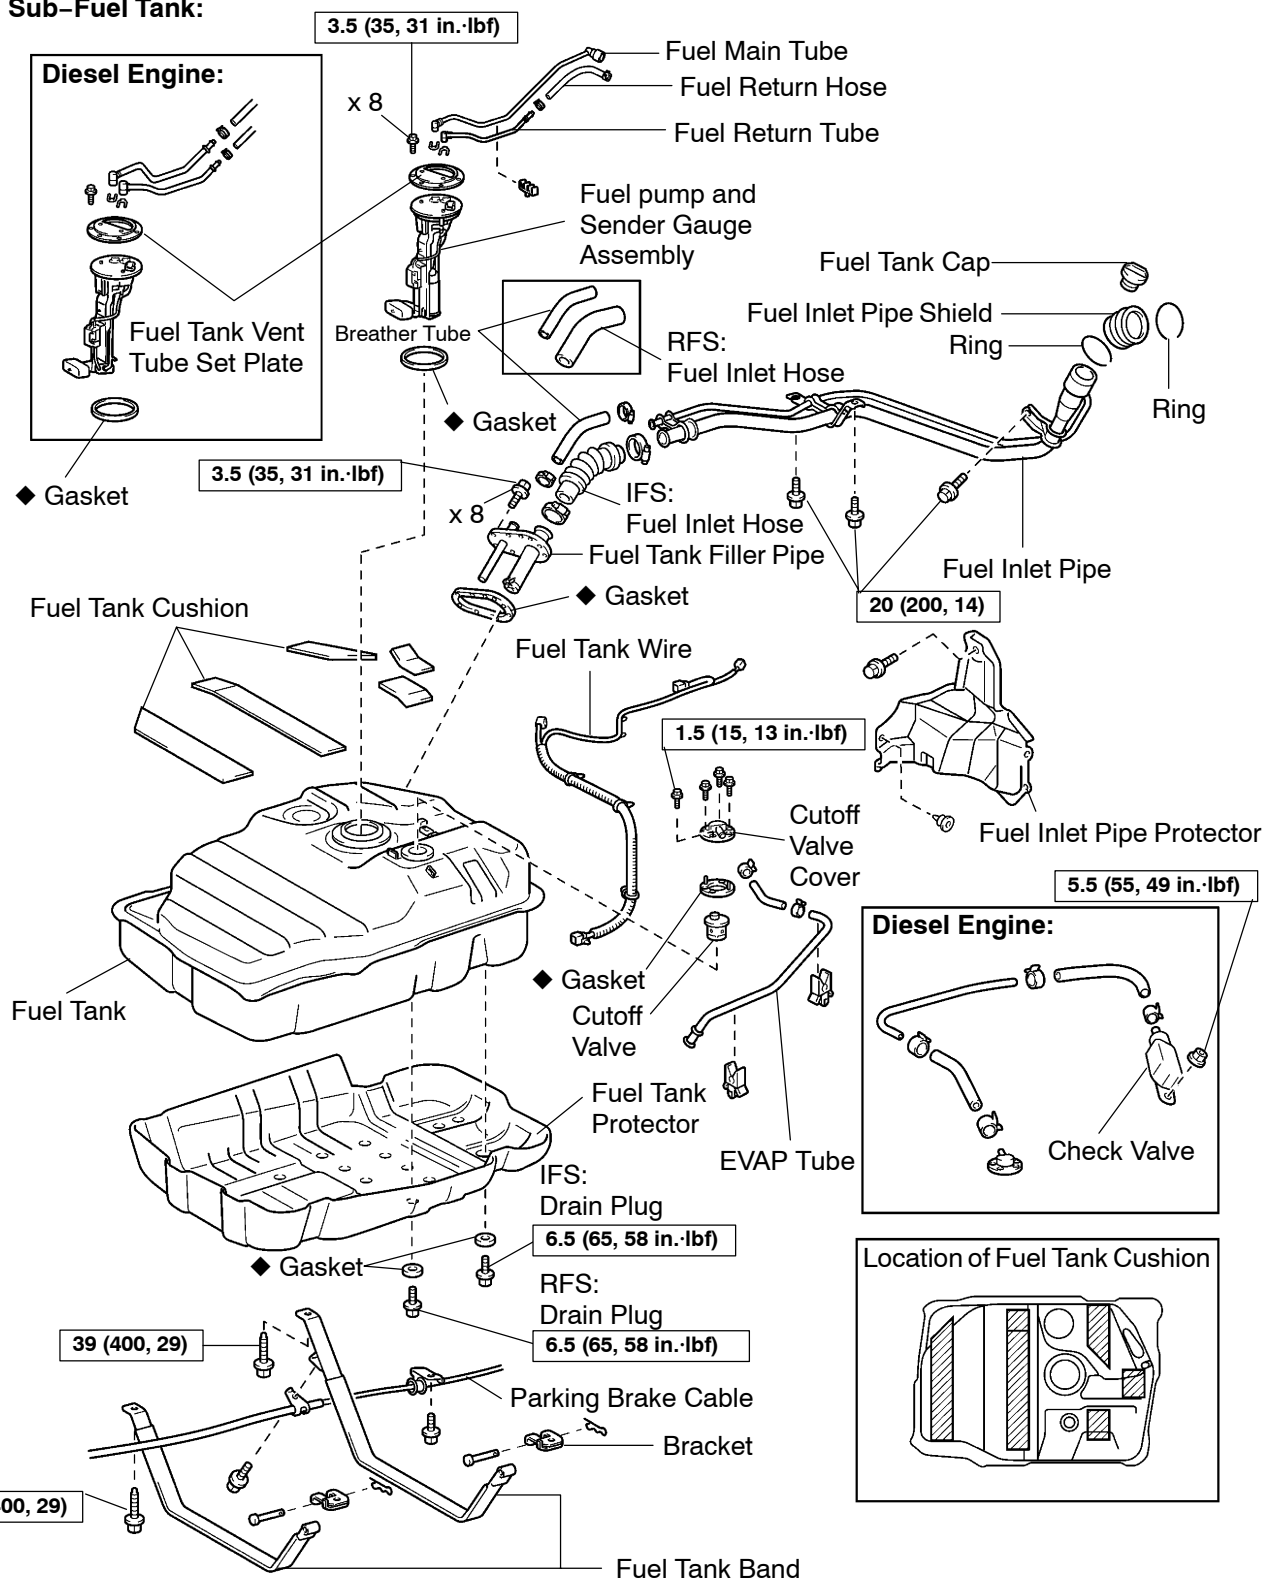


N·m (kgf·cm, ft·lbf) : Specified torque

◆ Non-reusable part

H05711

w/ Sub-Fuel Tank:

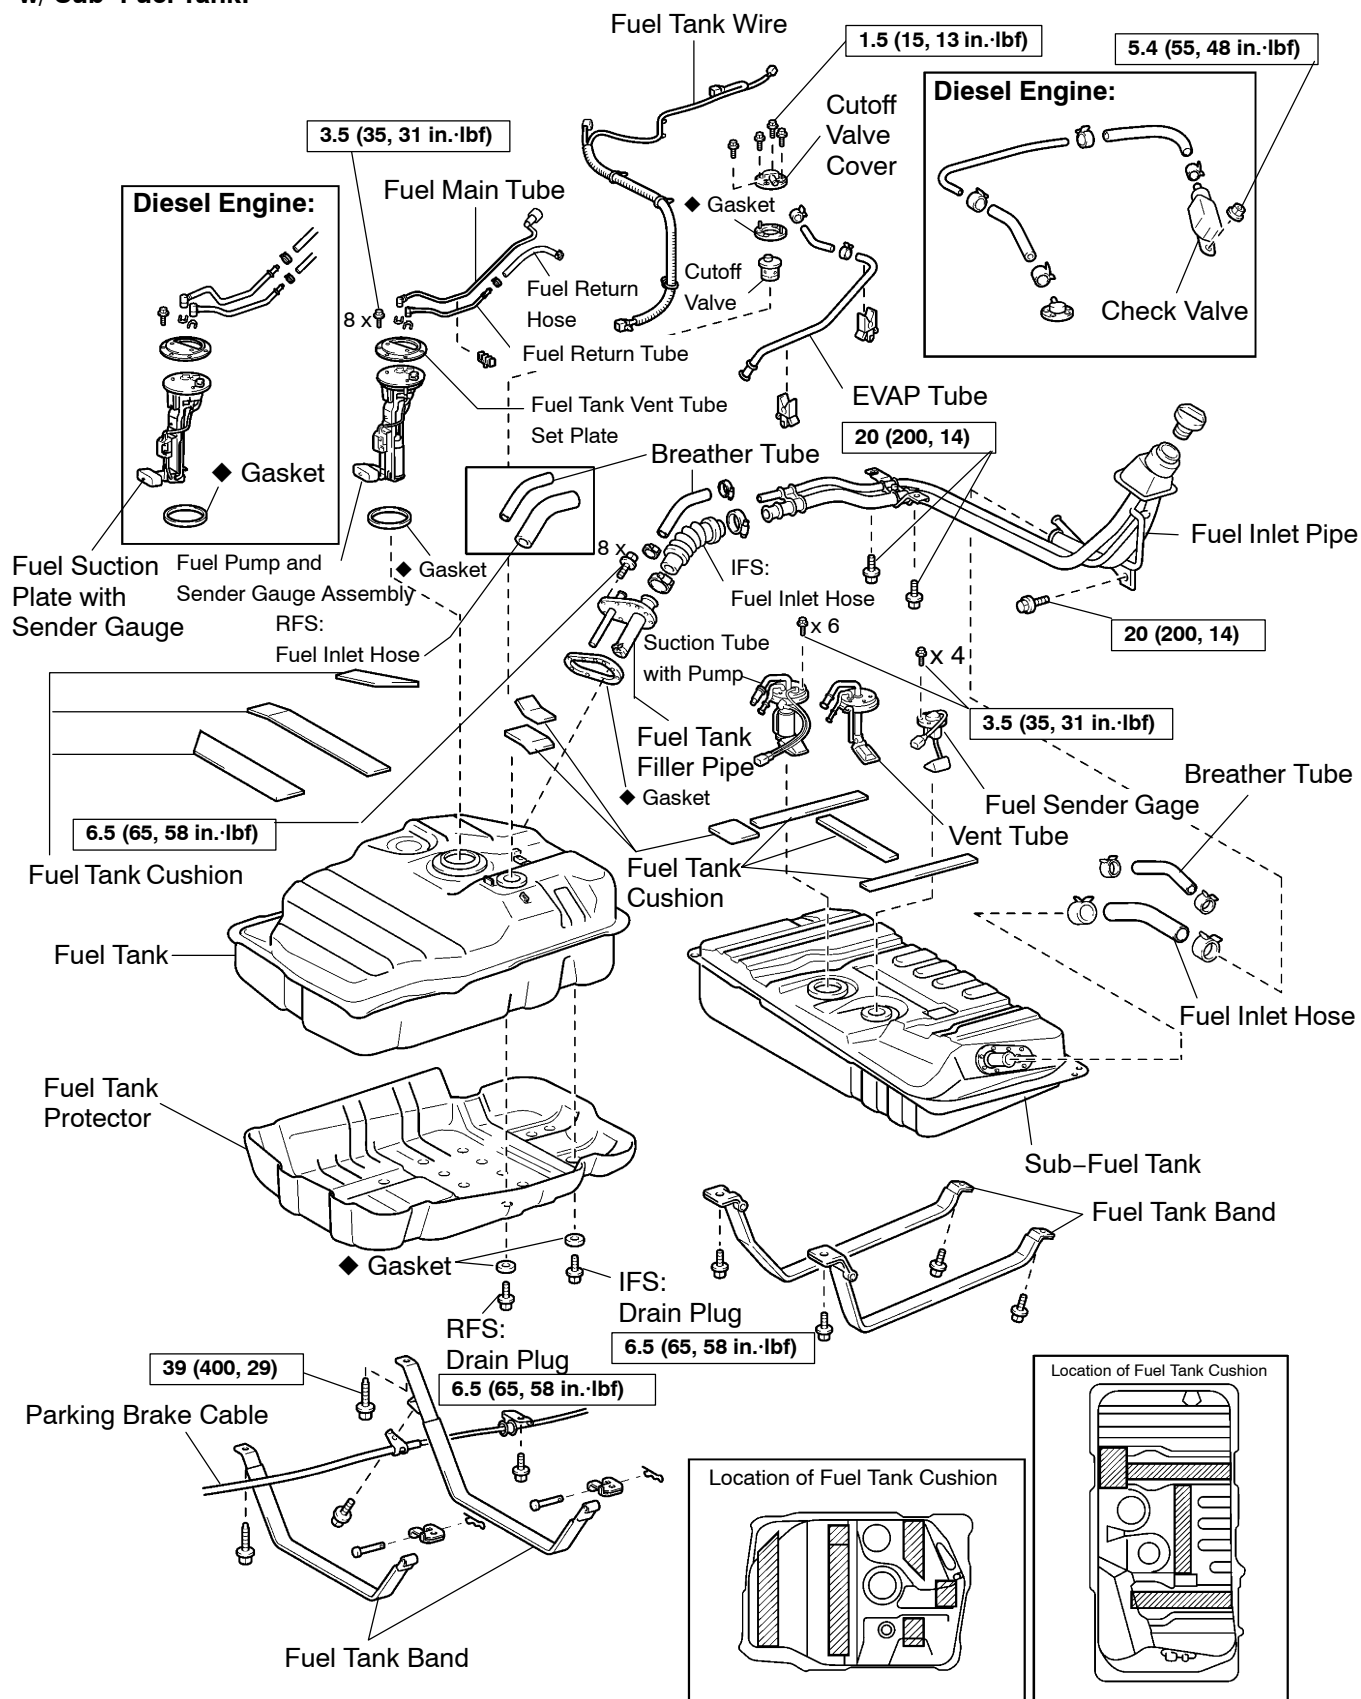

N·m (kgf·cm, ft·lbf) : Specified torque

◆ Non-reusable part