


REMOVAL

1. REMOVE MASTER CYLINDER ([See page BR-16](#))
2. DISCONNECT VACUUM HOSE FROM BRAKE BOOSTER
3. REMOVE COWL SIDE TRIM ([See page BO-124](#))
4. REMOVE LOWER NO. 1 PANEL ([See page BO-124](#))
5. REMOVE NO. 2 HEATER TO REGISTER DUCT ([See page BO-124](#))
6. REMOVE PEDAL, CLIP AND CLEVIS PIN
7. REMOVE BRAKE BOOSTER
 - (a) Remove the clevis from push rod.

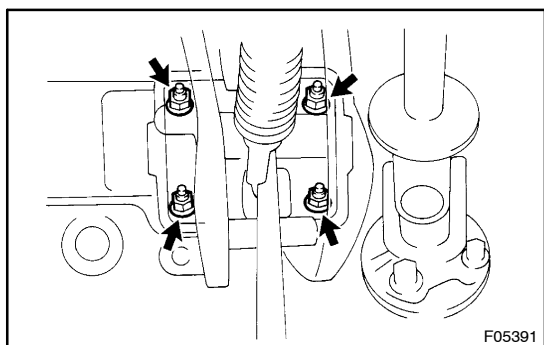

- (b) Remove the 4 booster installation nuts.
- (c) Remove the booster and gasket.