


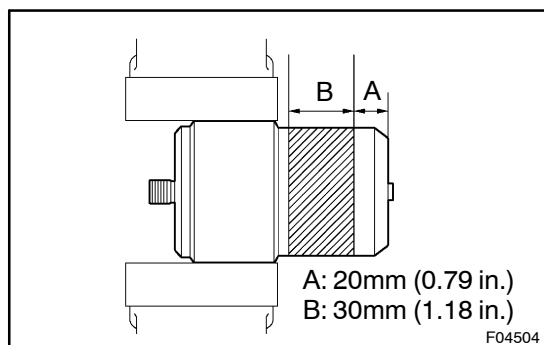

DISPOSAL

DISPOSAL METHOD OF ACCUMULATOR

- (a) Follow the procedures described below and drain the high pressure fluid from the accumulator.
- (b) Place the accumulator in a vise, cover it with a cloth over a saw then cut the accumulator body slowly.

CAUTION:

Do NOT cut at a place except a stretch.

- (c) When the outer body of the accumulator is cut, gas discharges.