


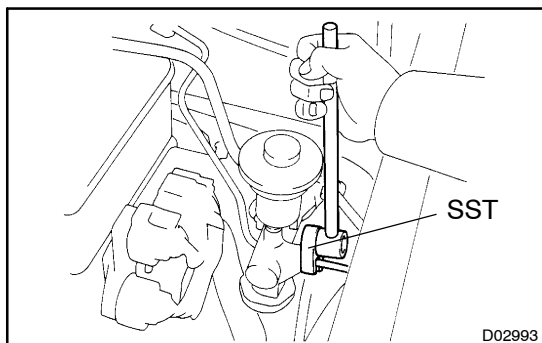

REMOVAL

1. **DRAW OUT FLUID WITH SYRINGE**
2. **DISCONNECT CLUTCH LINE**
 - (a) Using SST, disconnect the line.
 - (b) Use a container to catch the fluid.

SST 09023-00100

Torque: 15 N·m (155 kgf·cm, 11 ft·lbf)
3. **REMOVE CLIP AND CLEVIS PIN**
4. **REMOVE MOUNTING NUTS AND PULL OUT MASTER CYLINDER**

Torque: 13 N·m (130 kgf·cm, 9 ft·lbf)