


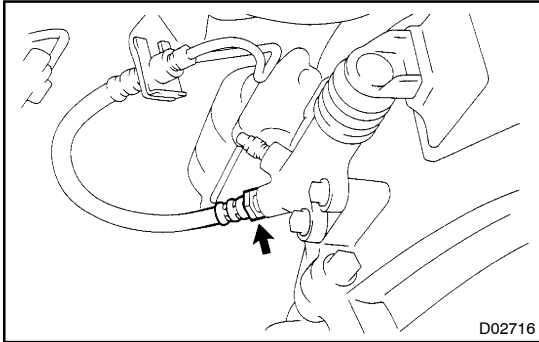

REMOVAL


1. 1FZ-FE, 1HZ Engine:

DISCONNECT CLUTCH HOSE

- (a) Disconnect the hose.

Torque: 15 N·m (155 kgf·cm, 11 ft·lbf)

- (b) Use a container to catch the fluid.

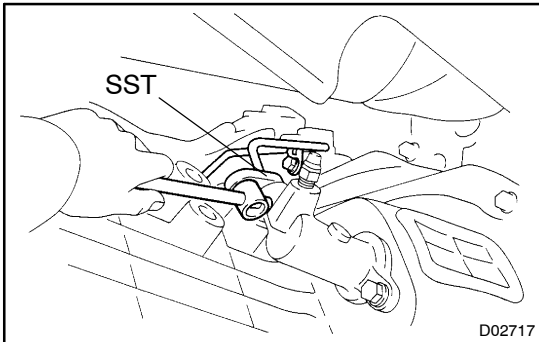

2. 2UZ-FE, 1HD-T, 1HD-FTE Engine:


DISCONNECT CLUTCH LINE

- (a) Using SST, disconnect the line.

SST 09023-00100

Torque: 15 N·m (155 kgf·cm, 11 ft·lbf)

- (b) Use a container to catch the fluid.

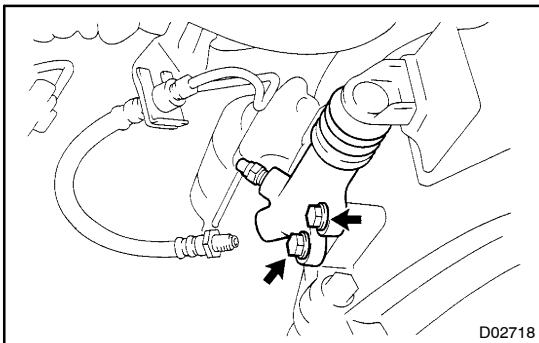

3. REMOVE 2 BOLTS AND PULL OUT RELEASE CYLINDER

Torque: 12 N·m (120 kgf·cm, 9 ft·lbf)