


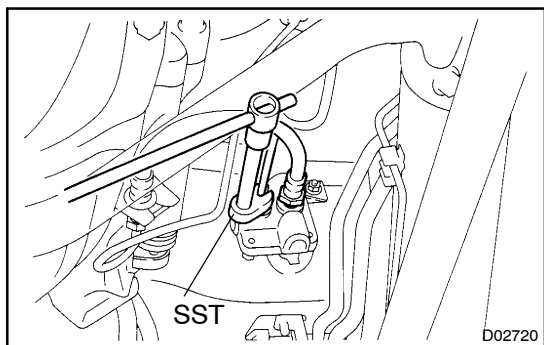

REMOVAL

REMOVE CLUTCH ACCUMULATOR WITH BRACKET


- (a) Using SST, disconnect the clutch line from the accumulator.

SST 09023-00100

Torque: 15 N·m (155 kgf·cm, 11 ft·lbf)

- (b) Disconnect the clutch hose from the accumulator.

Torque: 15 N·m (155 kgf·cm, 11 ft·lbf)

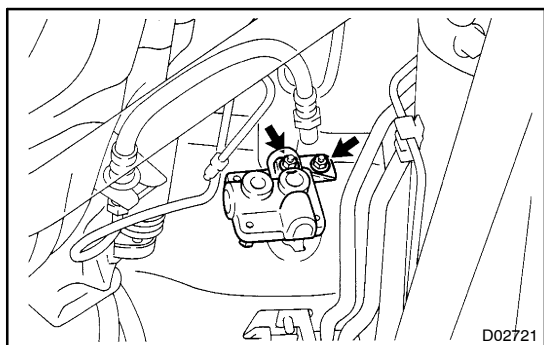

- (c) Remove the 2 nuts, accumulator and bracket.

Torque: 4.9 N·m (50 kgf·cm, 43 in·lbf)