


AUTOMATIC TRANSMISSION (A442F)

HOW TO PROCEED WITH TROUBLESHOOTING

DISQU-01

When using hand-held tester, troubleshoot in accordance with the procedure on the following pages.

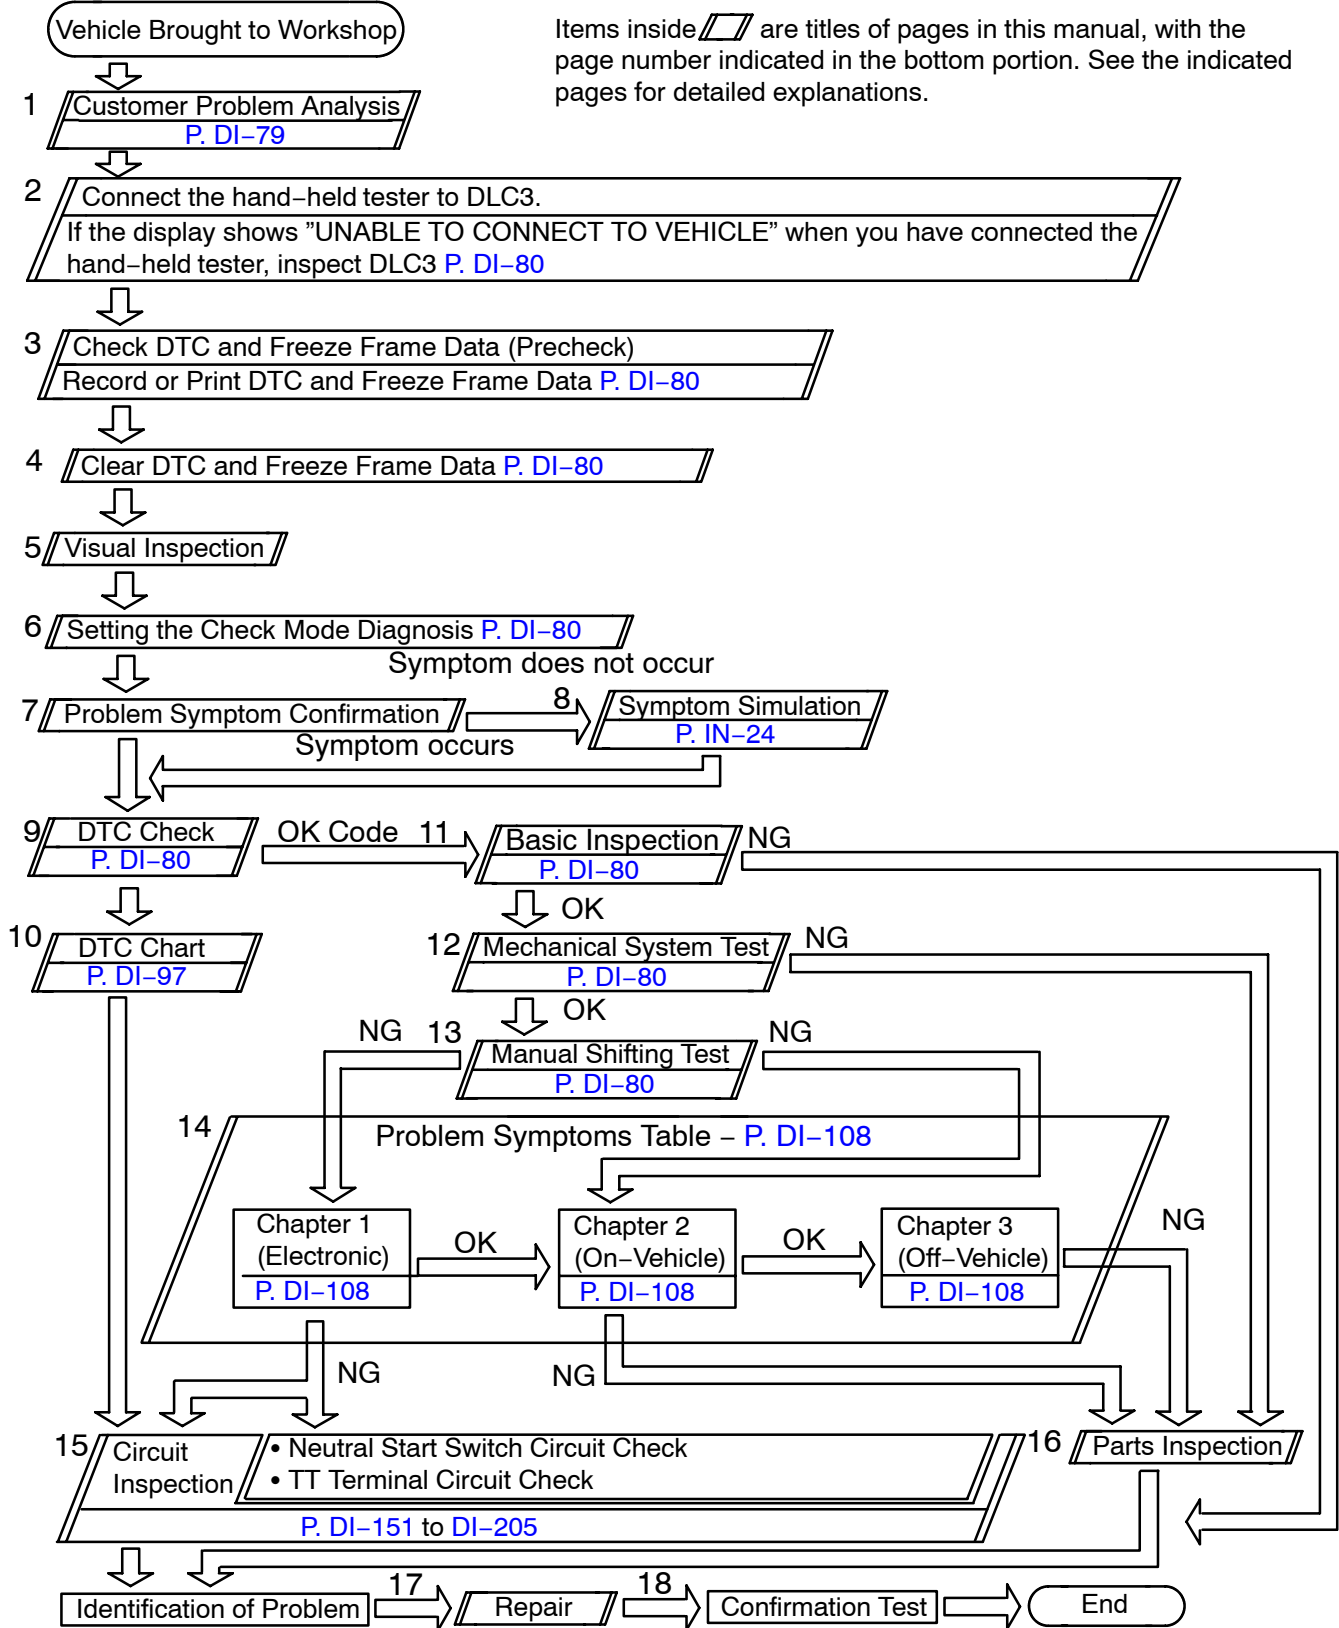

When not using hand-held tester, troubleshoot in accordance with the procedure on the following pages.

