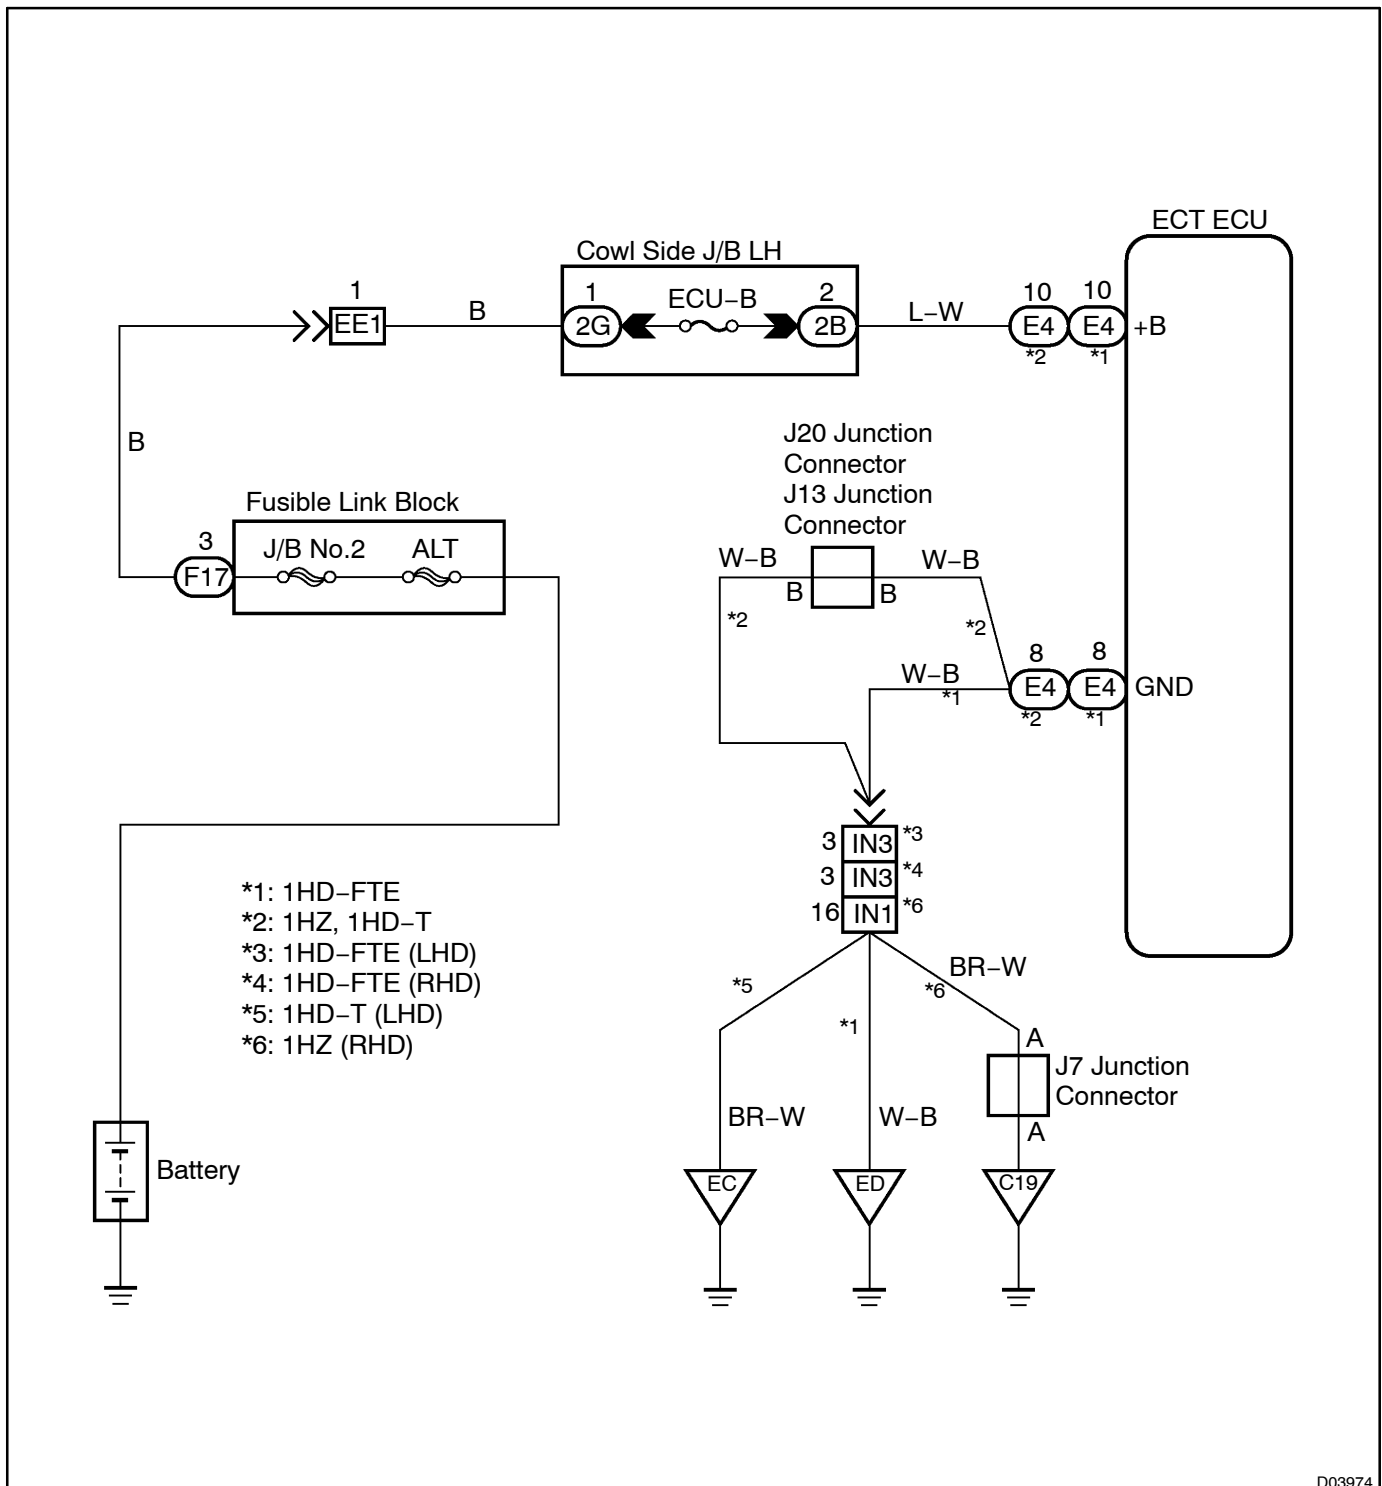


ECT ECU Power Source Circuit

CIRCUIT DESCRIPTION

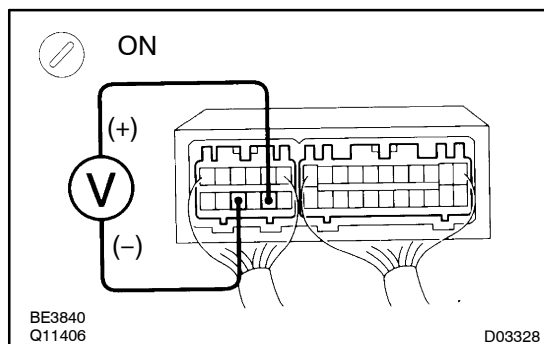
Battery positive voltage is supplied to terminal +B of the ECT ECU even when the ignition switch is OFF for use by the DTC memory.

WIRING DIAGRAM



INSPECTION PROCEDURE

1 Check voltage between terminal +B and GND of ECT ECU connector.

**PREPARATION:**

- (a) Remove the glove compartment door
(See page BO-127).
- (b) Check voltage between terminal +B and GND of ECT ECU.

CHECK:

Check voltage between terminal +B and GND of ECT ECU.

OK:

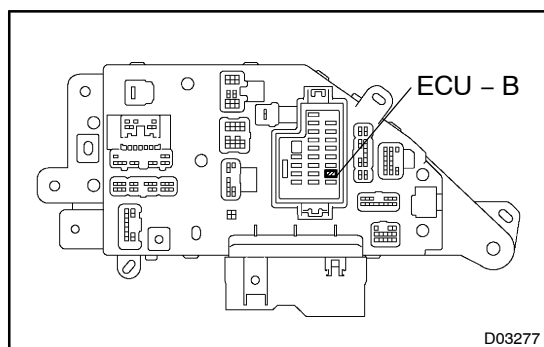
9.0 – 14 V

OK

Check and replace ECT ECU
(See page IN-35).

NG

2 Check ECU-B fuse.

**PREPARATION:**

Remove the ECU-B fuse.

CHECK:

Check continuity of ECU-B fuse.

OK:

Continuity

NG

Check for short in all harness and components
connected to ECU-B fuse.

OK

Check and repair harness or connector between battery, ECU-B fuse and ECT ECU
(See page IN-35).