


Tc Terminal Circuit

CIRCUIT DESCRIPTION


Connecting terminals Tc and CG of the DLC3 causes the ECU to display the DTC by flashing the height control OFF indicator light.

WIRING DIAGRAM

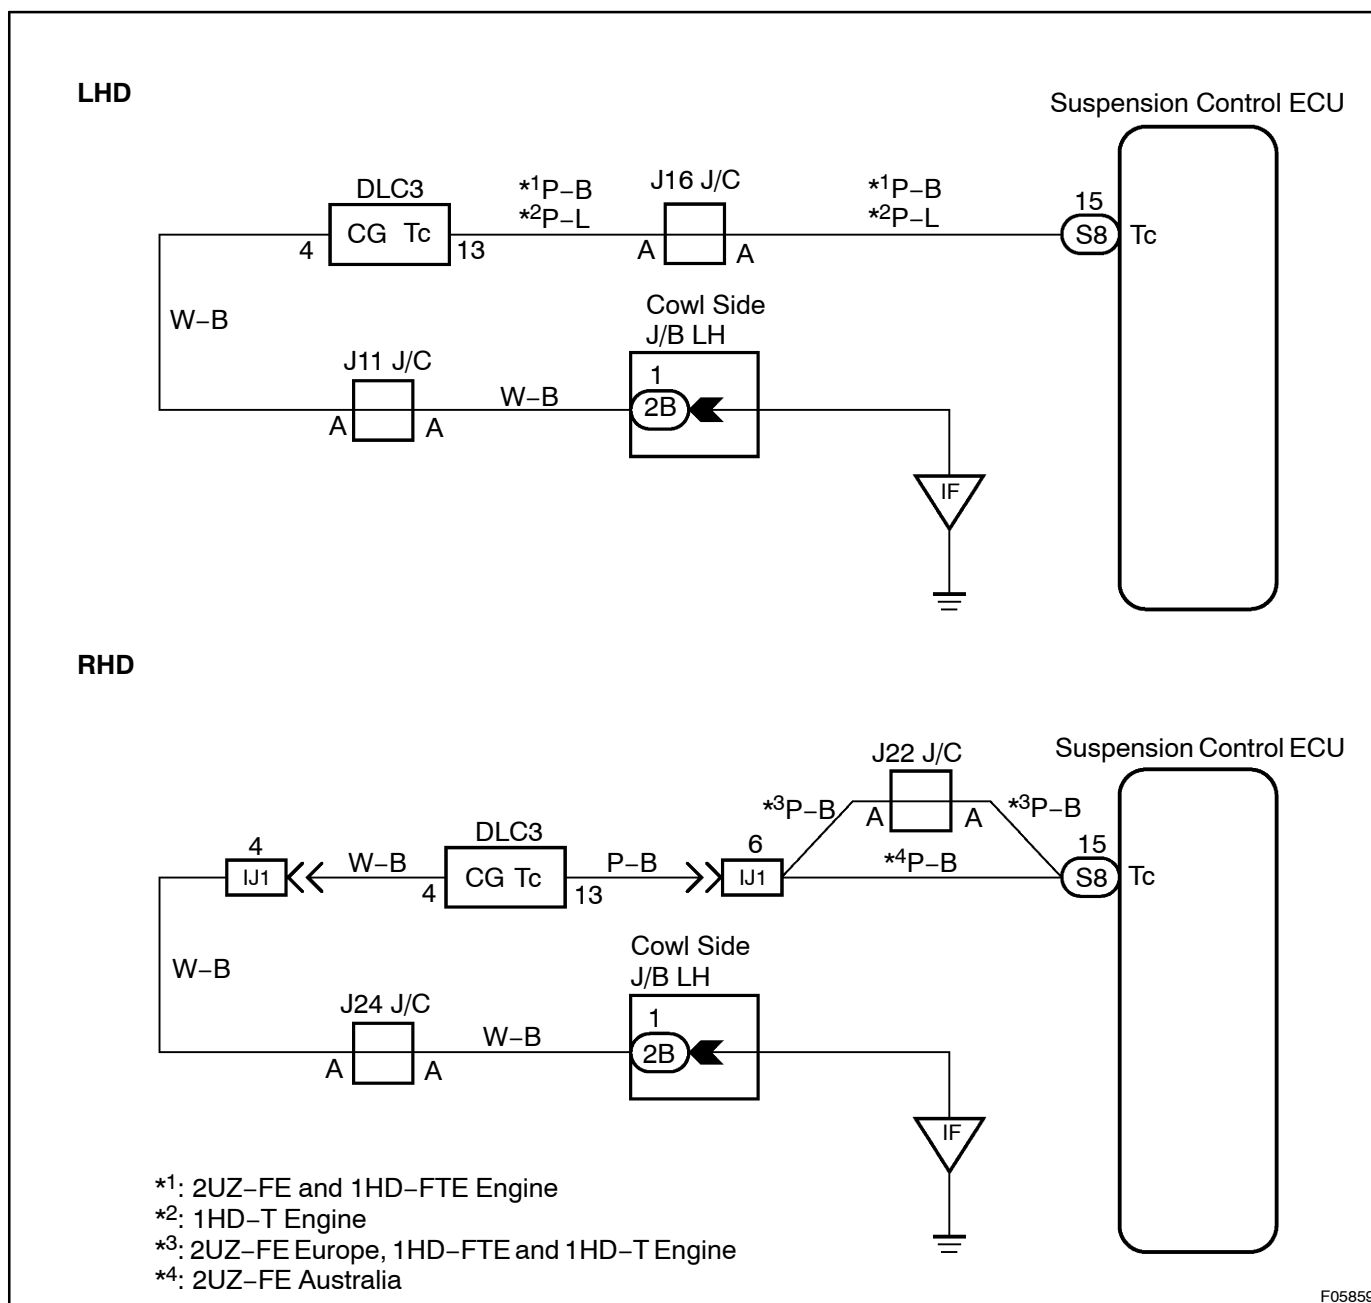

INSPECTION PROCEDURE

1 Check voltage between terminals Tc and CG of DLC3.

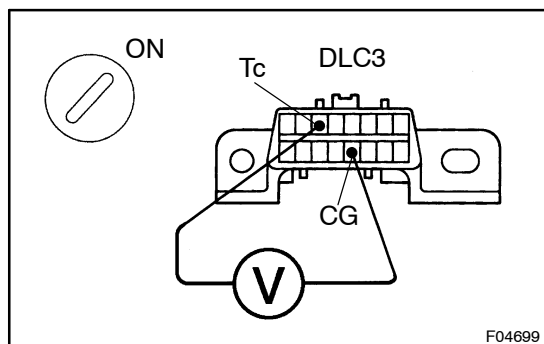

CHECK:

- Turn the ignition switch ON.
- Measure the voltage between terminals Tc and CG of DLC3.

OK:

Voltage: 9 – 14 V

OK

No problem.

NG

2 Check for open and short circuit in harness and connector between suspension control ECU and DLC3, DLC3 and body ground ([See page IN-35](#)).

NG

Repair or replace harness or connector.

OK

Check and replace suspension control ECU.