


Tc Terminal Circuit

CIRCUIT DESCRIPTION

Connecting terminals Tc and C_G of the DLC3 causes the ECU to display the DTC by flashing the ABS warning light.


WIRING DIAGRAM

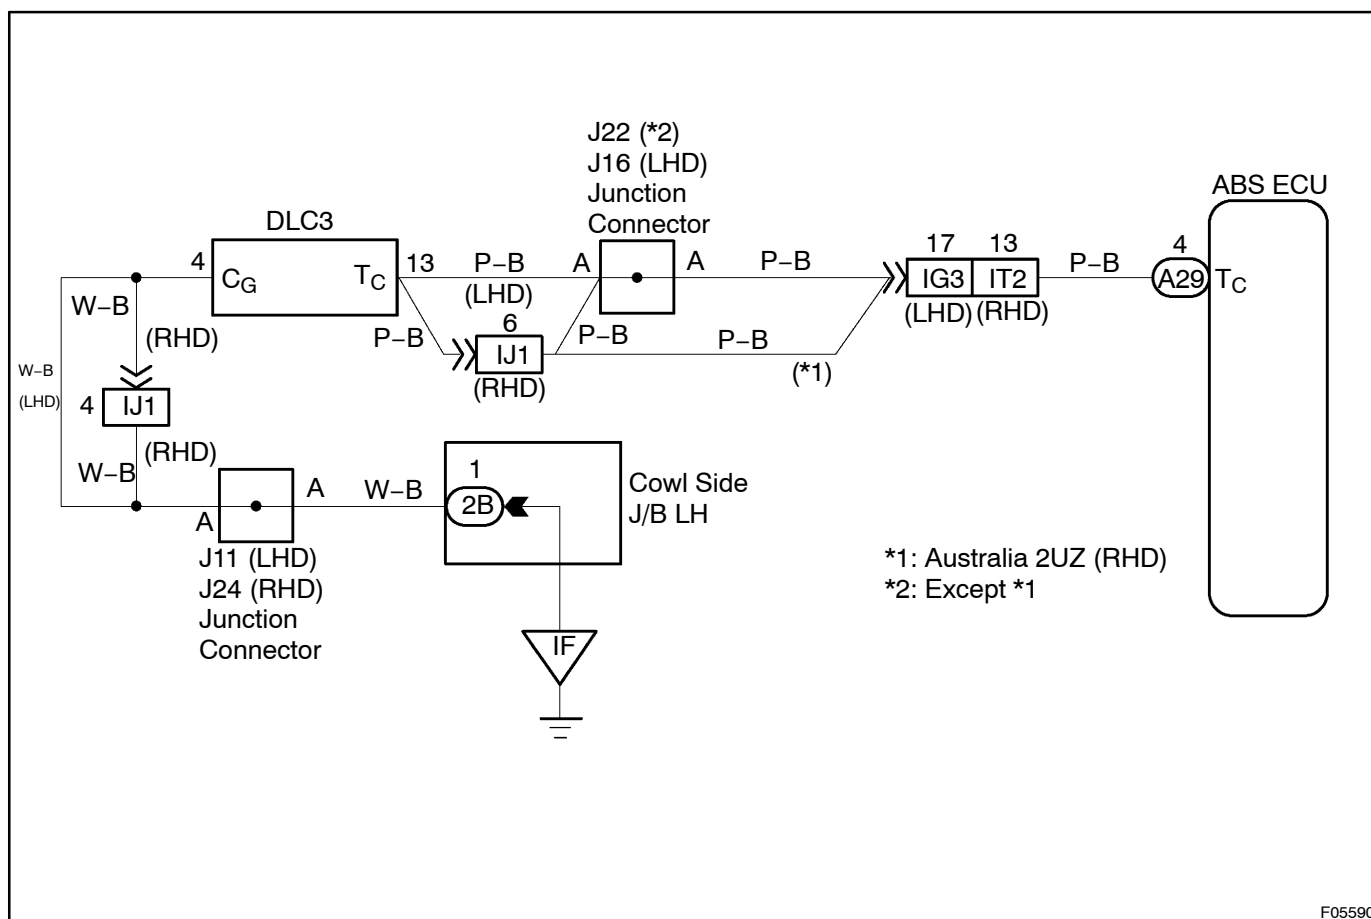

F05590

INSPECTION PROCEDURE

1 Check voltage between terminals Tc and C_G of DLC3.

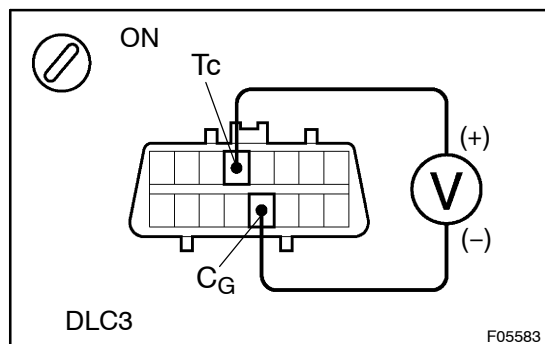

PREPARATION:

Turn ignition switch ON.

CHECK:

Measure voltage between terminal Tc and C_G of DLC3.

OK:

Voltage: 10 – 14 V

OK

If ABS warning light does not blink even after Tc and C_G are connected, the ECU may be defective.

NG

2 IG switch OFF, and check for open and short circuit in harness and connector between ABS ECU and DLC3, DLC3 and body ground (See page IN-24).

NG

Repair or replace harness or connector.

OK

Check and replace ABS ECU.