


DTC	B2620	ECU Power Source Circuit Malfunction
------------	--------------	---


CIRCUIT DESCRIPTION

ECU power source circuit supply the battery positive voltage to tilt and telescopic ECU.

DTC No.	DTC Detecting Condition	Trouble Area
B2620	The condition that the voltage of the ECU power source circuit drop to be 8V or less continues for 10 seconds or more.	• Battery • ECU power source circuit • Tilt and telescopic ECU

WIRING DIAGRAM

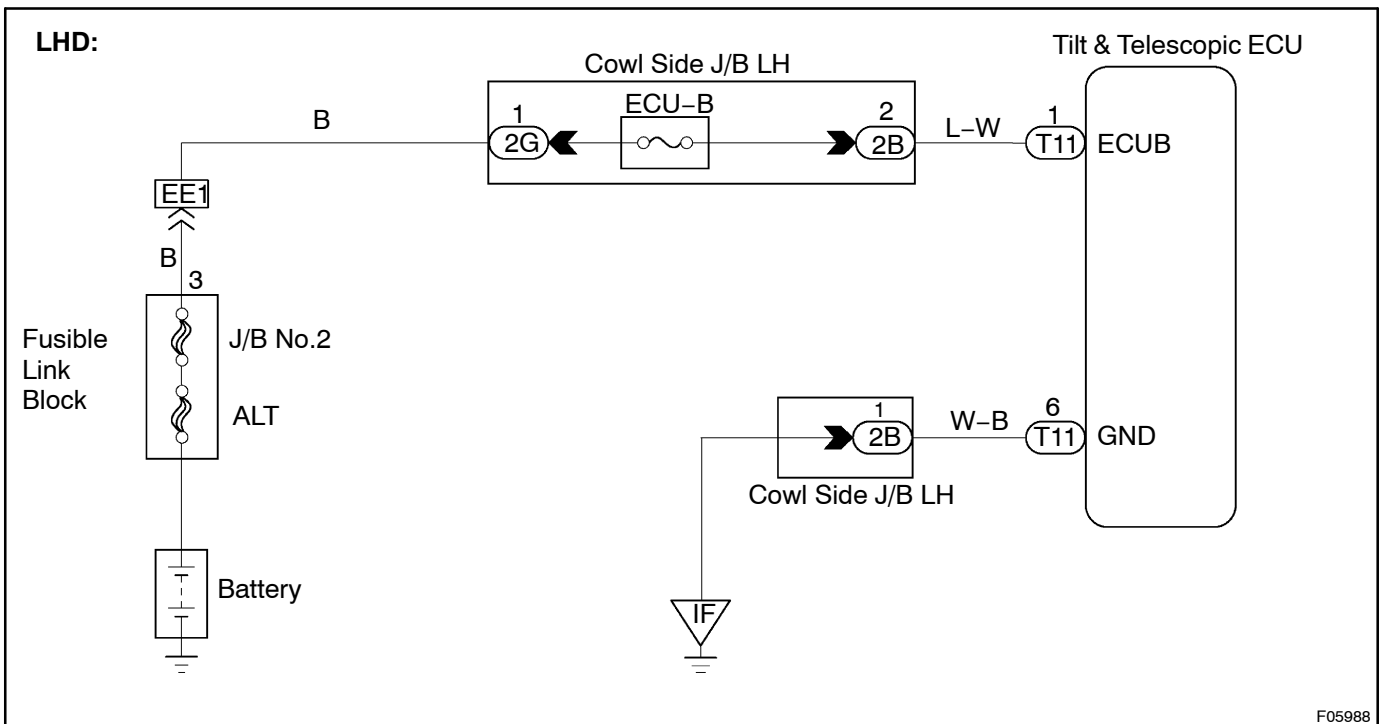

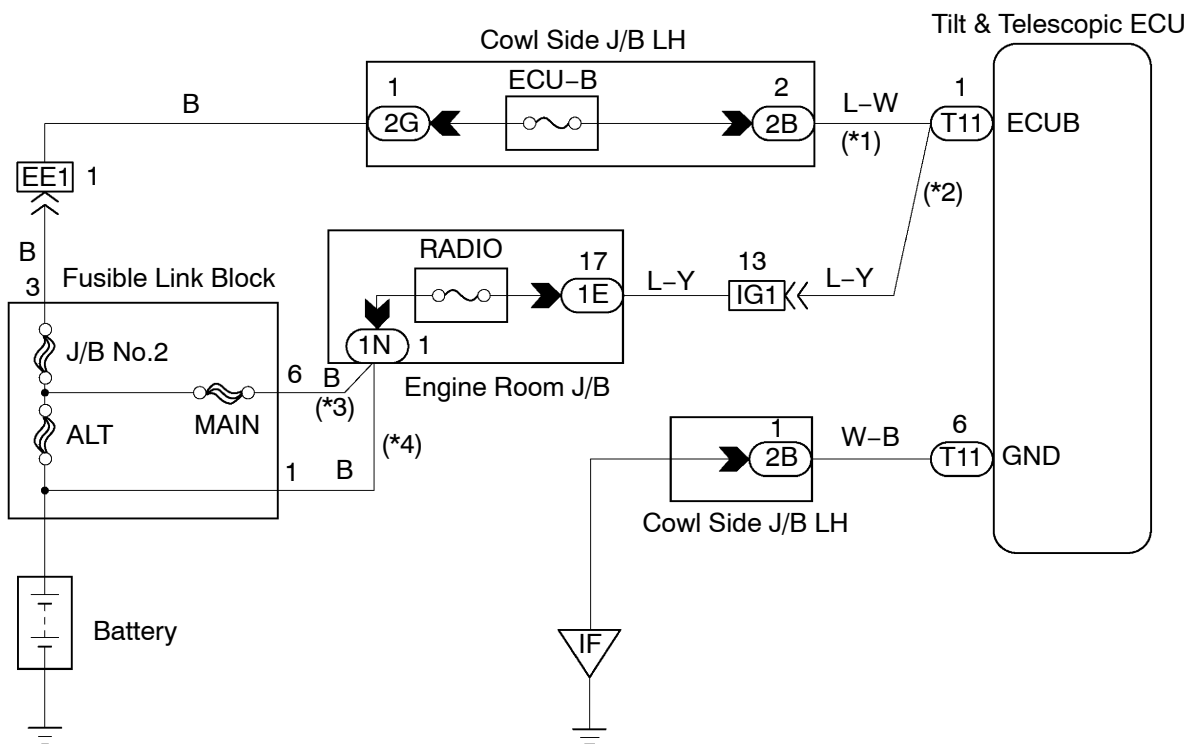RHD:

- *1: Europe, 1HZ and 1HD-T
- *2: Except 1HZ, 1HD-T and Australia
- *3: 1HD-FTE
- *4: Except 1HD-FTE

F05989

INSPECTION PROCEDURE

- | | |
|---|--|
| 1 | Check that the battery positive voltage is 11V or more when engine is stopped. |
|---|--|

NG

Charge or replace battery.

OK

2 Check ECU power source circuit. ([See page DI-429](#))

NG

Repair or replace.

OK

Check and replace the tilt and telescopic ECU.