


Door Courtesy Switch Circuit

CIRCUIT DESCRIPTION


The door courtesy switch goes ON when the door is opened and goes OFF when the door is closed.

WIRING DIAGRAM

LHD Models:

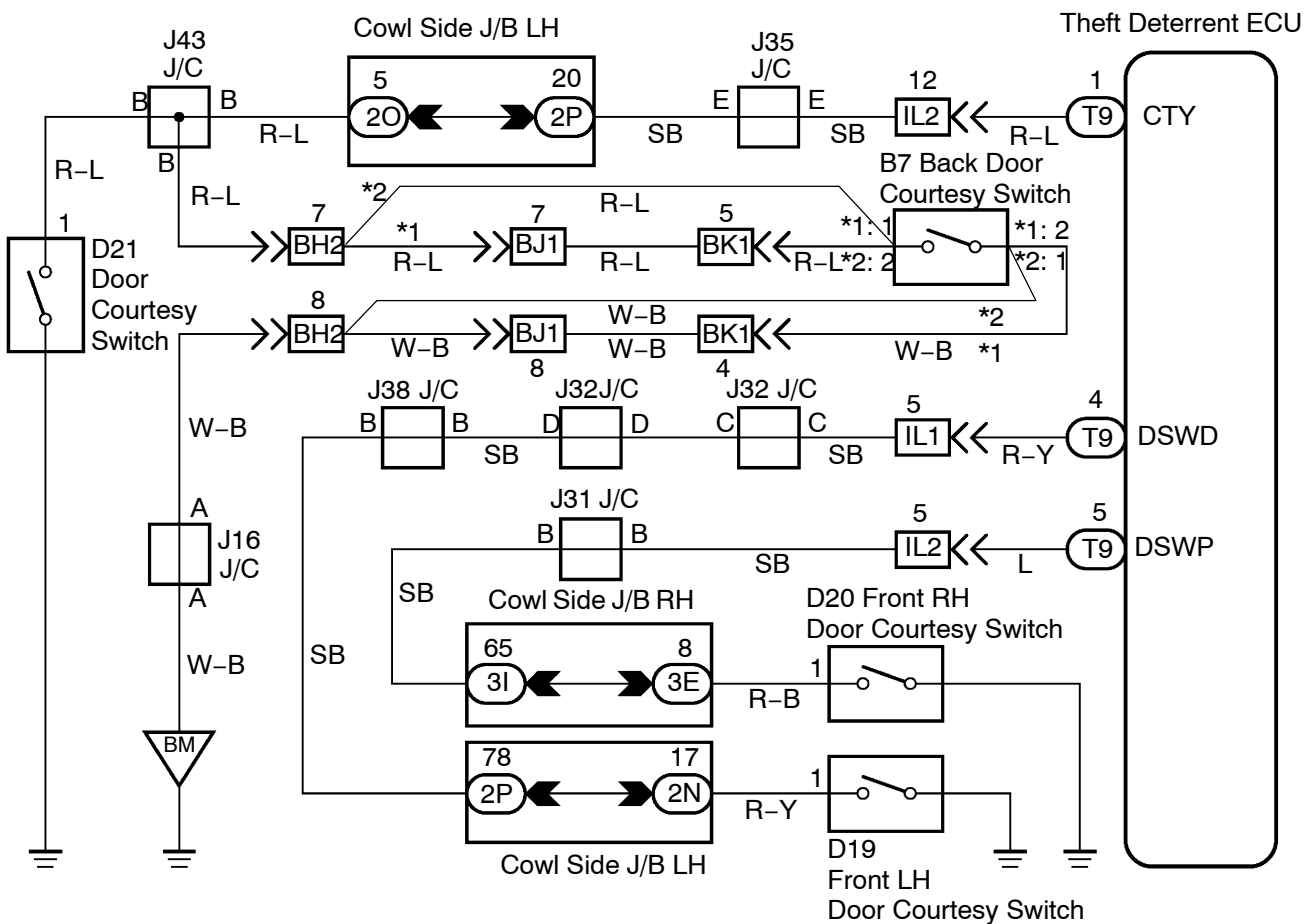

RHD Models:

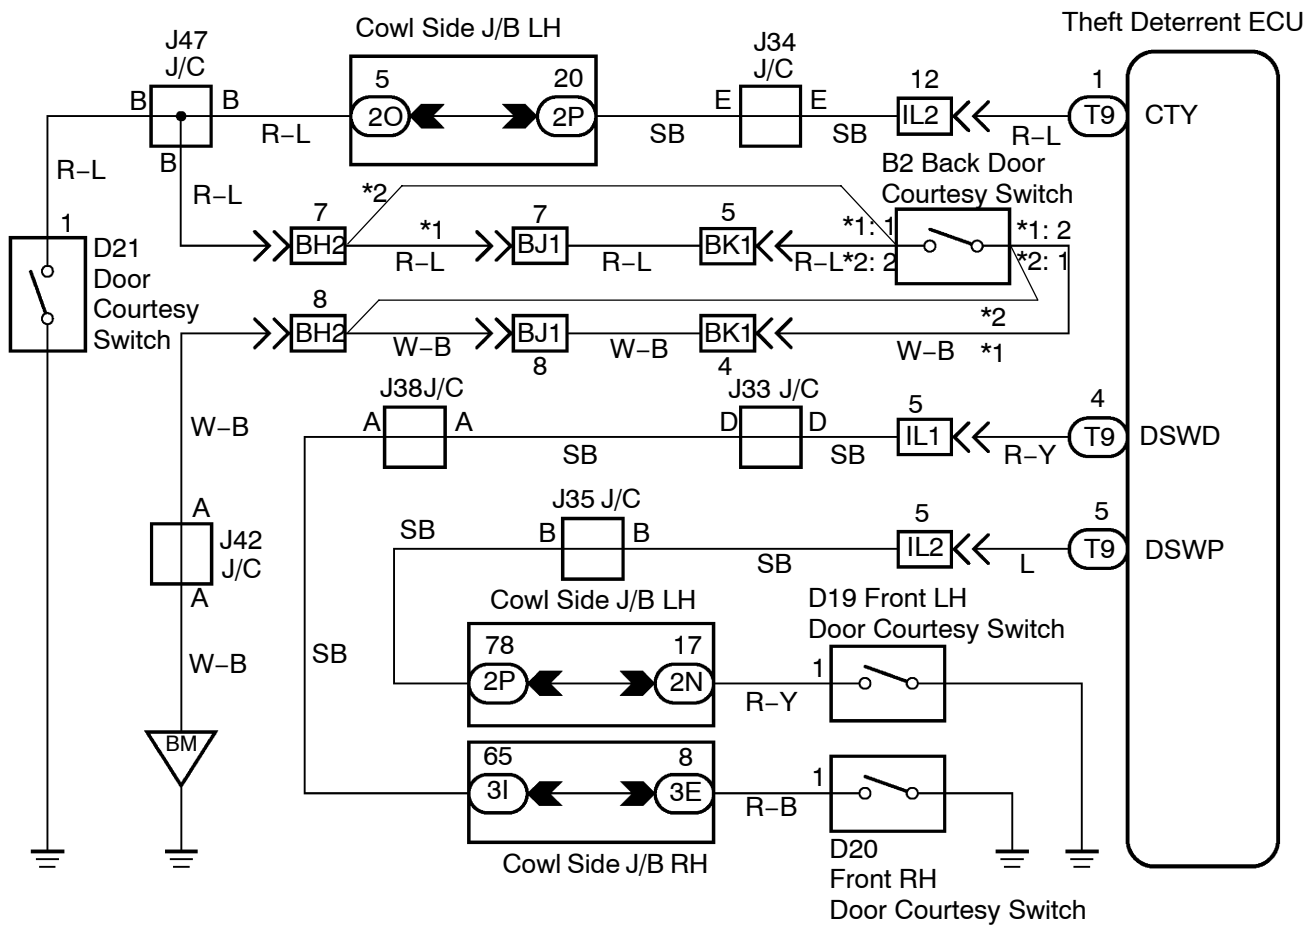

I09131

INSPECTION PROCEDURE

1	Check operation of open door warning light.
---	---

CHECK:

Check that open door warning light comes ON when each door is opened, and goes OFF when all doors are closed.

NG

Check and repair open door warning light circuit.

OK

2	Check for open in harness and connector between theft deterrent ECU and door courtesy switch (See page IN-35).
---	--

NG

Repair or replace harness or connector.

OK

Check and replace theft deterrent ECU.*1
--

*1: When there is a malfunction that the theft deterrent system cannot be set, proceed to the next numbered circuit inspection shown in problem symptom table ([See page DI-637](#)).