


CRUISE MAIN Indicator Light Circuit

CIRCUIT DESCRIPTION

When the cruise control main switch is turned ON, CRUISE MAIN indicator light lights up.

WIRING DIAGRAM

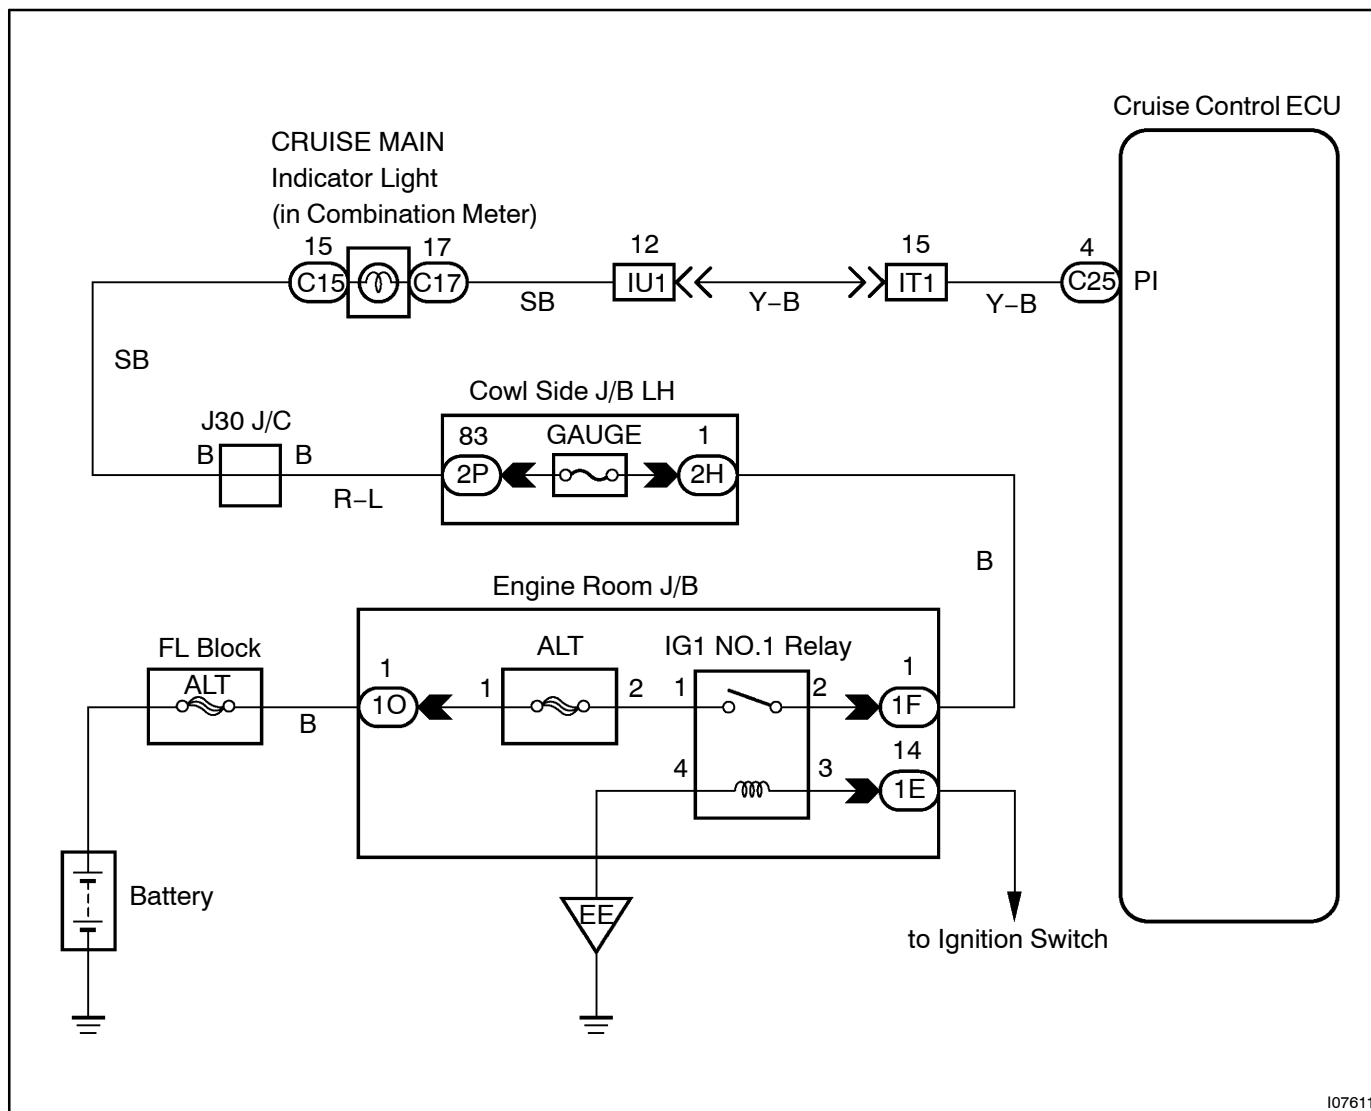


I07611

INSPECTION PROCEDURE

1

Check voltage between terminals PI and GND of cruise control ECU connector.

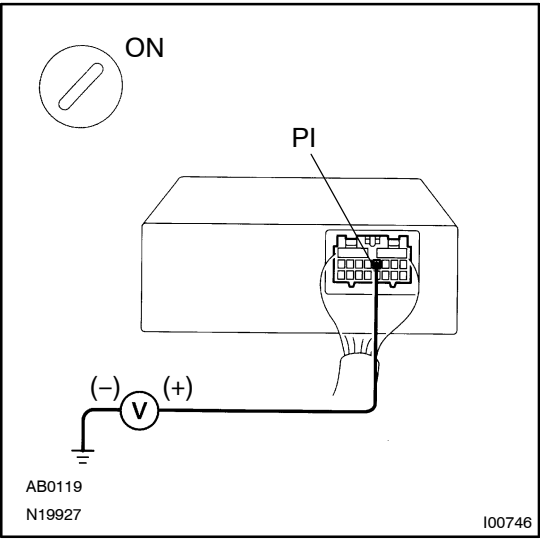

PREPARATION:
Turn ignition switch ON.

CHECK:
Measure voltage between terminals PI and GND of cruise control ECU connector when main switch ON and OFF.

OK:

Switch position	Voltage
OFF	10 - 16 V
ON	Below 1.2 V

OK

Proceed to next circuit inspection shown in problem symptom table (See page DI-682).

NG

2

Check combination meter. (See page BE-2)

NG

Replace combination meter.

OK

Check and replace cruise control ECU (See page IN-35).