


Diagnosis Circuit


CIRCUIT DESCRIPTION

This circuit sends a signal to the ECU that DTC output is required.

WIRING DIAGRAM

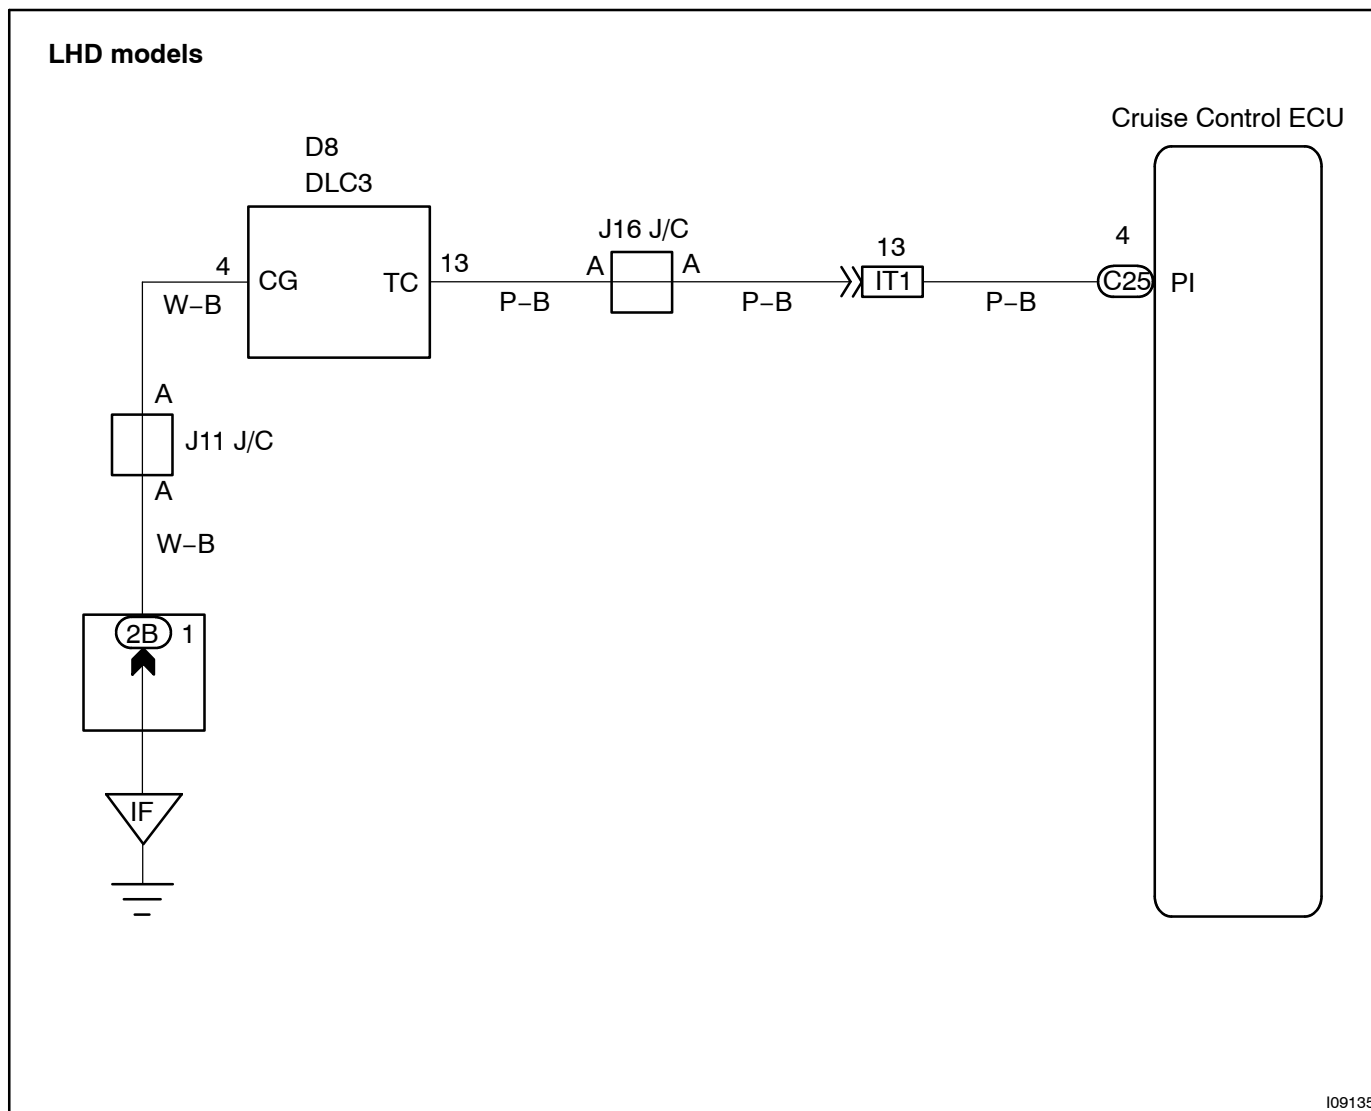


LHD models

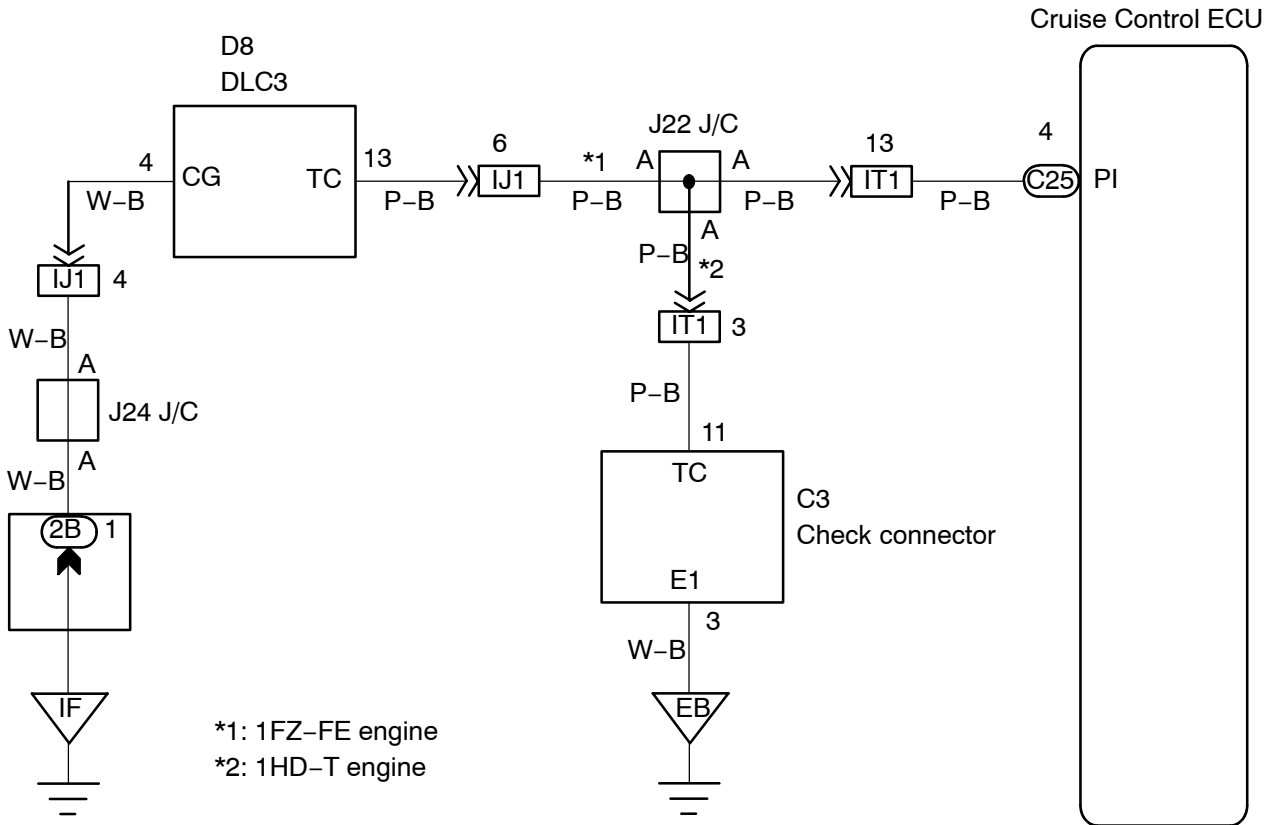

109136

INSPECTION PROCEDURE

1	Check voltage between terminals A/D and E ₁ of DLC3.
---	---

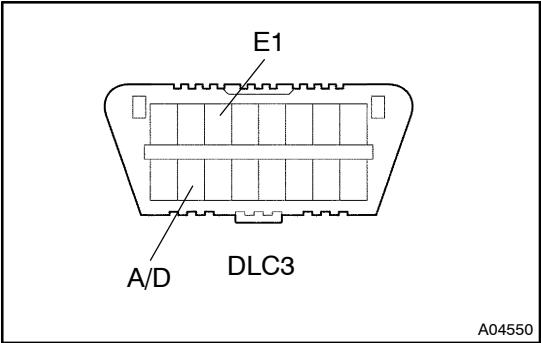

A04550

PREPARATION:


Turn ignition switch ON.

CHECK:


Measure voltage between terminals A/D and E₁ of DLC3.

OK:

Voltage: 10 - 14 V

OK

Proceed to next circuit inspection shown in problem symptom table ([See page DI-682](#)).


NG

2

Check harness and connector between cruise control ECU and DLC3, DLC3 and body ground ([See page IN-35](#)).

NG

Repair or replace harness or connector.

OK

Check and replace cruise control ECU ([See page IN-35](#)).