


CRUISE MAIN Indicator Light Circuit


CIRCUIT DESCRIPTION

When the cruise control main switch is turned ON, CRUISE MAIN indicator light lights up.

WIRING DIAGRAM

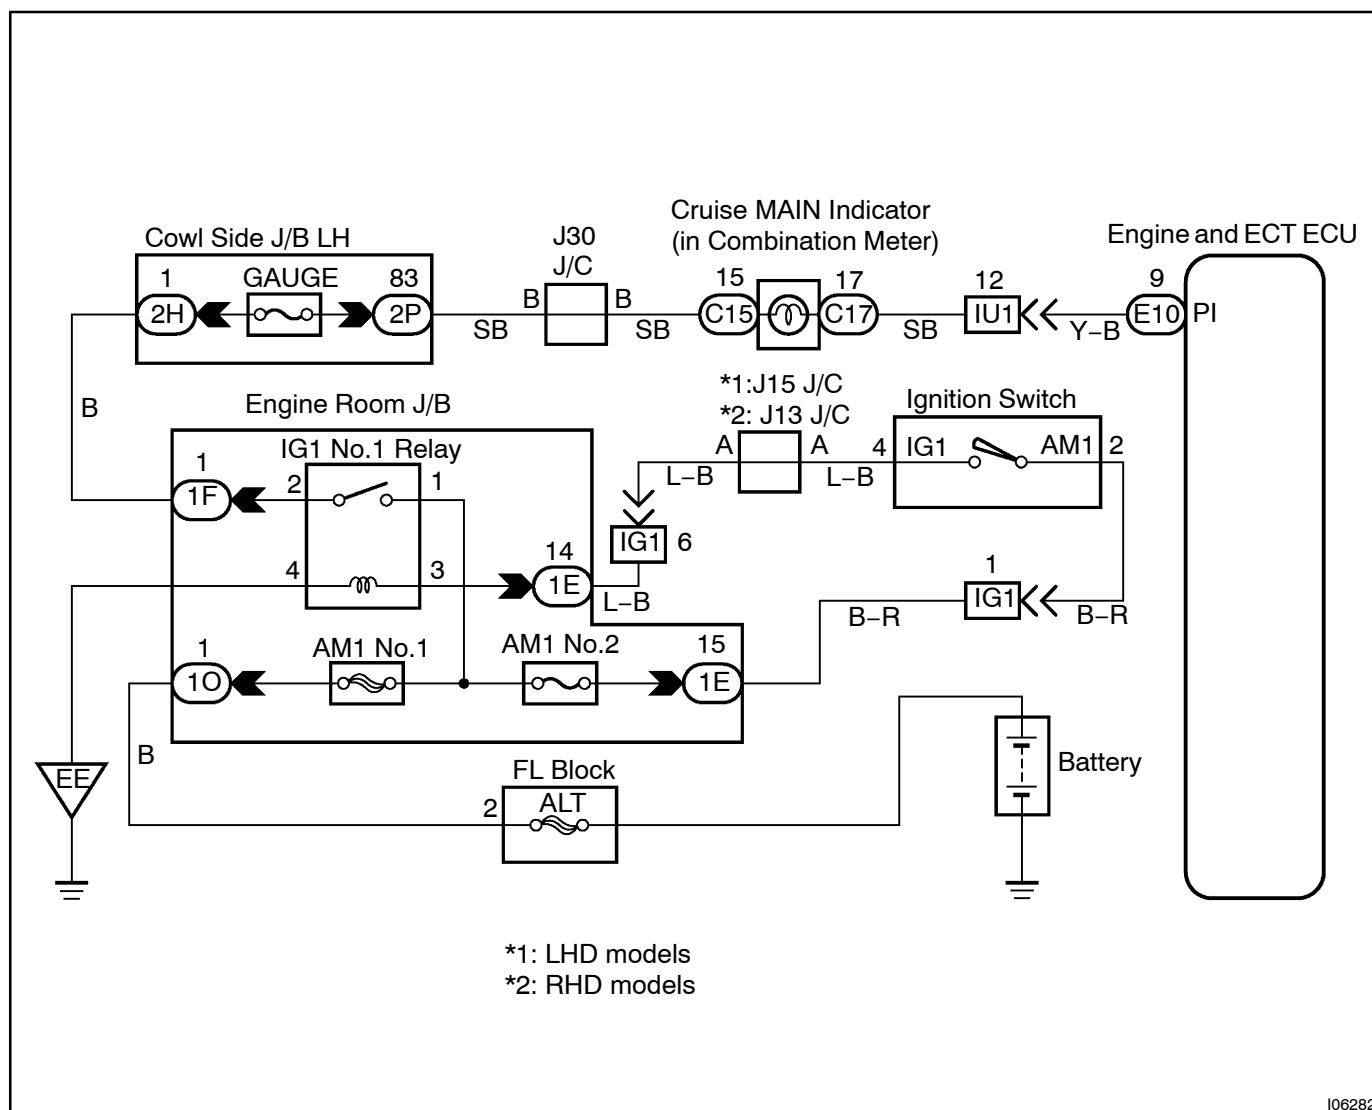

I06282

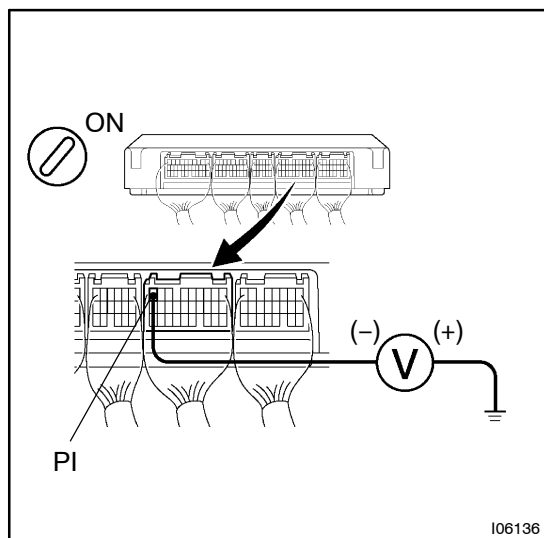INSPECTION PROCEDURE**1 Check voltage between terminals PI and GND of Engine and ECT ECU connector.****PREPARATION:**

Turn ignition switch ON.

CHECK:

Measure voltage between terminals PI and GND of Engine and ECT ECU connector when main switch on and off.

OK:

Switch position	Voltage
OFF	10 - 16 V
ON	Below 1.2 V

OK

Proceed to next circuit inspection shown on problem symptom table ([See page DI-730](#)).

NG**2 Check combination meter ([See page BE-71](#)).****NG**

Replace combination meter.

OK

Check and replace Engine and ECT ECU ([See page IN-35](#)).