


Door lock control switch circuit

CIRCUIT DESCRIPTION


Door lock control switch circuit can be checked using DTC check. ([Refer to DI-839](#))

WIRING DIAGRAM

LHD Models:

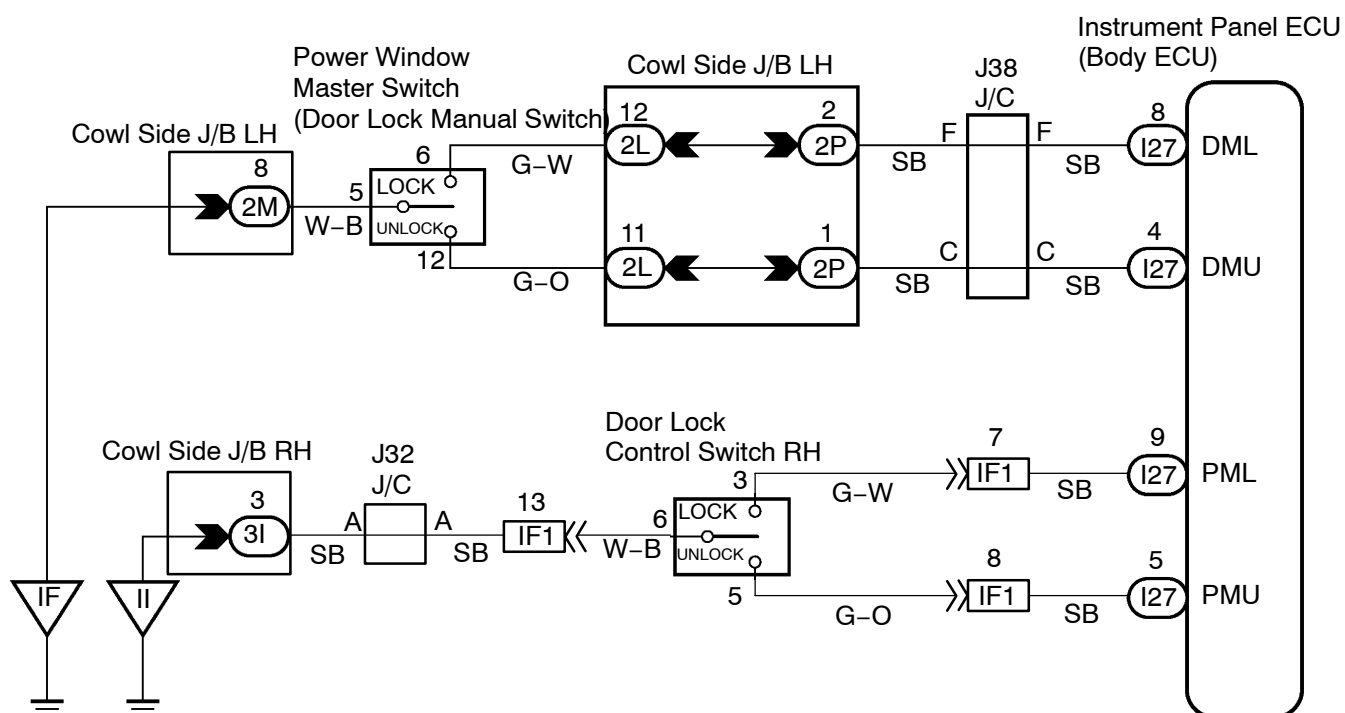

I09101

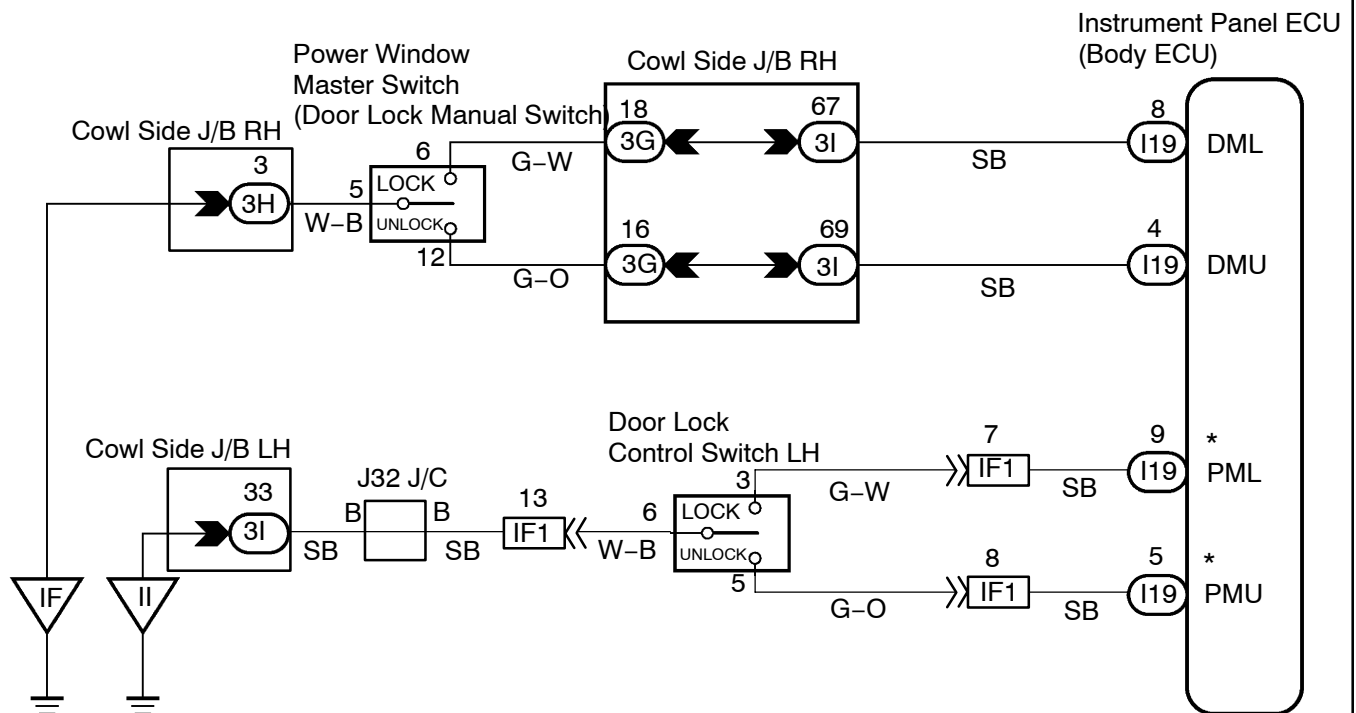RHD Models:

*: Except Europe w/o Power window

I09132

INSPECTION PROCEDURE

- | | |
|---|---|
| 1 | Check the door lock control switch. (See page BE-111) |
|---|---|

NG

Replace the door lock control switch.

OK

- | | |
|---|--|
| 2 | Check wireharness and connector between door lock control switch and Body ECU. |
|---|--|

NG

Repair or replace wireharness or connector.

OK

- | | |
|---|--|
| 3 | Check wireharness and connector between door lock control switch and power window master switch. |
|---|--|

NG

Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table.
(See page DI-773)