


Door courtesy switch circuit


CIRCUIT DESCRIPTION

The door courtesy switch goes on when the door is opened and goes off when door is closed.

WIRING DIAGRAM

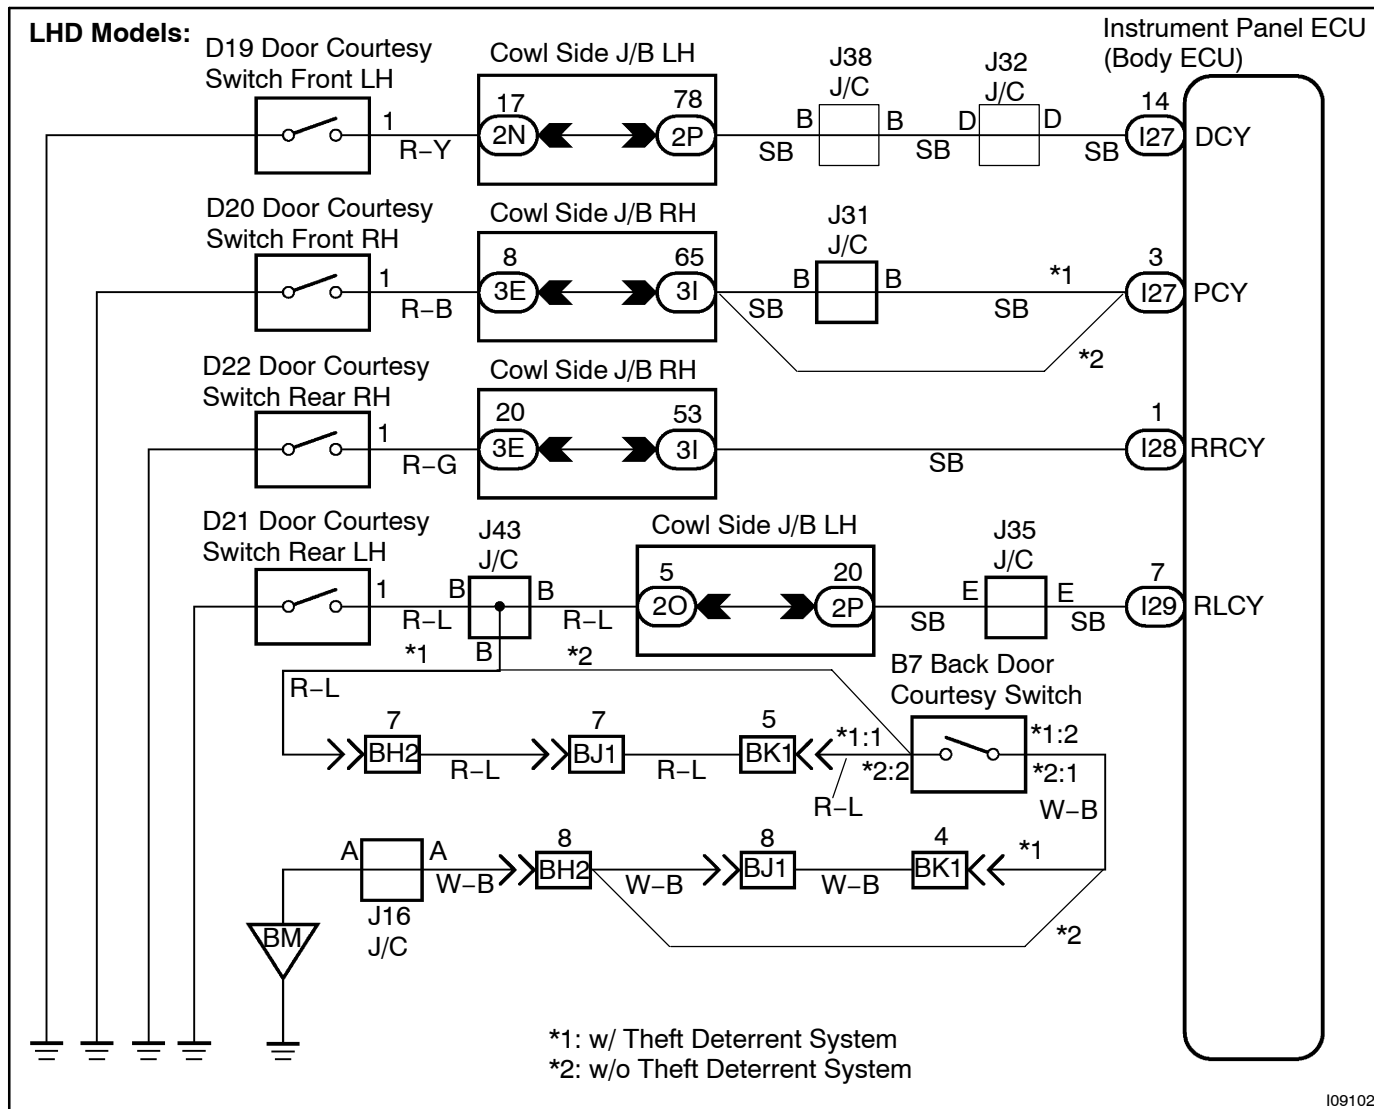

I09102

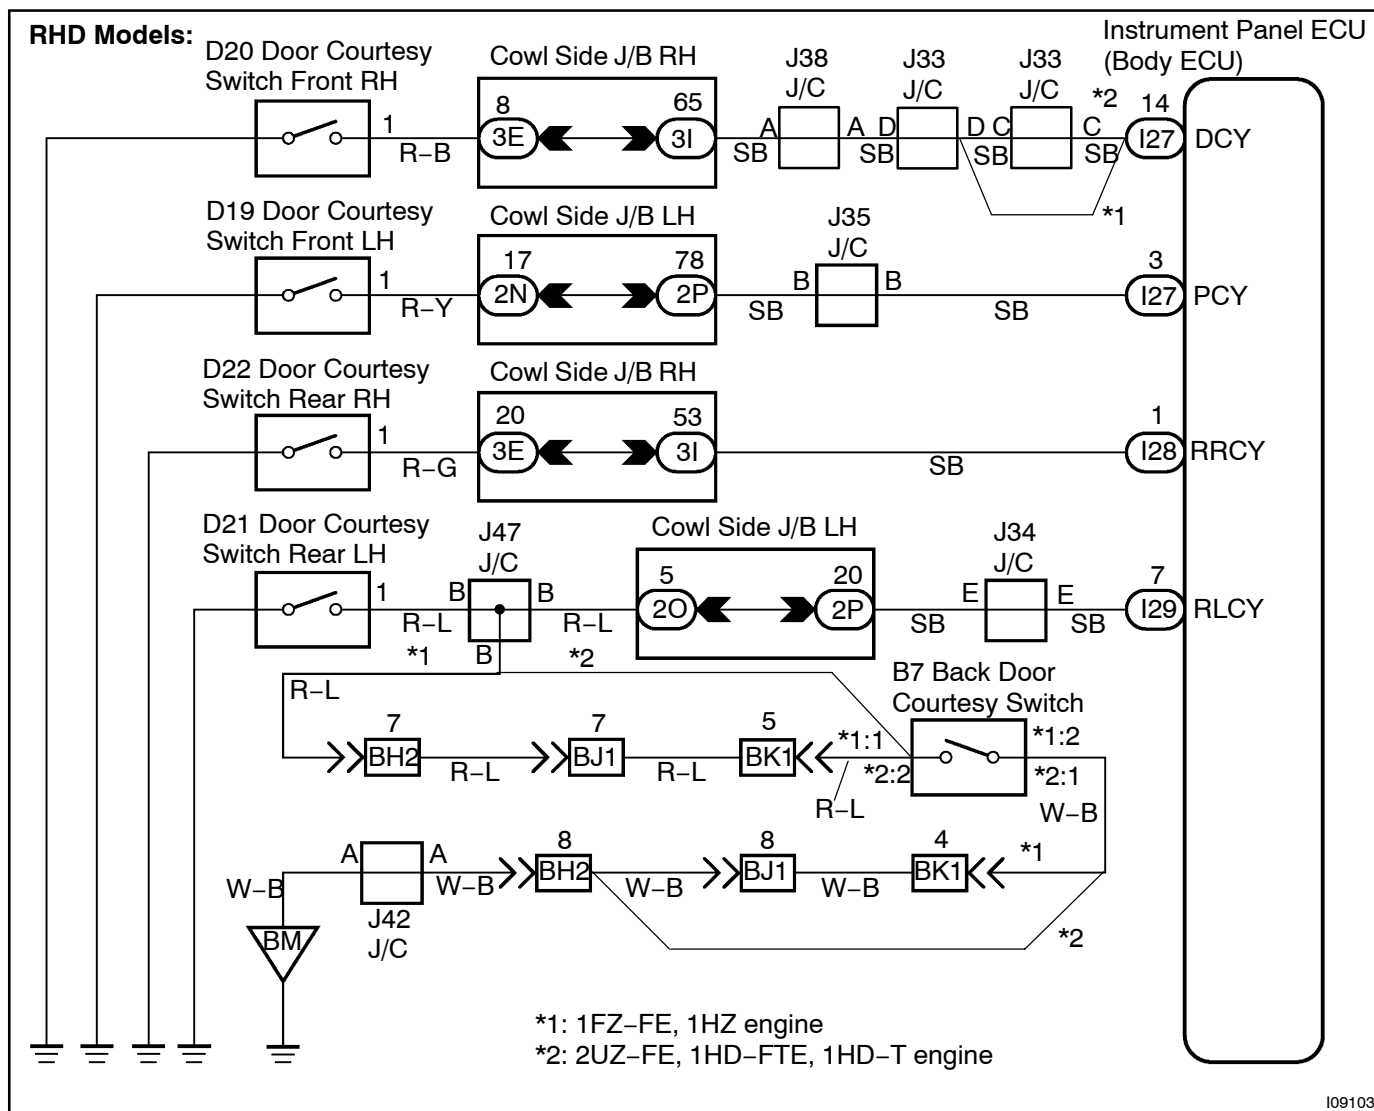

INSPECTION PROCEDURE

- 1 Check courtesy switch. (See page BE-49)

NG

Replace the courtesy switch.

OK

2**Check wireharness and connector between courtesy light and body ECU, courtesy switch and body ECU.****NG****Repair or replace wireharness or connector.****OK****Proceed to next circuit inspection shown on
problem symptoms table.
([See page DI-773](#))**