
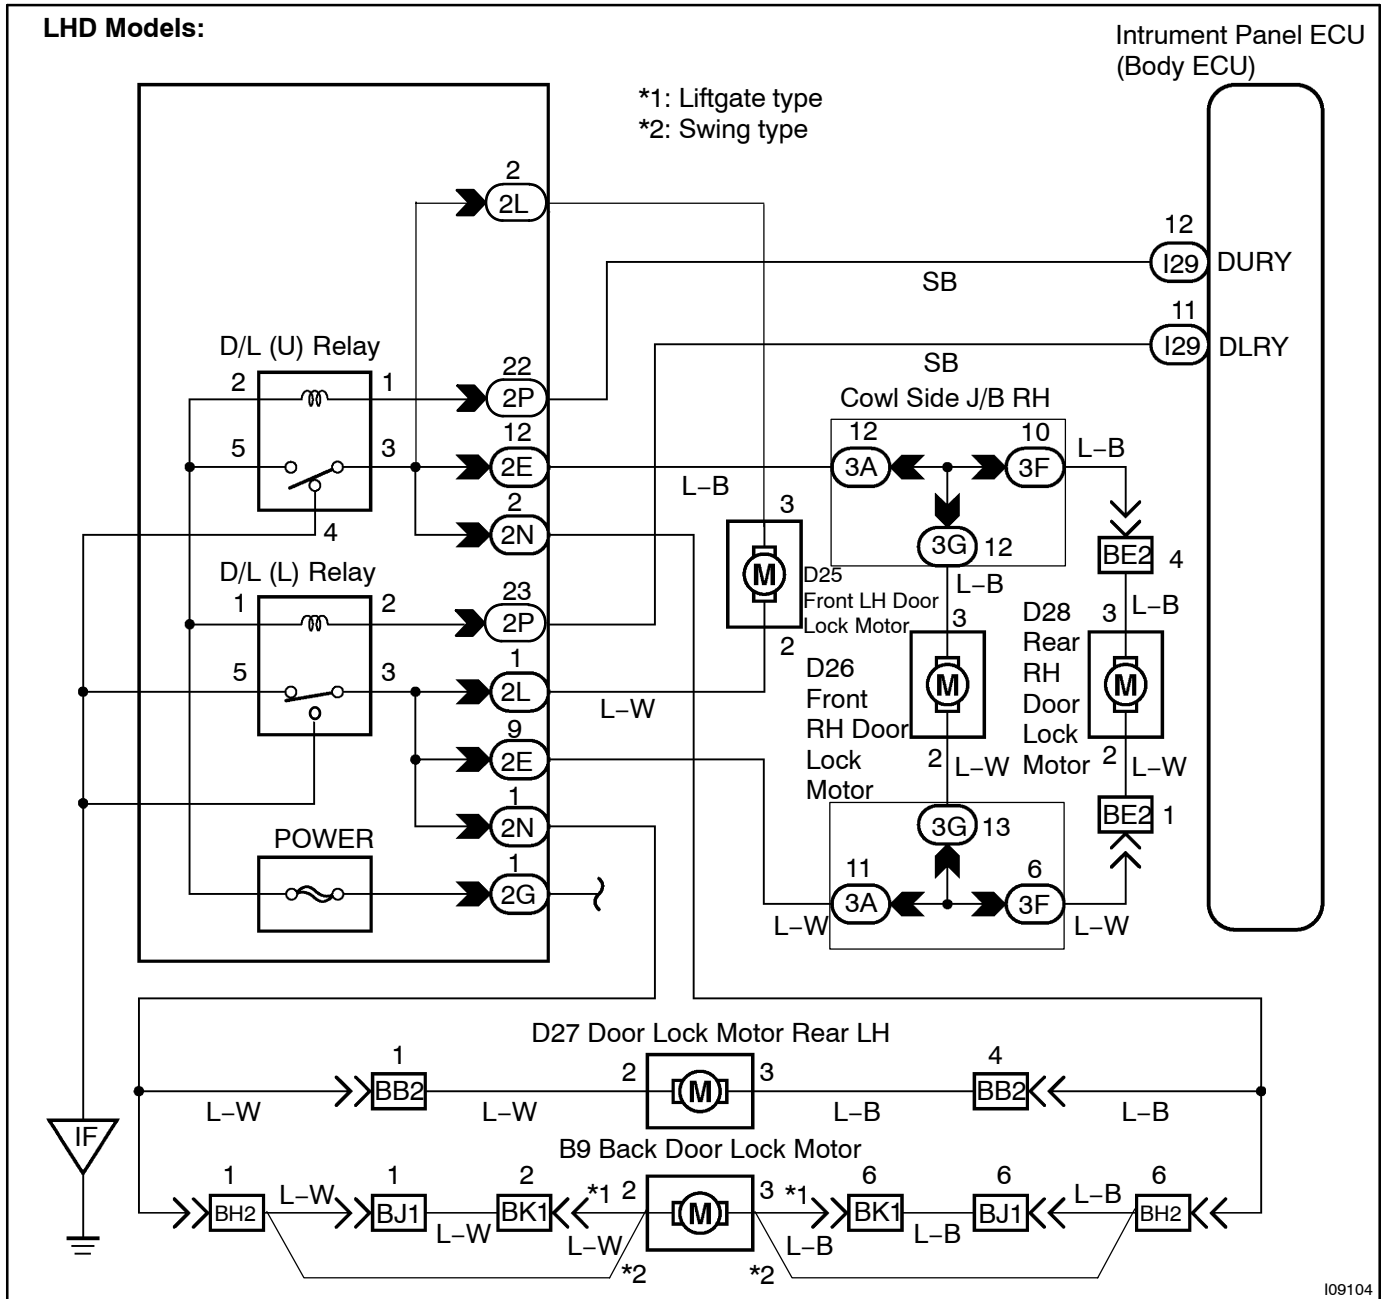


Door lock motor and relay circuit

WIRING DIAGRAM

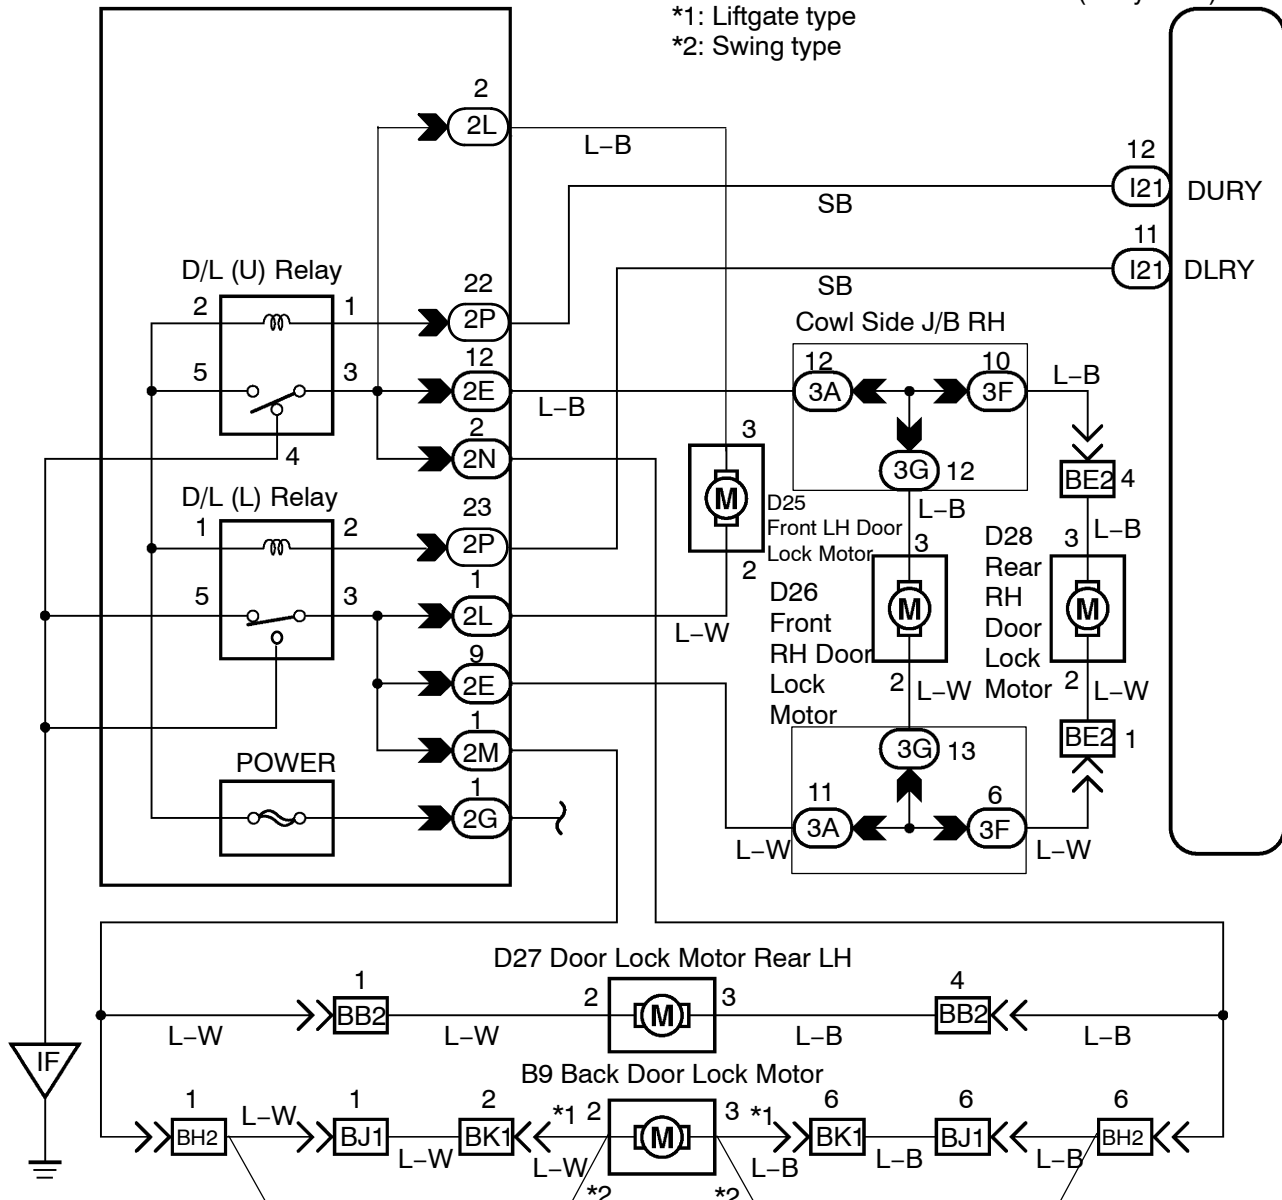

RHD Models:Instrument Panel ECU
(Body ECU)*1: Liftgate type
*2: Swing type

I09104

INSPECTION PROCEDURE

- 1 Check door lock relay. (See page BE-111)

NG

Replace the door lock relay.

OK

2 Check door lock motor. ([See page BE-111](#))

NG

Replace the door lock motor.

OK

3 Check wireharness and connector between door lock motor and body ECU.

NG

Repair or replace wireharness or connector.

OK

**Proceed to next circuit inspection shown on
problem symptoms table.
([See page DI-773](#))**