


Memory switch circuit (W/ memory)


WIRING DIAGRAM

LHD Models

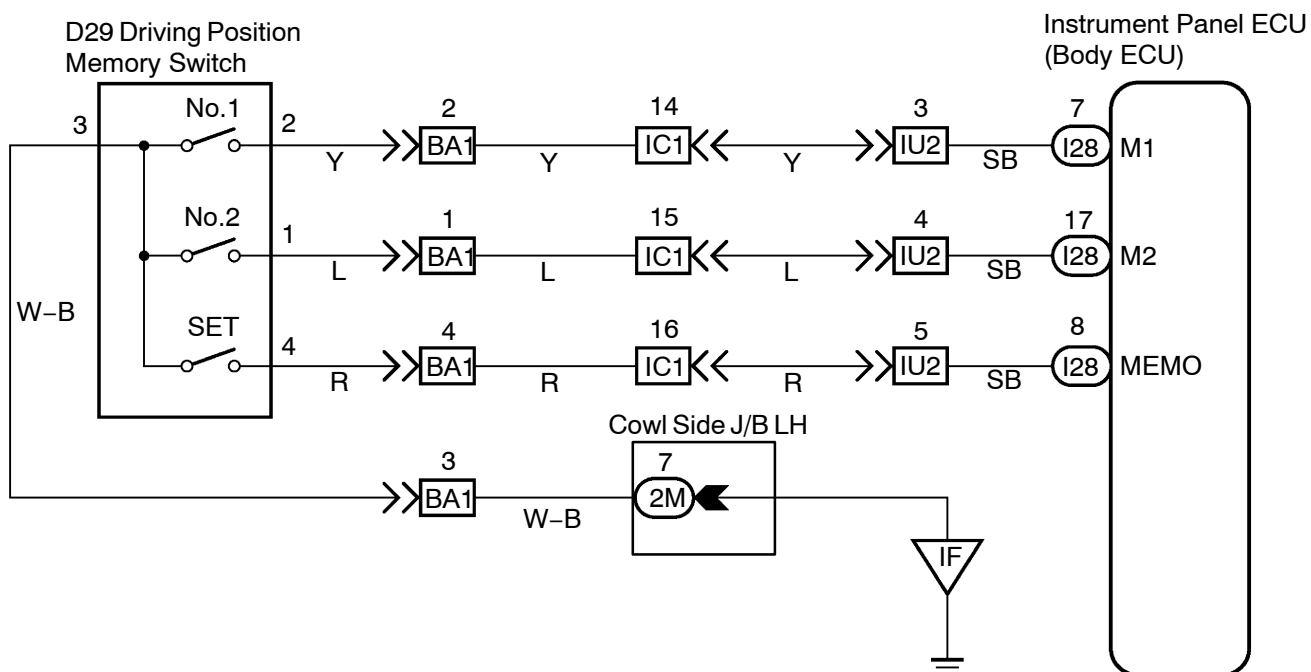

I07491

RHD Models

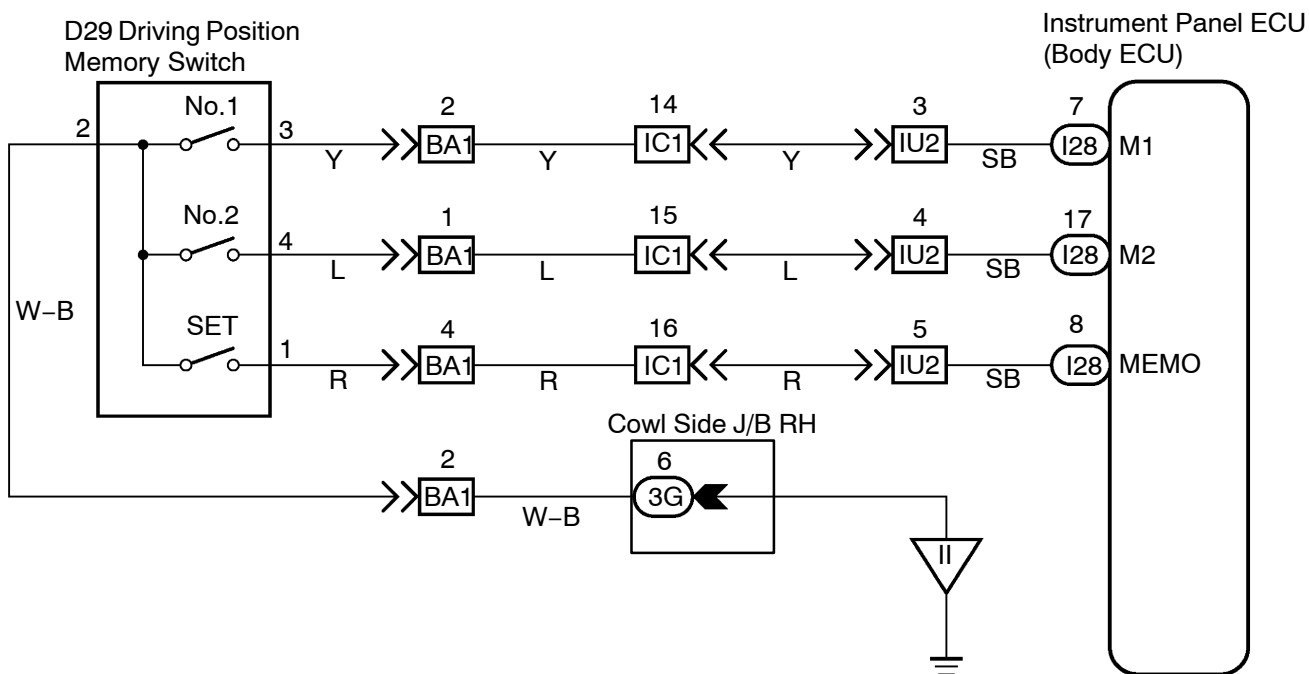

I07491

INSPECTION PROCEDURE

- | | |
|---|--|
| 1 | Check memory switch. (See page BE-130) |
|---|--|

NG

Replace the memory switch.

OK

2**Check wireharness and connector between memory switch and Body ECU.****NG****Repair or replace wireharness or connector.****OK**

**Proceed to next circuit inspection shown on
problem symptoms table.
([See page DI-773](#))**