


Brake fluid level warning light circuit


WIRING DIAGRAM

LHD models

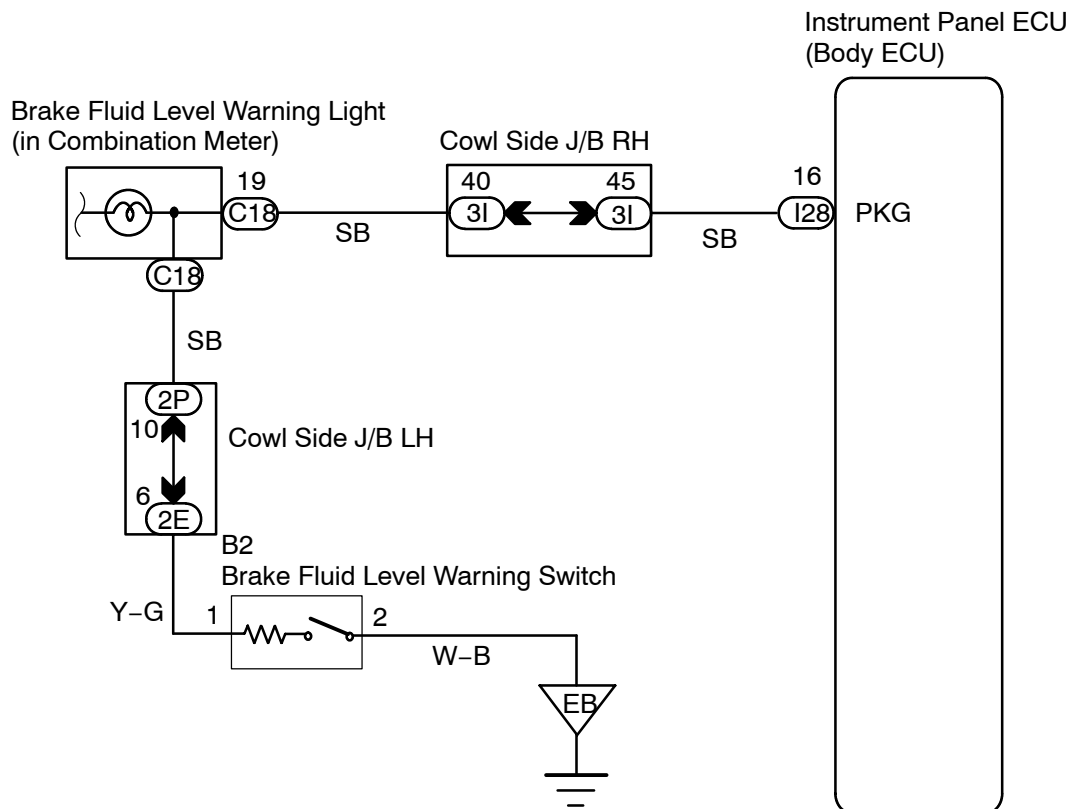

I09133

RHD models

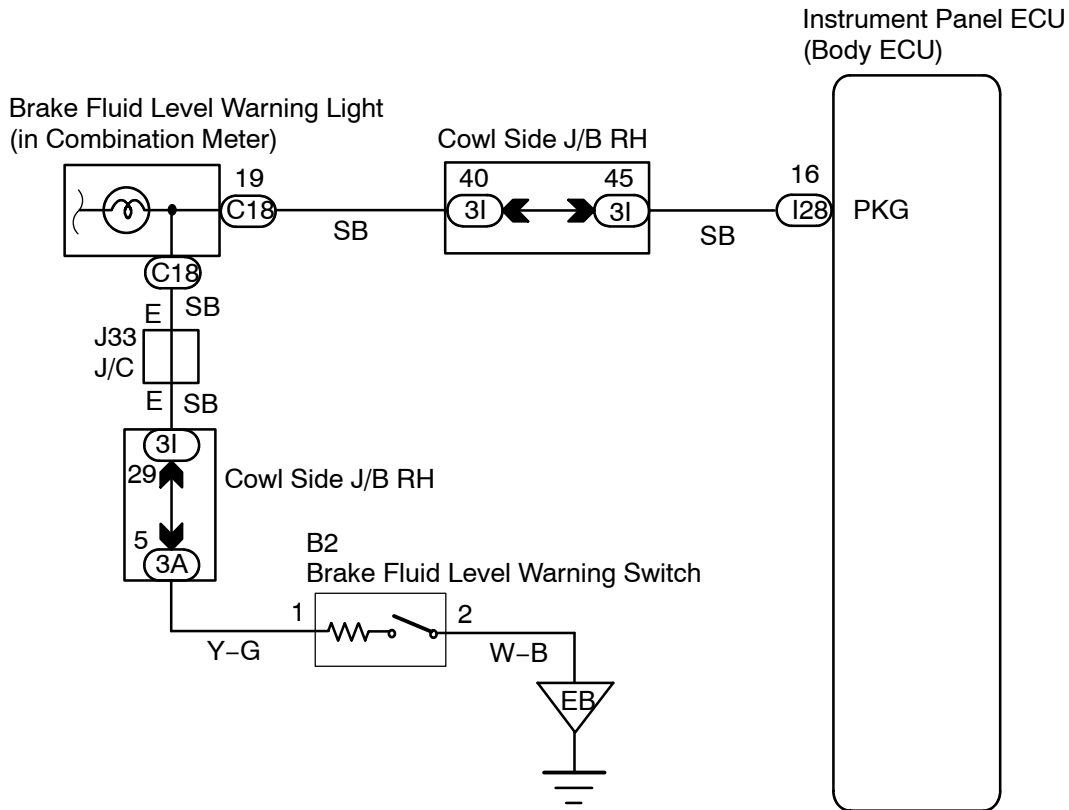

I09134

INSPECTION PROCEDURE

1	Check brake fluid level warning switch (See page BE-78)
---	---

OK

NG

Replace the brake fluid level warning switch.

2 Check parking brake switch ([See page BE-78](#))

NG

Replace the parking brake switch.

OK

3 Check wireharness and connector between parking brake switch and Body ECU.

NG

Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on
problem symptoms table.
([See page DI-773](#))