














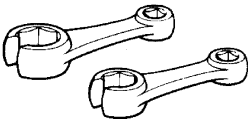




STEERING









SST (Special Service Tools)

PP1T4-01






	09238-47012	Water Pump Bearing Remover & Replacer	PS vane pump (2UZ-FE except Europe)
	09527-10011	Rear Axle Shaft Bearing Remover	PS vane pump (1FZ-FE)
	09610-55012	Pitman Arm Puller	Steering linkage
	09611-22012	Tie Rod End Puller	Steering linkage
	09612-22011	Tilt Handle Bearing Replacer	Tilt steering column PS vane pump (1HD-T, 1HD-FTE)
	09616-00010	Steering Worm Bearing Adjusting Socket	PS gear
	09628-62011	Ball Joint Puller	PS gear (RFS) Steering linkage
	09630-00014	Power Steering Gear Housing Overhaul Tool Set	
	(09631-00051)	No.3 Wrench	PS gear (RFS)
	(09631-00071)	Bearing Remover & Replacer	PS gear (RFS)
	(09631-00091)	Replacer	PS gear (RFS)
	(09631-00121)	Teflon Ring Former	PS gear (RFS)






PREPARATION - STEERING

	(09631-00142) Overhaul Stand	PS gear
	09631-00350 Steering Rack Cover 35	PS gear (IFS)
	09631-10030 Oil Seal Remover	PS vane pump (1FZ-FE) PS vane pump (2UZ-FE except Europe)
	09631-12071 Steering Rack Oil Seal Test Tool	PS gear (IFS)
	09631-20060 Bearing Guide Nut Wrench	PS gear (IFS)
	09631-20081 Seal Ring Tool	PS gear (IFS)
	09631-22020 Power Steering Hose Nut 14 x 17 mm Wrench Set	PS gear
	09632-36010 Steering Vane Pump Bearing Replacer	PS vane pump (1HZ)
	09633-00020 Power Steering Hose Nut Wrench	PS gear (IFS)
	09640-10010 Power Steering Pressure Gauge Set	Power steering fluid
	(09641-01010) Gauge Assy	
	(09641-01030) Attachment B	
	(09641-01060) Attachment E	

	09910-00015 Puller Set	Power tilt and telescopic steering column PS vane pump (2UZ-FE except Europe)
	(09911-00011) Puller Clamp	
	(09912-00010) Puller Slide Hammer	
	09922-10010 Variable Open Wrench	PS gear (IFS)
	09950-30010 Puller A Set	PS vane pump (1HD-T, 1HD-FTE)
	(09951-03010) Upper Plate	
	(09953-03010) Center Bolt	
	(09954-03010) Arm	
	(09955-03020) Claw No.2	
	09950-40011 Puller B Set	Steering column
	(09958-04010) Holder	
	09950-50010 Puller C Set	Tilt steering column
	(09951-05010) Hanger 150	

PREPARATION - STEERING

	(09952-05010) Slide Arm	
	(09953-05020) Center Bolt 150	
	(09954-05020) Claw No.2	
	09950-60010 Replacer Set	
	(09951-00180) Replacer 18	PS vane pump (2UZ-FE except Europe) PS gear (IFS)
	(09951-00260) Replacer 26	PS gear (IFS)
	(09951-00280) Replacer 28	PS gear (IFS)
	(09951-00300) Replacer 30	PS vane pump (2UZ-FE except Europe) PS vane pump (1HD-T, 1HD-FTE)
	(09951-00320) Replacer 32	PS gear (IFS)
	(09951-00330) Replacer 33	PS vane pump (2UZ-FE Europe) PS vane pump (1HZ) PS gear (IFS)
	(09951-00350) Replacer 35	PS gear (IFS)
	(09951-00360) Replacer 36	PS gear (IFS)
	(09951-00550) Replacer 55	PS gear (IFS)

	(09952-06010) Adapter	PS vane pump (2UZ-FE except Europe) PS gear (IFS)
	09950-70010 Handle Set	
	(09951-07100) Handle 100	PS vane pump (2UZ-FE) PS vane pump (1HZ) PS vane pump (1HD-T, 1HD-FTE) PS gear (IFS)
	(09951-07150) Handle 150	PS gear (IFS)
	(09951-07200) Handle 200	PS gear
	(09951-07360) Handle 360	PS gear
	09960-10010 Variable Pin Wrench Set	PS vane pump (2UZ-FE)
	(09962-01000) Variable Pin Wrench Arm Assy	
	(09963-01000) Pin 10	