

INSTALLATION

NOTICE:

Never use airbag parts from another vehicle. When replacing parts, replace them with new parts.

1. INSTALL FRONT PASSENGER AIRBAG ASSEMBLY

- (a) Install the front passenger airbag assembly to the instrument panel with the 4 nuts.

Torque: 6.0 N·m (61 kgf·cm, 53 in.·lbf)

- (b) Install the 2 airbag straps and bolts to front passenger airbag assembly.

Torque: 6.0 N·m (61 kgf·cm, 53 in.·lbf)

CAUTION:


- Make sure that no foreign objects are trapped between the airbag bag and the module.
- Do not damage the strap when installing the module.

NOTICE:

If the front passenger airbag assembly has been dropped, or there are cracks, dents or other defects in the case or connector, replace the front passenger airbag assembly with a new one.

2. INSTALL THESE PARTS:

- (a) Center bracket
- (b) No.2 side defroster nozzle duct
- (c) No.5 heater to register duct
- (d) Defroster nozzle assembly

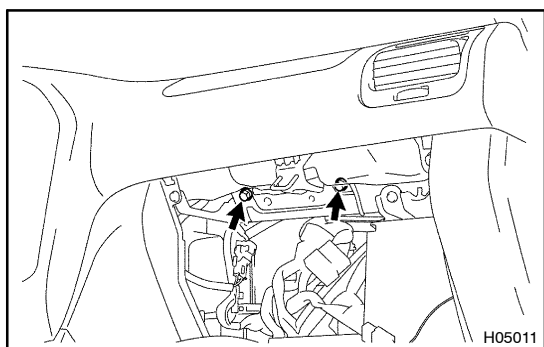

3. INSTALL INSTRUMENT PANEL


(See page BO-133)

Install the 2 bolts to instrument panel reinforcement.

Torque: 20 N·m (205 kgf·cm, 15 ft·lbf)


NOTICE:

- Make sure the front passenger airbag assembly is installed with the specified torque.
- When installing the instrument panel, take care that the airbag wire harness does not interfere with other parts and is not pinched between other parts.
- When installing the instrument panel box, carefully pull out the airbag wire harness from the glove compartment upper hole.

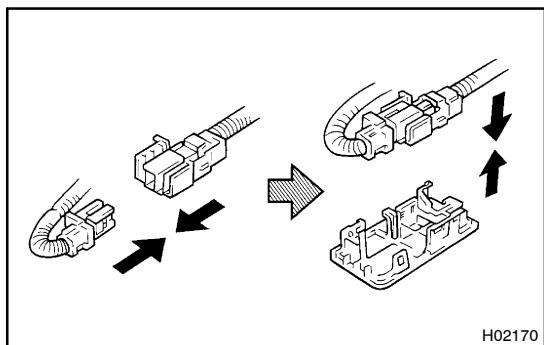

4. CONNECT AIRBAG CONNECTOR

- (a) Connect the airbag connector.

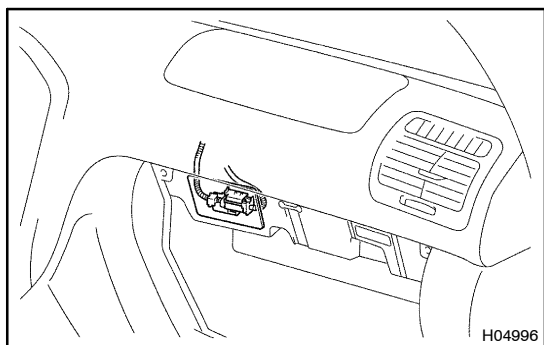

- (b) Set the connector on the No.1 under cover.
(c) Install the No.1 under cover to the lower No.2 finish panel.
(d) Install the glove compartment door.