


FRONT WHEEL HUB BOLT (Rigid Front Suspension) REPLACEMENT


SA1AD-01

1. REMOVE FRONT AXLE HUB (See page SA-15)

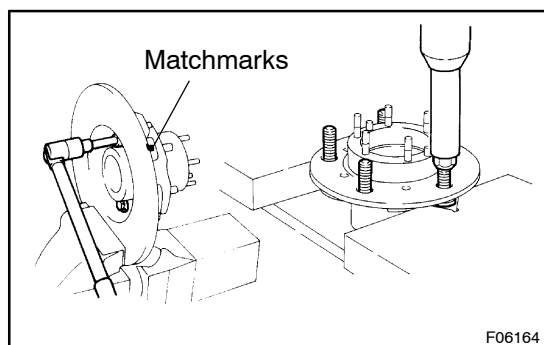

2. REPLACE HUB BOLTS

- (a) Place matchmarks on the axle hub and disc.
- (b) Remove the 5 bolts and disc from the axle hub.
- (c) Install the nut to the hub bolt.
- (d) Using an extension bar and press, remove the hub bolt.

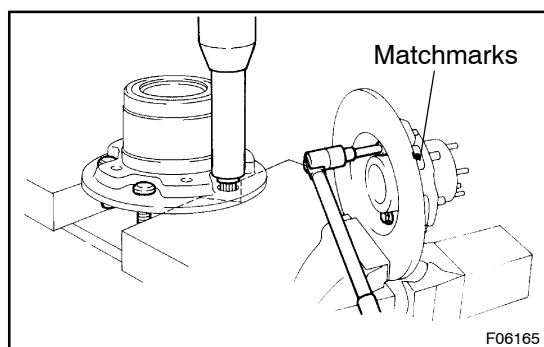

- (e) Using an extension bar and press, install a new hub bolt.
- (f) Align the matchmarks on the axle hub and disc.
- (g) Install and torque the 5 bolts.

Torque: 74 N·m (750 kgf·cm, 51 ft·lbf)

3. INSTALL FRONT AXLE HUB (See page SA-18)