



## REPLACEMENT

### 1. REMOVE FRONT DRIVE SHAFT (See page SA-49)

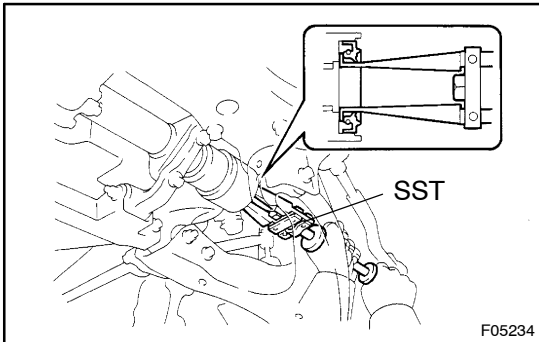


### 2. REPLACE OIL SEAL

- Using SST, remove the oil seal.  
SST 09308-00010
- Coat the hypoid gear oil to a new oil seal periphery.

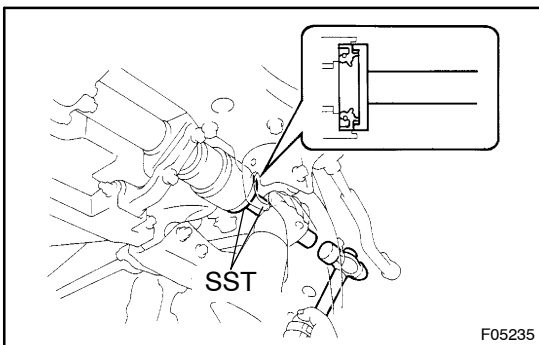

- Using SST and a hammer, install a new oil seal.  
SST 09550-00032, 09950-70010 (09951-07100)
- Coat the MP grease to the oil seal lip.

### 3. INSTALL FRONT DRIVE SHAFT (See page SA-55)

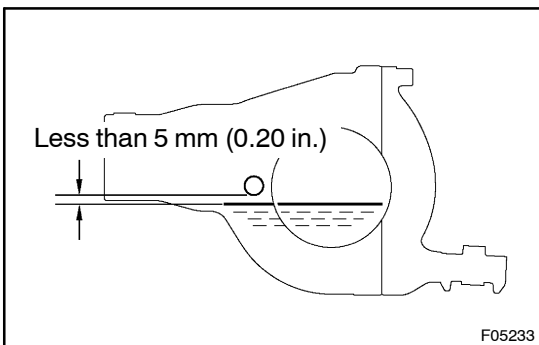

- ### 4. FILL DIFFERENTIAL WITH HYPOID GEAR OIL
- Torque:** 49 N·m (500 kgf·cm, 36 ft·lbf)  
**Oil type:** Hypoid gear oil API GL-5  
**Recommended oil viscosity:**  
 Above -18°C (0°F) SAE 90  
 Below -18°C (0°F) SAE 80W-90 or 80W  
**Capacity:** 1.70 liters (1.80 US qts, 1.50 Imp.qts)