



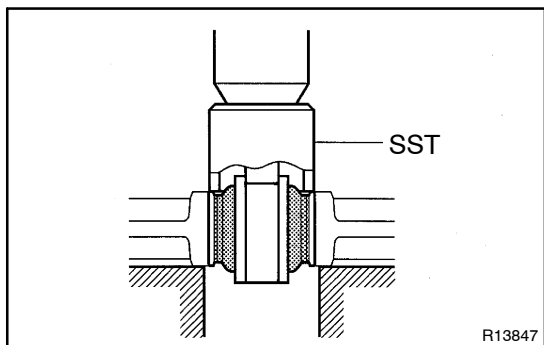

REPLACEMENT

REPLACE BUSHINGS

- (a) Front side:
Using SST and a press, replace the bushing from the leading arm.
SST 09710-30050
- (b) Rear side:
Using SST and a press, replace the bushing from the leading arm.
SST 09710-22042 (09710-02061)

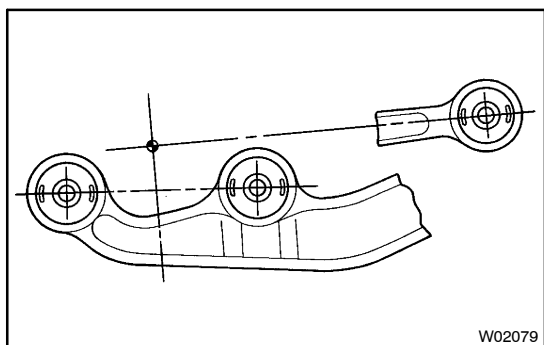

HINT:

Assemble a new bushing, as shown in the illustration.