


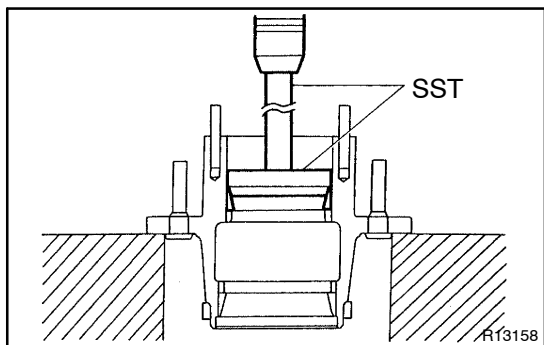

REASSEMBLY


1. IF NECESSARY INSTALL 2 BEARING OUTER RACES

- (a) Using SST and a press, install a new outside bearing outer race.

SST 09950-60020 (09951-00710),
09950-70010 (09951-07150)


- (b) Using SST and a press, install a new inside bearing outer race.

SST 09950-60020 (09951-00810),
09950-70010 (09951-07150)

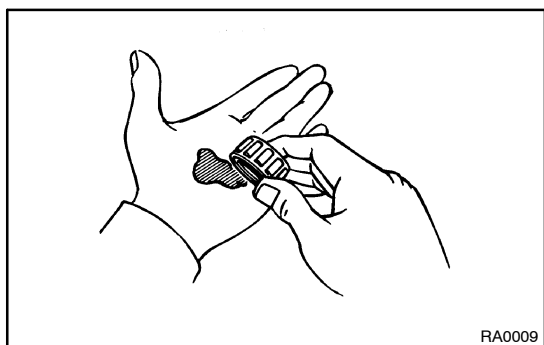

2. PACK BEARING WITH MP GREASE


- (a) Place MP grease on the palm of your hand.
(b) Pack grease into the bearing until the grease ooze out from the other side.
(c) Do the same around the bearing circumference.

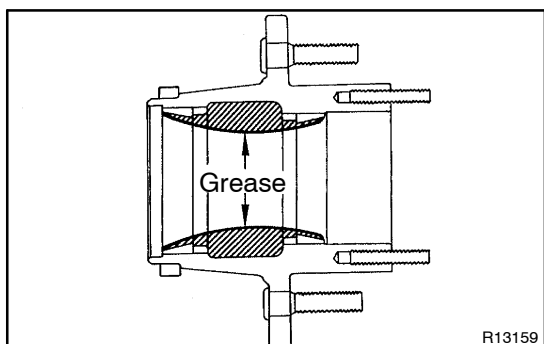

3. COAT INSIDE OF HUB WITH MP GREASE

4. INSTALL INNER BEARING AND OIL SEAL

- (a) Place inner bearing into the hub.

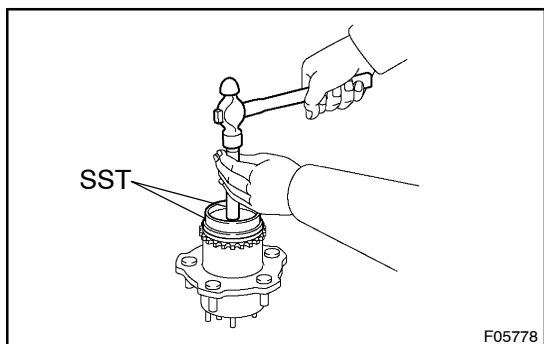

- (b) Using SST and a hammer, install a new oil seal into the hub.

SST 09223-15020, 09950-70010 (09951-07150)

- (c) Apply MP grease to the oil seal lip.