


REAR WHEEL HUB BOLT (Rigid Front Suspension) REPLACEMENT

SA1BA-01

1. REMOVE REAR AXLE HUB (See page SA-171)

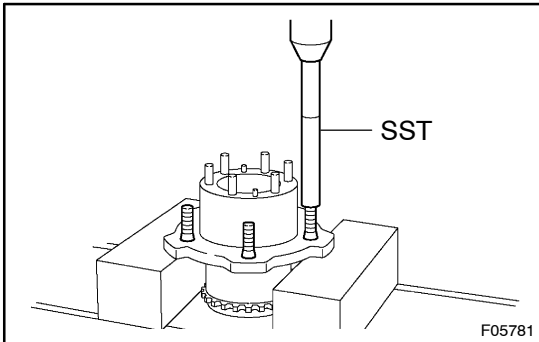


2. REMOVE HUB BOLT

Using SST and a press, remove the hub bolt from the axle hub.

SST 09950-70010 (09951-07150)

NOTICE:

Be careful not to damage the ABS speed sensor rotor.

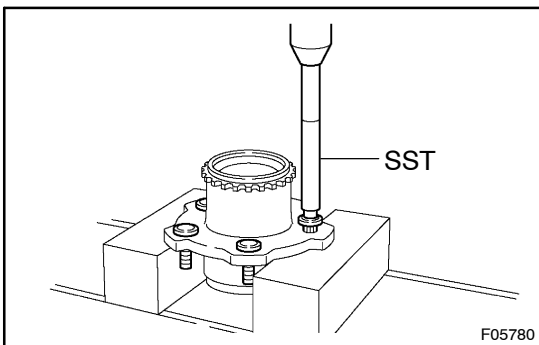

3. INSTALL HUB BOLT

Using SST and a press, install a new hub bolt.

SST 09950-70010 (09951-07150)

4. INSTALL REAR AXLE HUB (See page SA-174)