

DISASSEMBLY

1. REMOVE RESERVOIR

- (a) Remove the 2 bolts and pull out the reservoir.
- (b) Remove the cap, strainer and grommet from the reservoir.

2. REMOVE RESERVOIR BRACKET

- (a) Remove the 2 bolts and reservoir bracket from the housing.
- (b) Remove the 3 cushions from the reservoir bracket.

3. REMOVE FLUID PRESSURE SENSOR


- (a) Remove the fluid pressure sensor from the housing.
- (b) Remove the O-ring and ring from the fluid pressure sensor.

4. REMOVE FLUID TEMPERATURE SENSOR

Remove the fluid temperature sensor from the housing.

5. REMOVE PUMP COVER

Remove the 3 bolts, pump cover and O-ring.

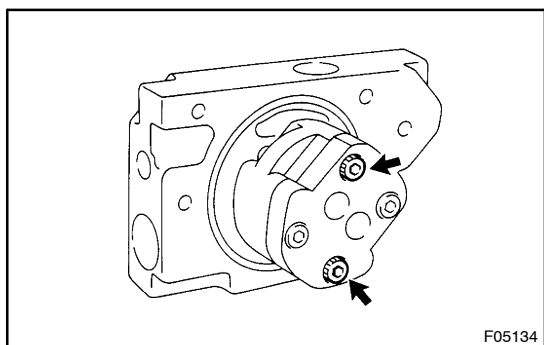


6. REMOVE PUMP SUB-ASSEMBLY

- (a) Using a hexagon wrench, remove the 2 bolts and pump sub-assembly.
- (b) Remove the O-ring.

7. REMOVE PUMP MOTOR

Remove the 2 bolts and pump motor from the housing.

8. REMOVE MOTOR JOINT

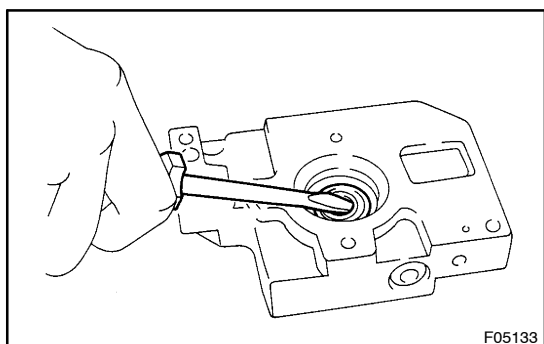

9. REMOVE OIL SEAL

Using a screwdriver, remove the oil seal.

NOTICE:

Be careful not to damage the housing.