


INSTALLATION

1. INSTALL PS VANE PUMP ASSEMBLY

Torque the 2 bolts and nut on the vane pump assembly.

Torque: 39 N·m (400 kgf·cm, 29 ft·lbf)

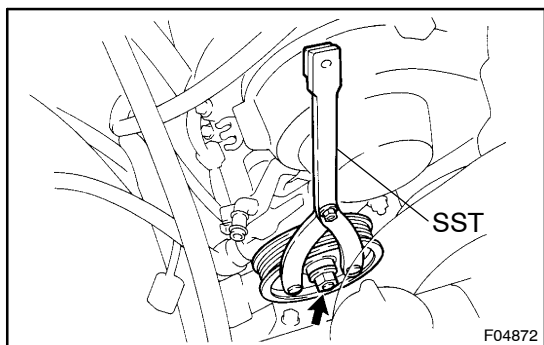


2. INSTALL VANE PUMP PULLEY

Using SST, stop the pulley rotating and torque a new pulley set nut.

SST 09960-10010 (09962-01000, 09963-01000)

Torque: 43 N·m (440 kgf·cm, 32 ft·lbf)

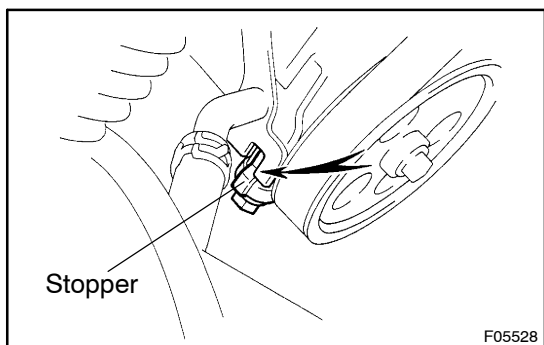

3. INSTALL PRESSURE FEED TUBE

Install new gaskets on each side of the tube and torque the union bolt.

Torque: 56 N·m (575 kgf·cm, 42 ft·lbf)

HINT:


Make sure that the stopper of the tube touches the PS vane pump body as shown in the illustration, then torque the bolt.

4. CONNECT RETURN HOSE

Install the clip.

5. CONNECT 2 VACUUM HOSES

Install the 2 clips.

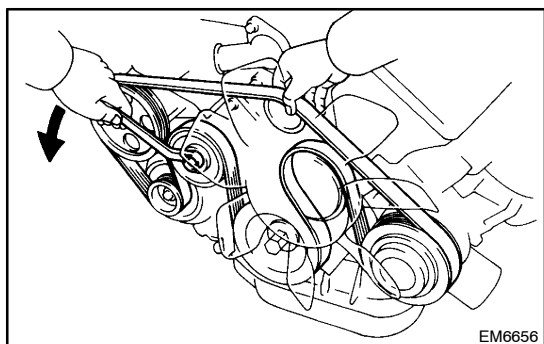

6. INSTALL DRIVE BELT

Loosen the drive belt tension by turning the drive belt tensioner counterclockwise, and install the belt.

7. INSTALL AIR CLEANER ASSEMBLY WITH AIR CLEANER HOSE

- Tighten the 3 bolts.
- Tighten the clamp.
- Connect the MAF meter connector.

8. INSTALL RH REAR ENGINE UNDER COVER

Install the 5 clips.

9. INSTALL NO. 2 ENGINE UNDER COVER

Tighten the 8 bolts.

10. INSTALL NO. 1 ENGINE UNDER COVER

Tighten the 6 bolts.

11. BLEED POWER STEERING SYSTEM

(See page SR-4)