


TRANSFER UNIT COMPONENTS

TR059-01


A/T:

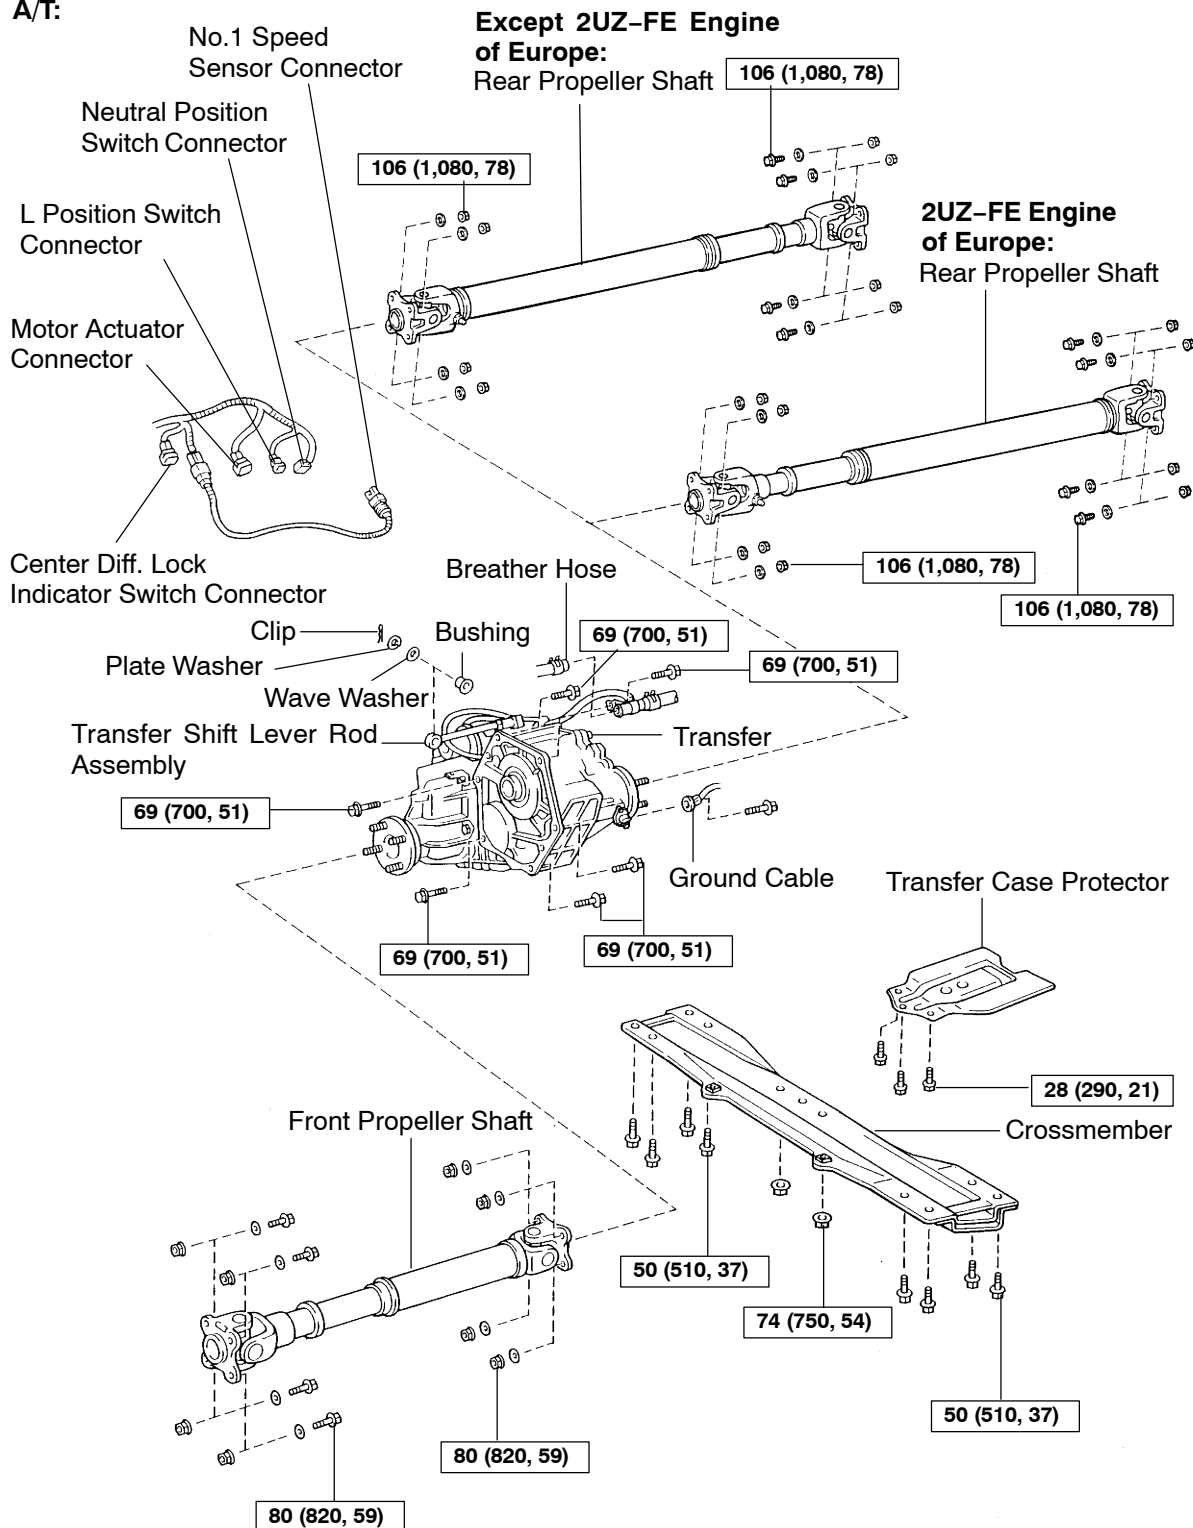

N·m (kgf·cm, ft·lbf) : Specified torque

D03206

M/T:

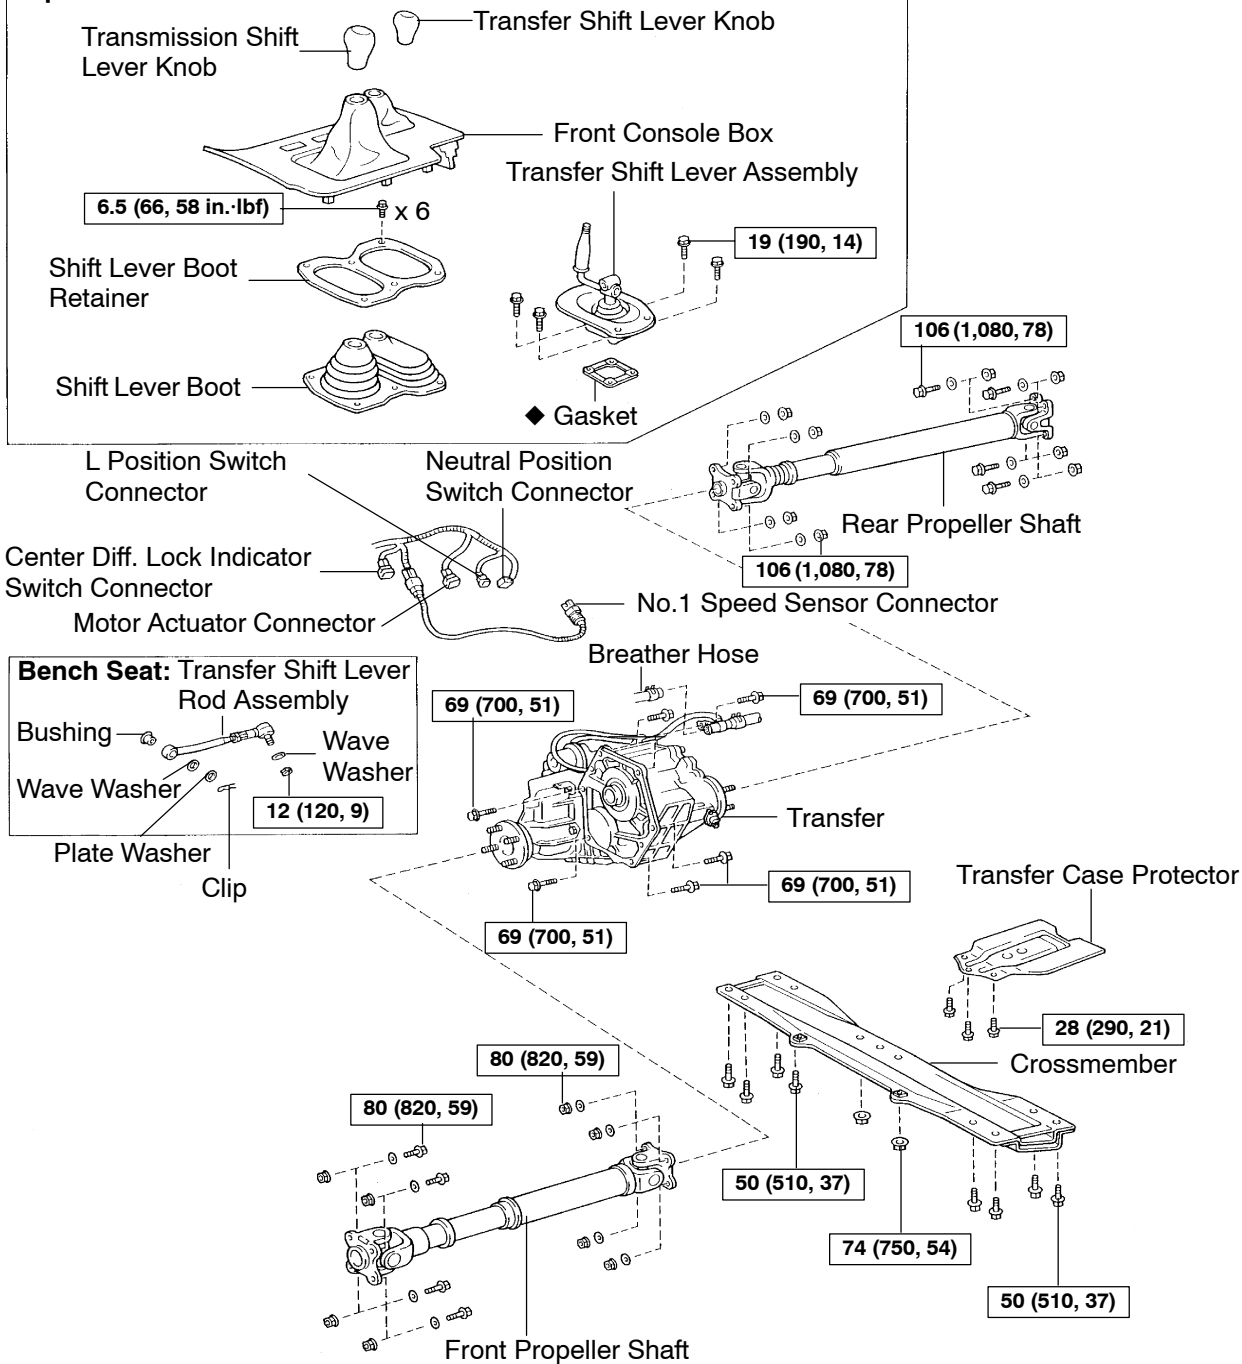Separate Seat:

N·m (kgf·cm, ft·lbf) : Specified torque

◆ Non-reusable part

D03207