



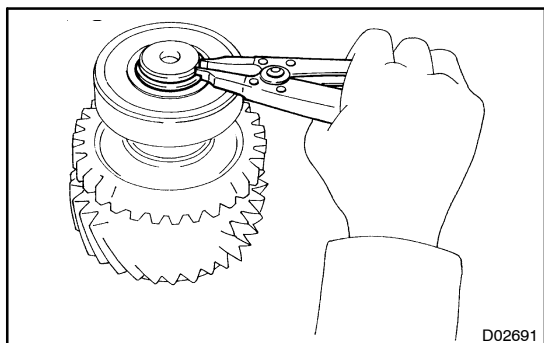


## DISASSEMBLY

### 1. REMOVE REAR BALL BEARING

- (a) Using a snap ring expander, remove the snap ring.

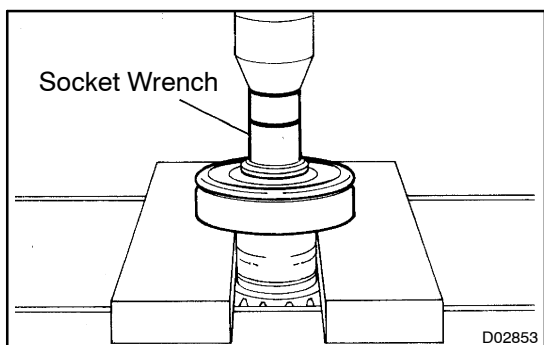

- (b) Using a socket wrench and press, remove the rear ball bearing.

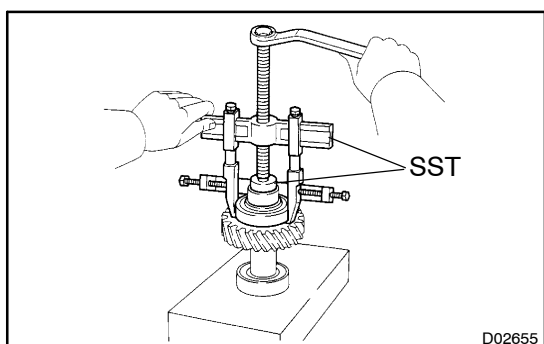

### 2. REMOVE FRONT BALL BEARING

- (a) Using a snap ring expander, remove the snap ring.  
 (b) Using SST, remove the front ball bearing.

SST 09950-40011 (09951-04020, 09952-04010, 09953-04030, 09954-04010, 09955-04010, 09957-04010, 09958-04010), 09950-60010 (09951-00400)