



TRANSFER SHIFT LEVER ASSEMBLY COMPONENTS

TR05B-01

Bench Seat (M/T):

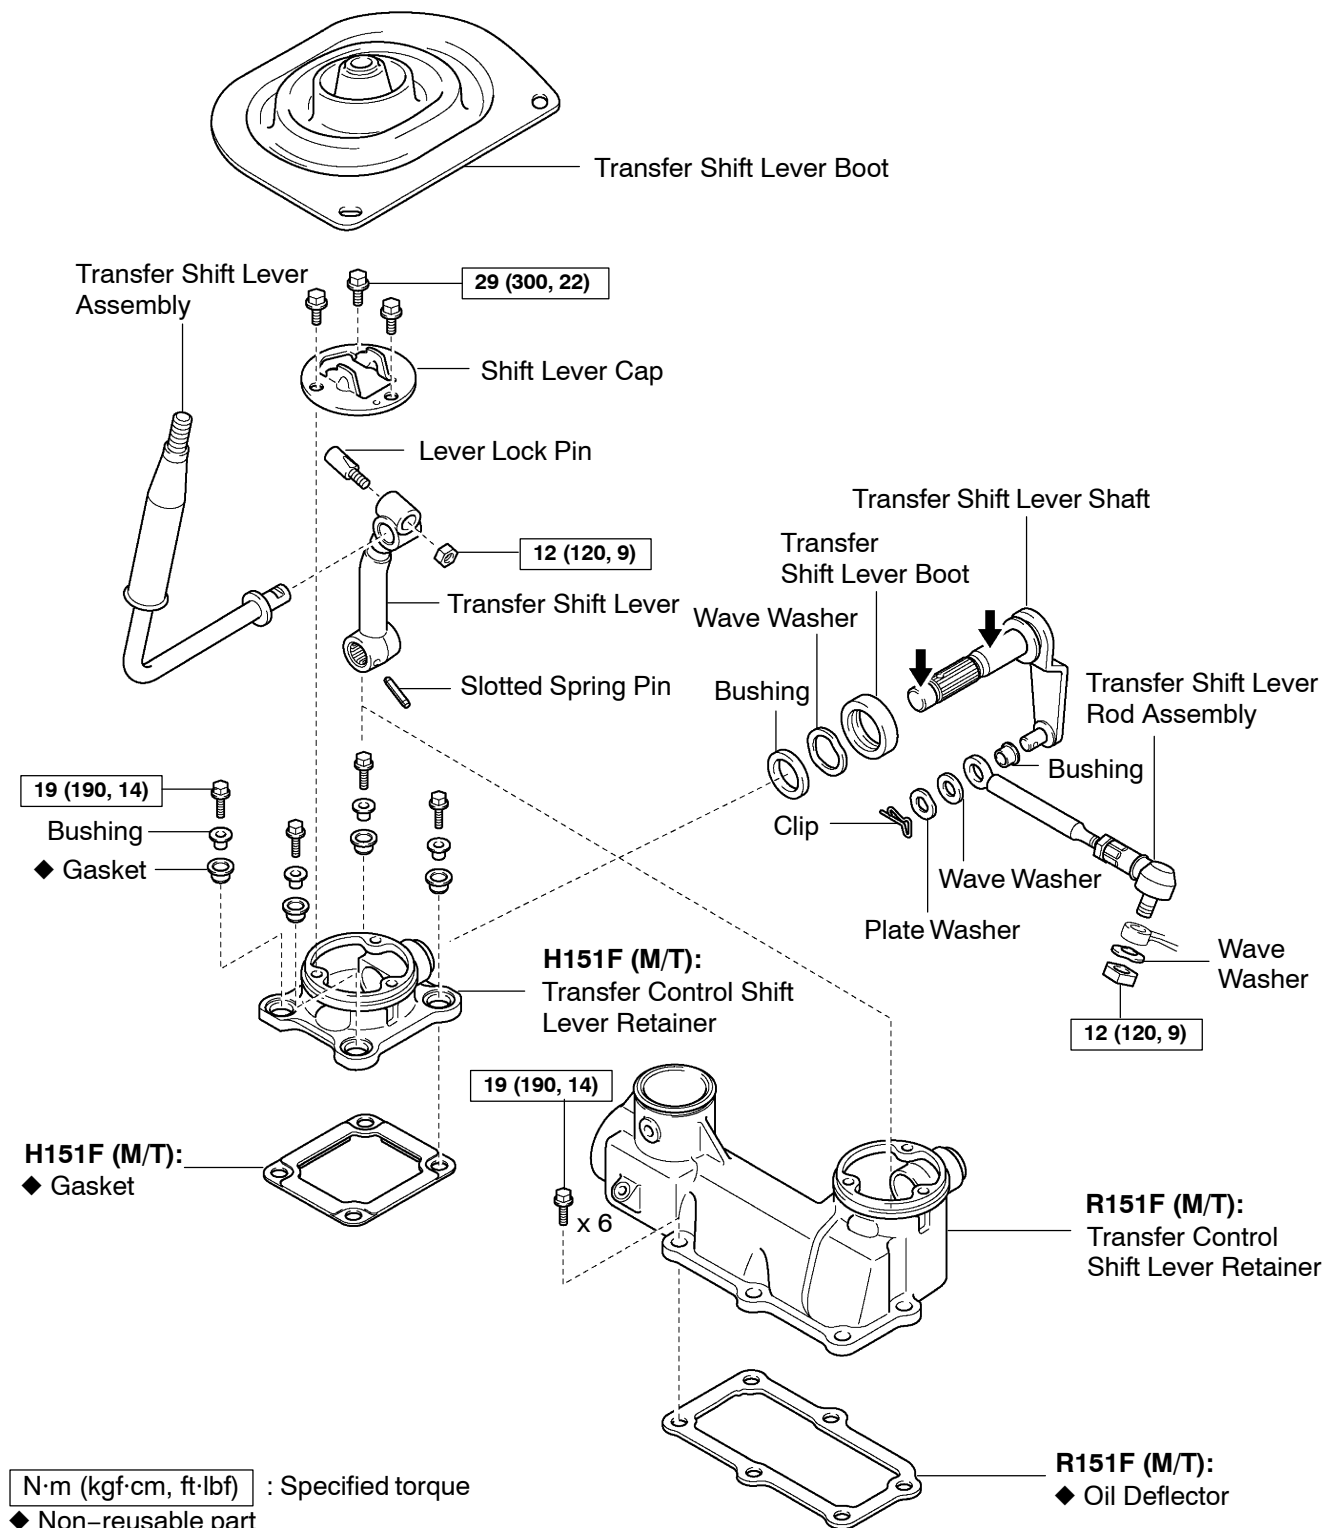

D03209

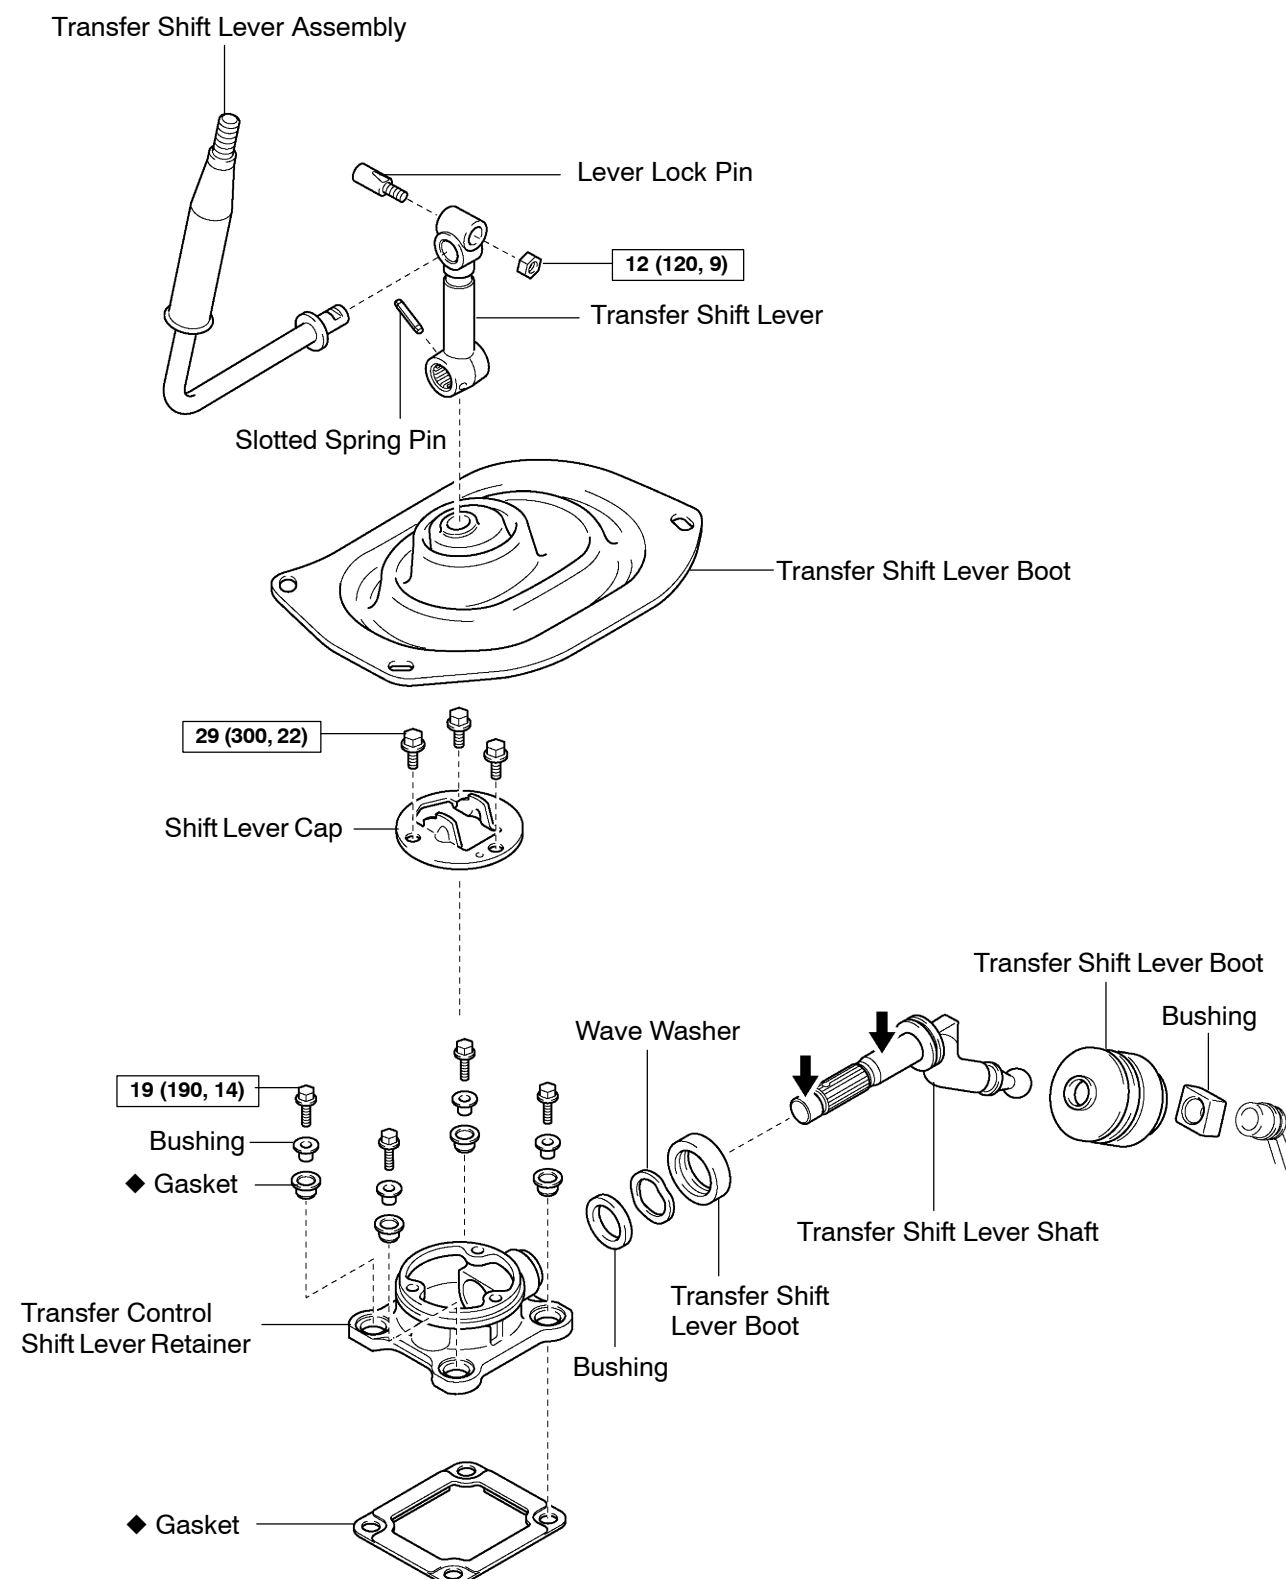Separate Seat (M/T):


N·m (kgf·cm, ft·lbf) : Specified torque

◆ Non-reusable part

← : MP Grease

D03210

LHD (A/T):

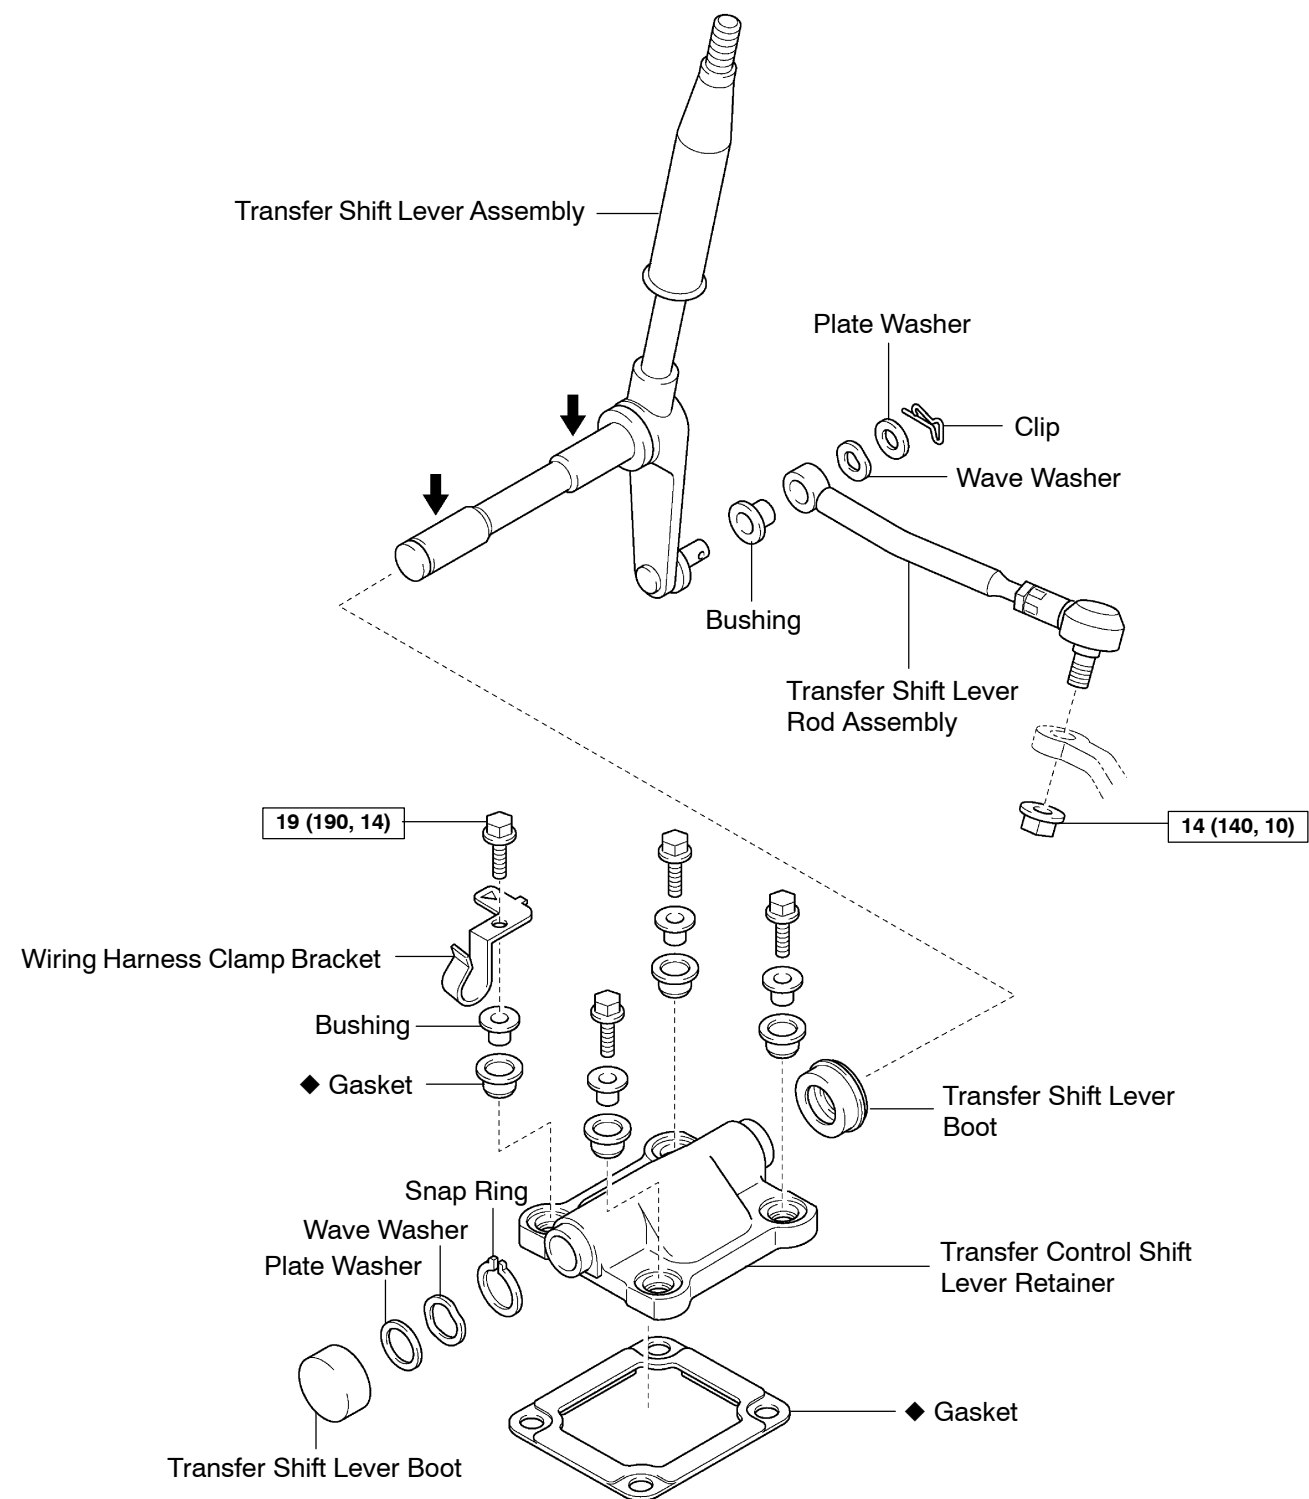


N·m (kgf·cm, ft·lbf) : Specified torque

◆ Non-reusable part

← : MP Grease

D03172

RHD (A/T):

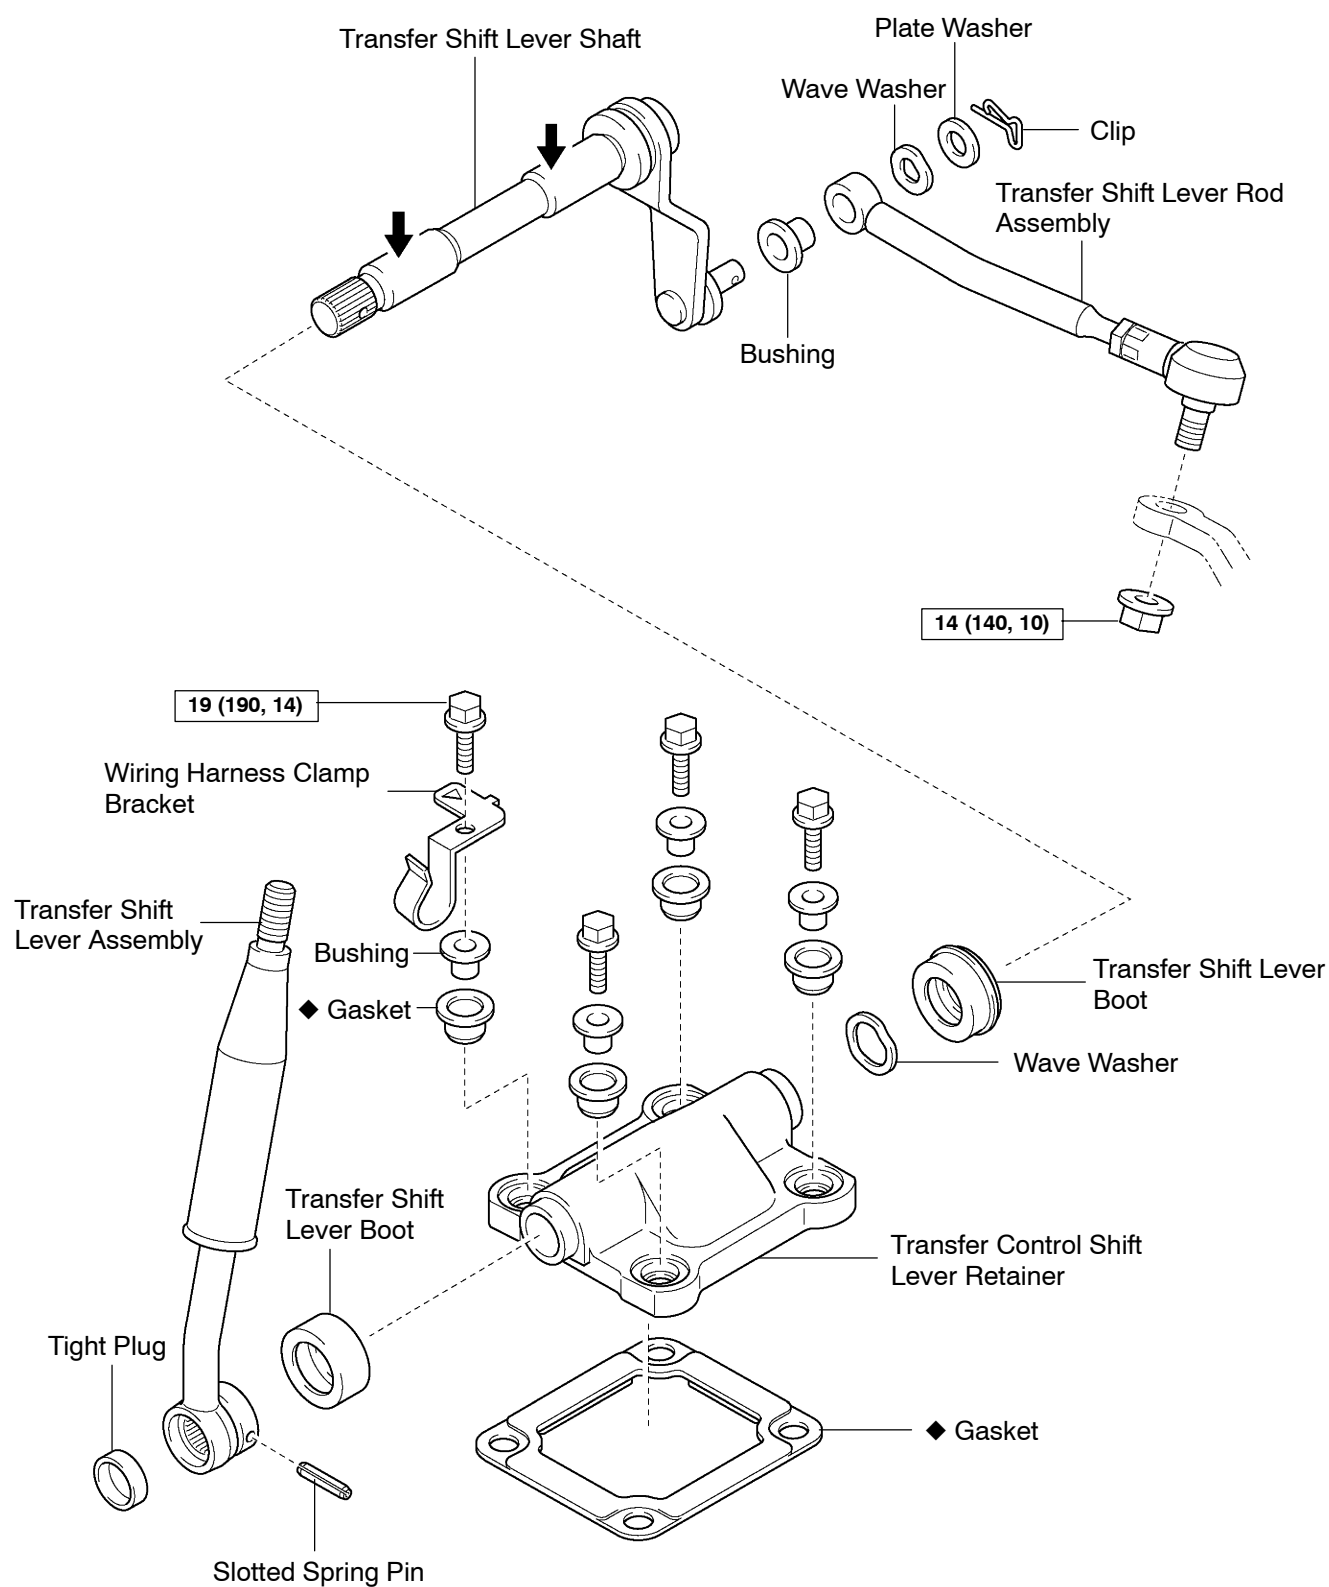

N·m (kgf·cm, ft·lbf) : Specified torque

◆ Non-reusable part

➡ : MP Grease

D03173