

TRANSFER UNIT COMPONENTS

TR05F-01

w/o One Touch 2-4 Selector System (M/T):

Separate Seat:Transmission Shift
Lever Knob

Transfer Shift Lever Knob

Front Console Box

Transfer Shift Lever Assembly

6.5 (66, 48 in.·lbf)

x 6

Shift Lever Boot
Retainer

Shift Lever Boot

◆ Gasket

19 (190, 14)

106 (1,080, 78)

L4 Position Switch
ConnectorNeutral Position Switch
ConnectorTransfer 4WD Position
Switch ConnectorNo.1 Speed
Sensor Connector

106 (1,080, 78)

Rear Propeller Shaft

Bench Seat:

12 (120, 9)

13 (130, 9)

Wave Washer

Wave Washer

12 (120, 9)

69 (700, 51)

69 (700, 51)

69 (700, 51)

Breather Hose

Transfer Shift Lever Rod
Assembly

Transfer

Transfer Case Protector

69 (700, 51)

69 (700, 51)

28 (290, 21)

Crossmember

80 (820, 59)

80 (820, 59)

50 (510, 37)

74 (750, 54)

50 (510, 37)


Front Propeller Shaft

N·m (kgf·cm, ft·lbf) : Specified torque

◆ Non-reusable part

D02816

w/ One Touch 2-4 Selector System (M/T):

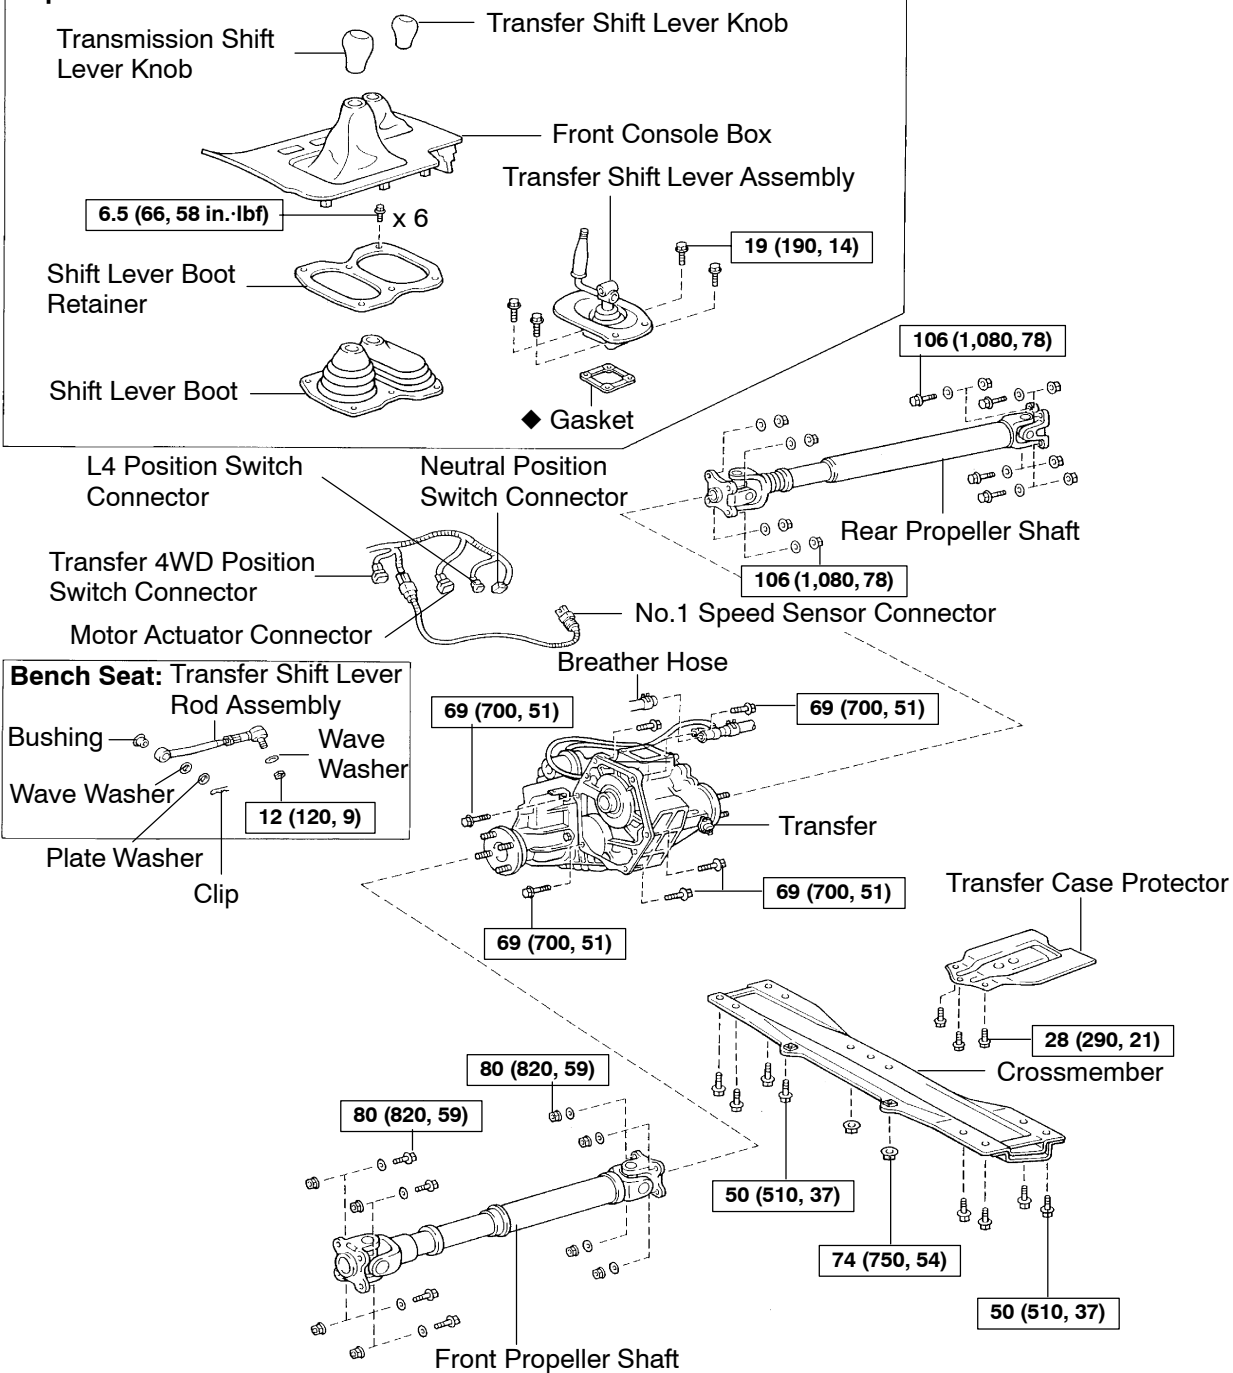
Separate Seat:

N·m (kgf·cm, ft·lbf) : Specified torque

◆ Non-reusable part

D02817

A/T:

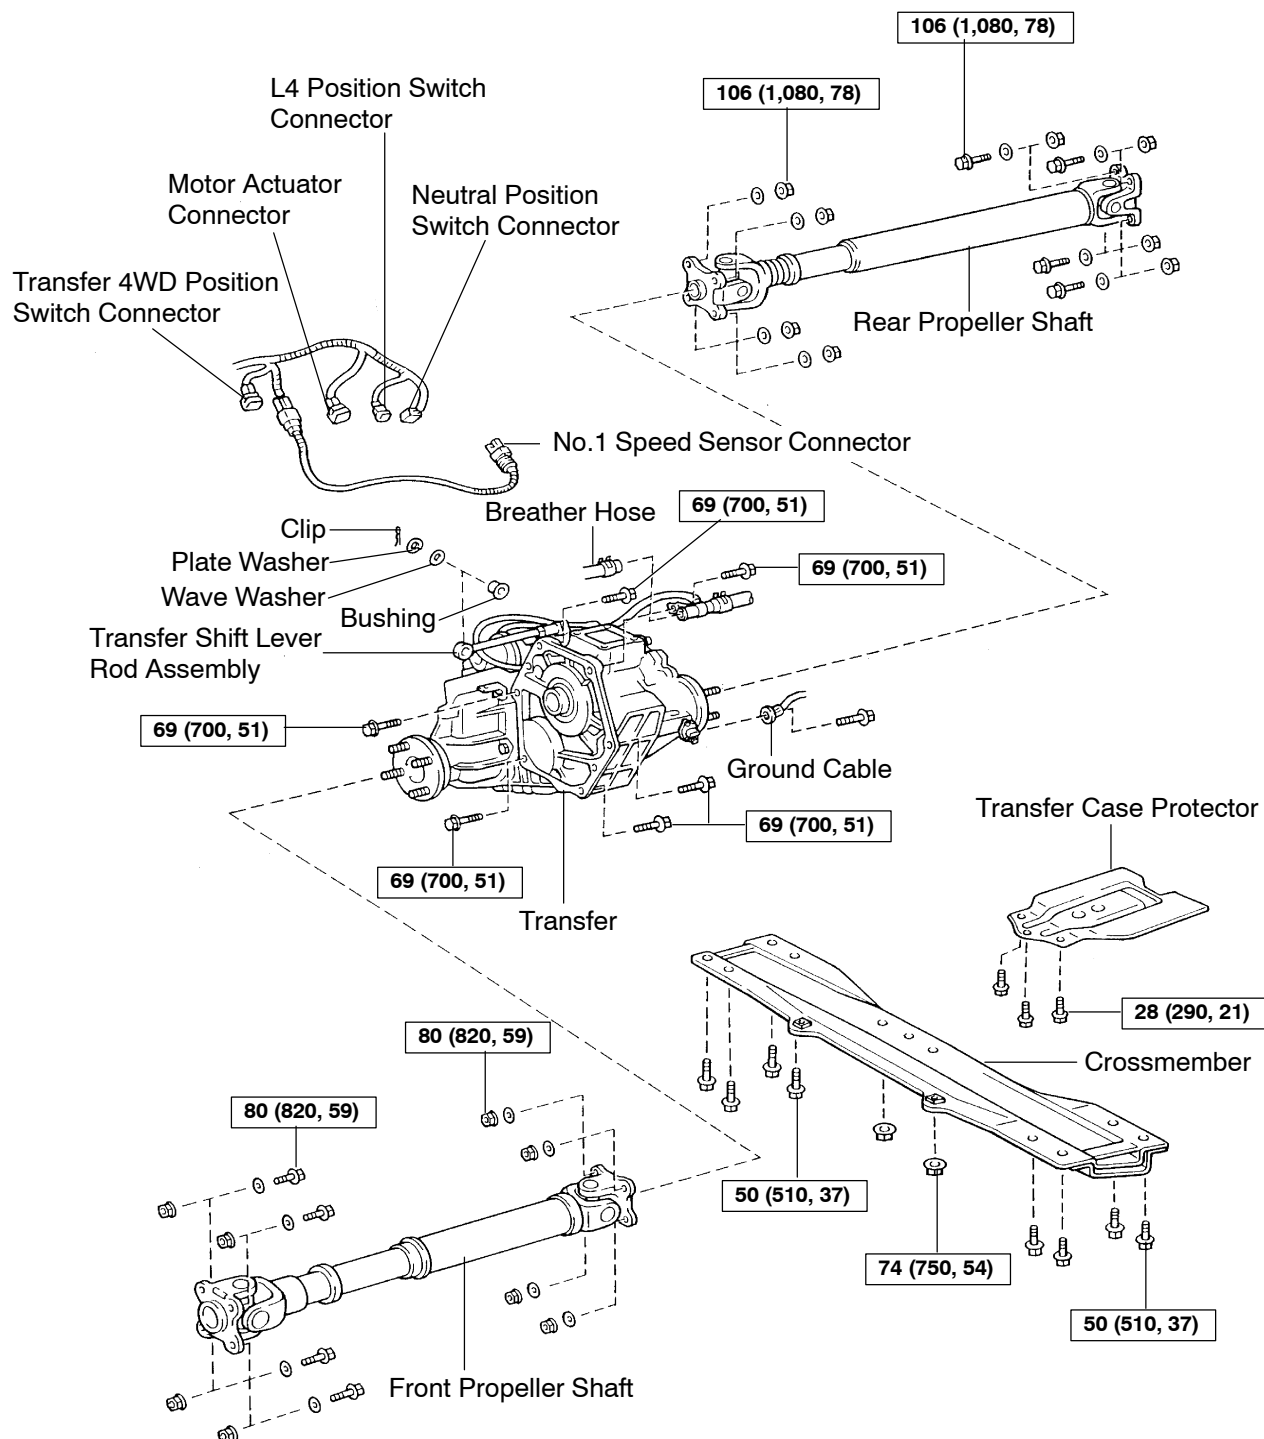

N·m (kgf·cm, ft·lbf) : Specified torque

D02818