



TRANSFER SHIFT LEVER ASSEMBLY COMPONENTS

TR060-02


w/o One Touch 2-4 Selector System, Bench Seat (M/T):

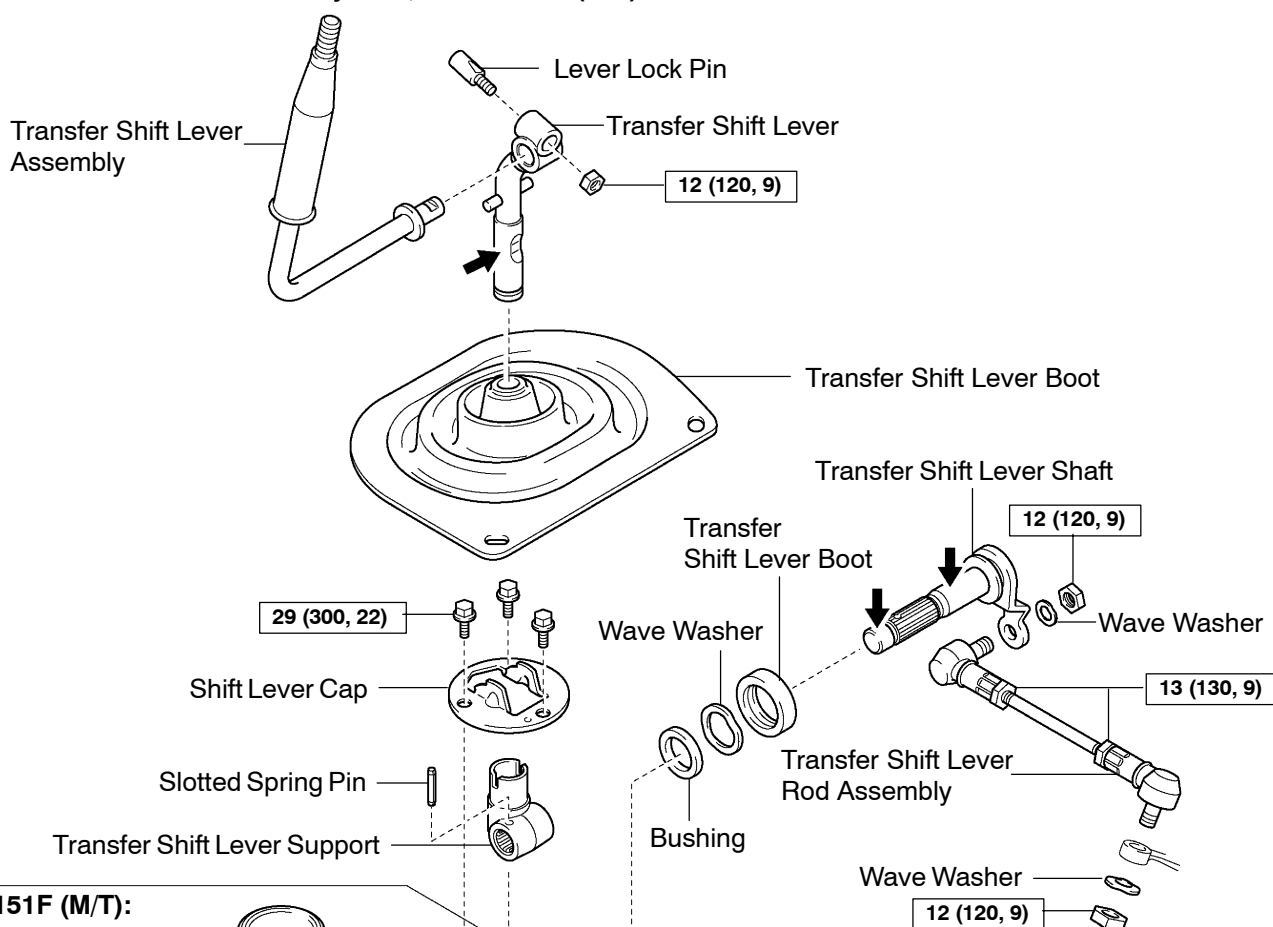

R151F (M/T):

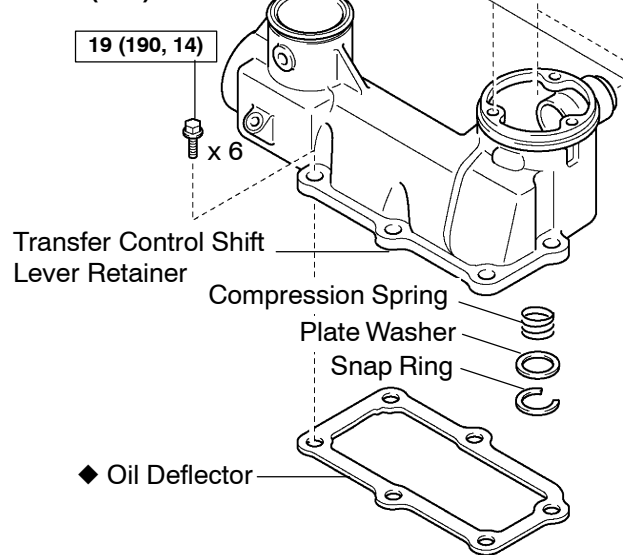

H151F (M/T):

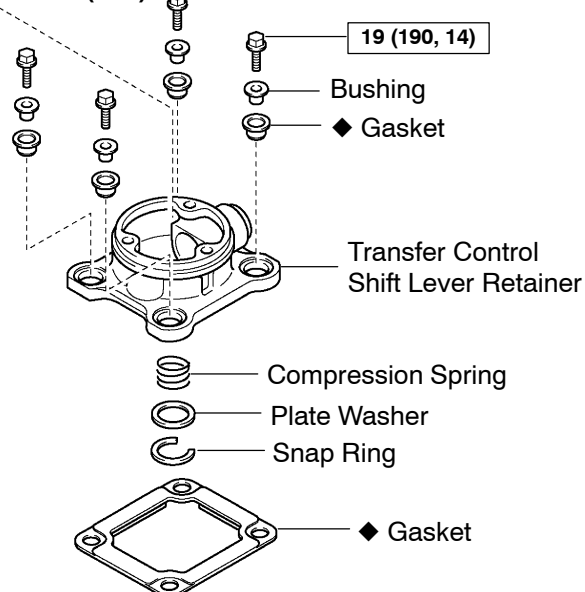


N·m (kgf·cm, ft·lbf) : Specified torque

◆ Non-reusable part

← : MP Grease

D03174

w/ One Touch 2-4 Selector System, Bench Seat (M/T):

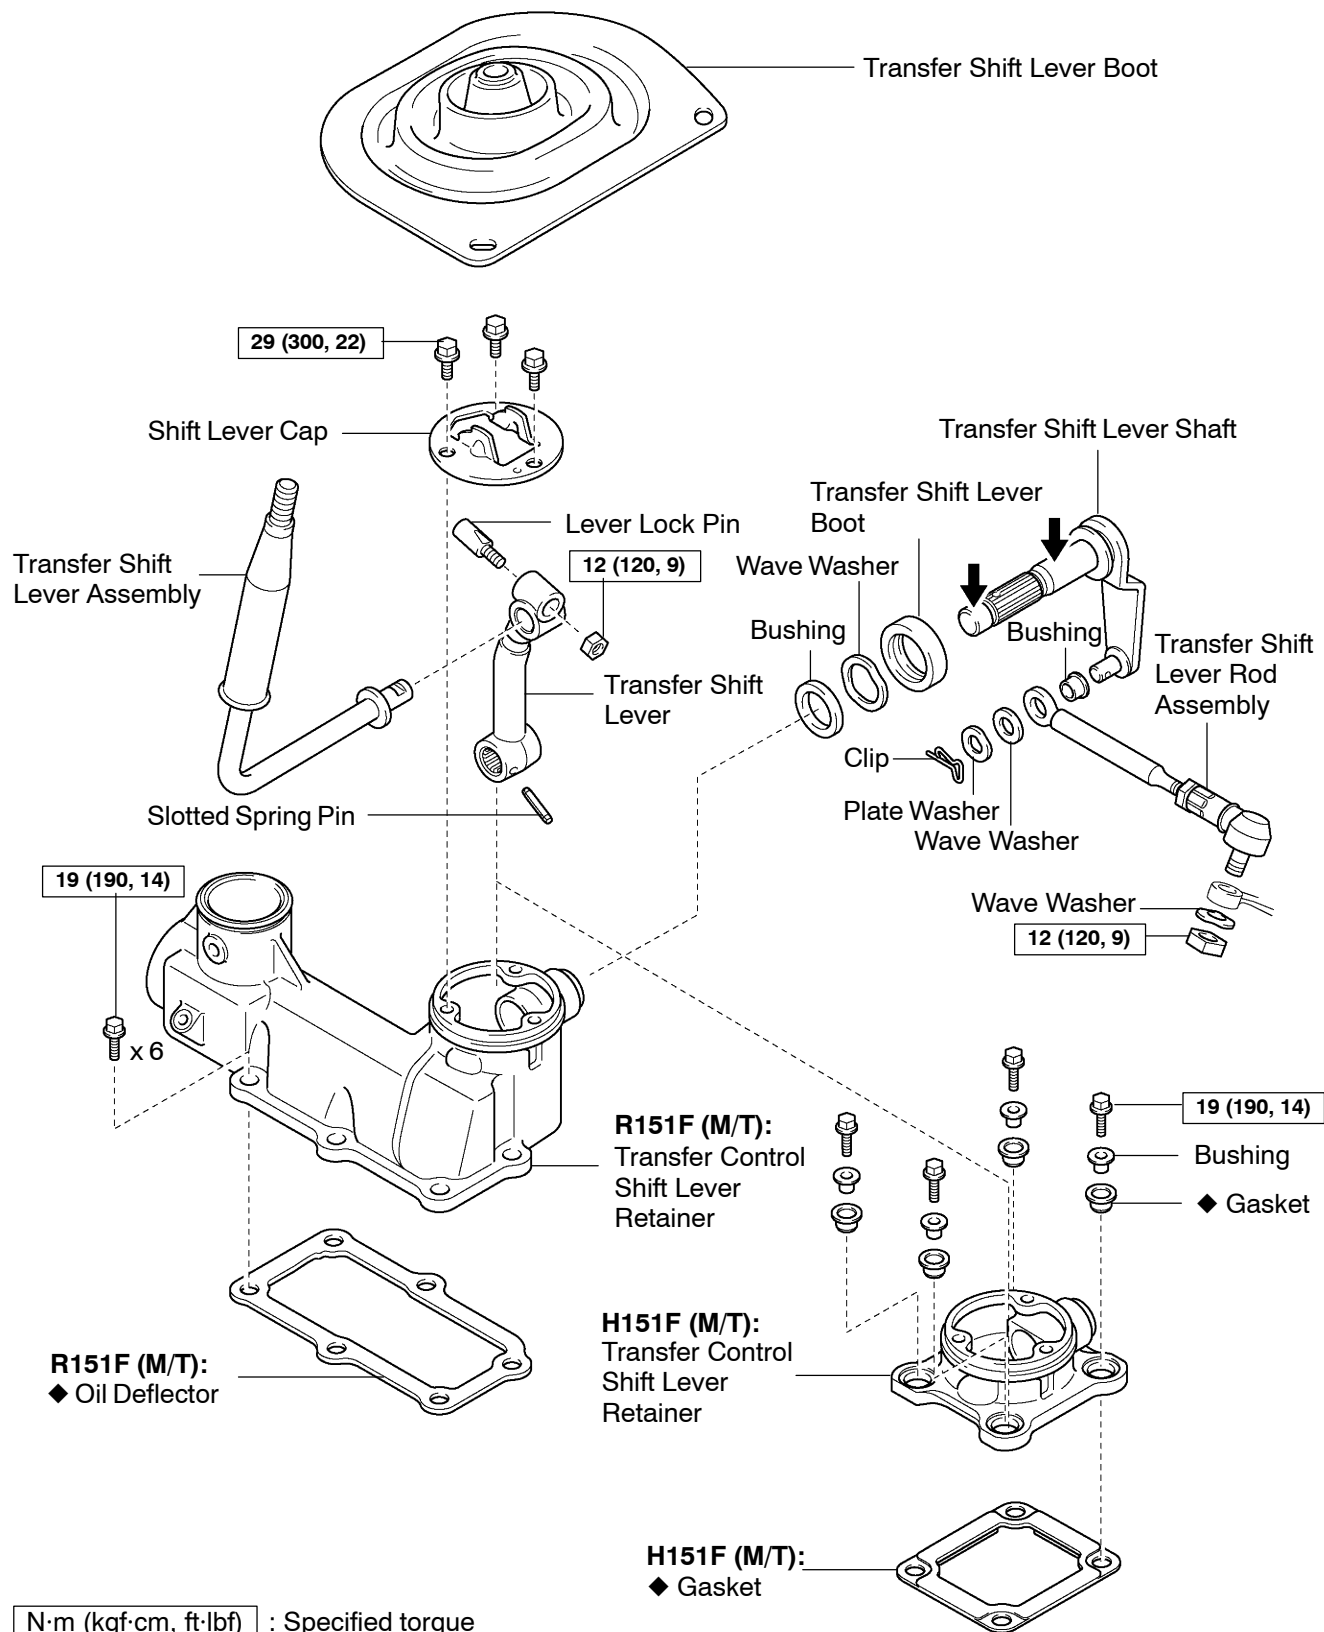


N·m (kgf·cm, ft·lbf) : Specified torque

◆ Non-reusable part

← : MP Grease

D03175

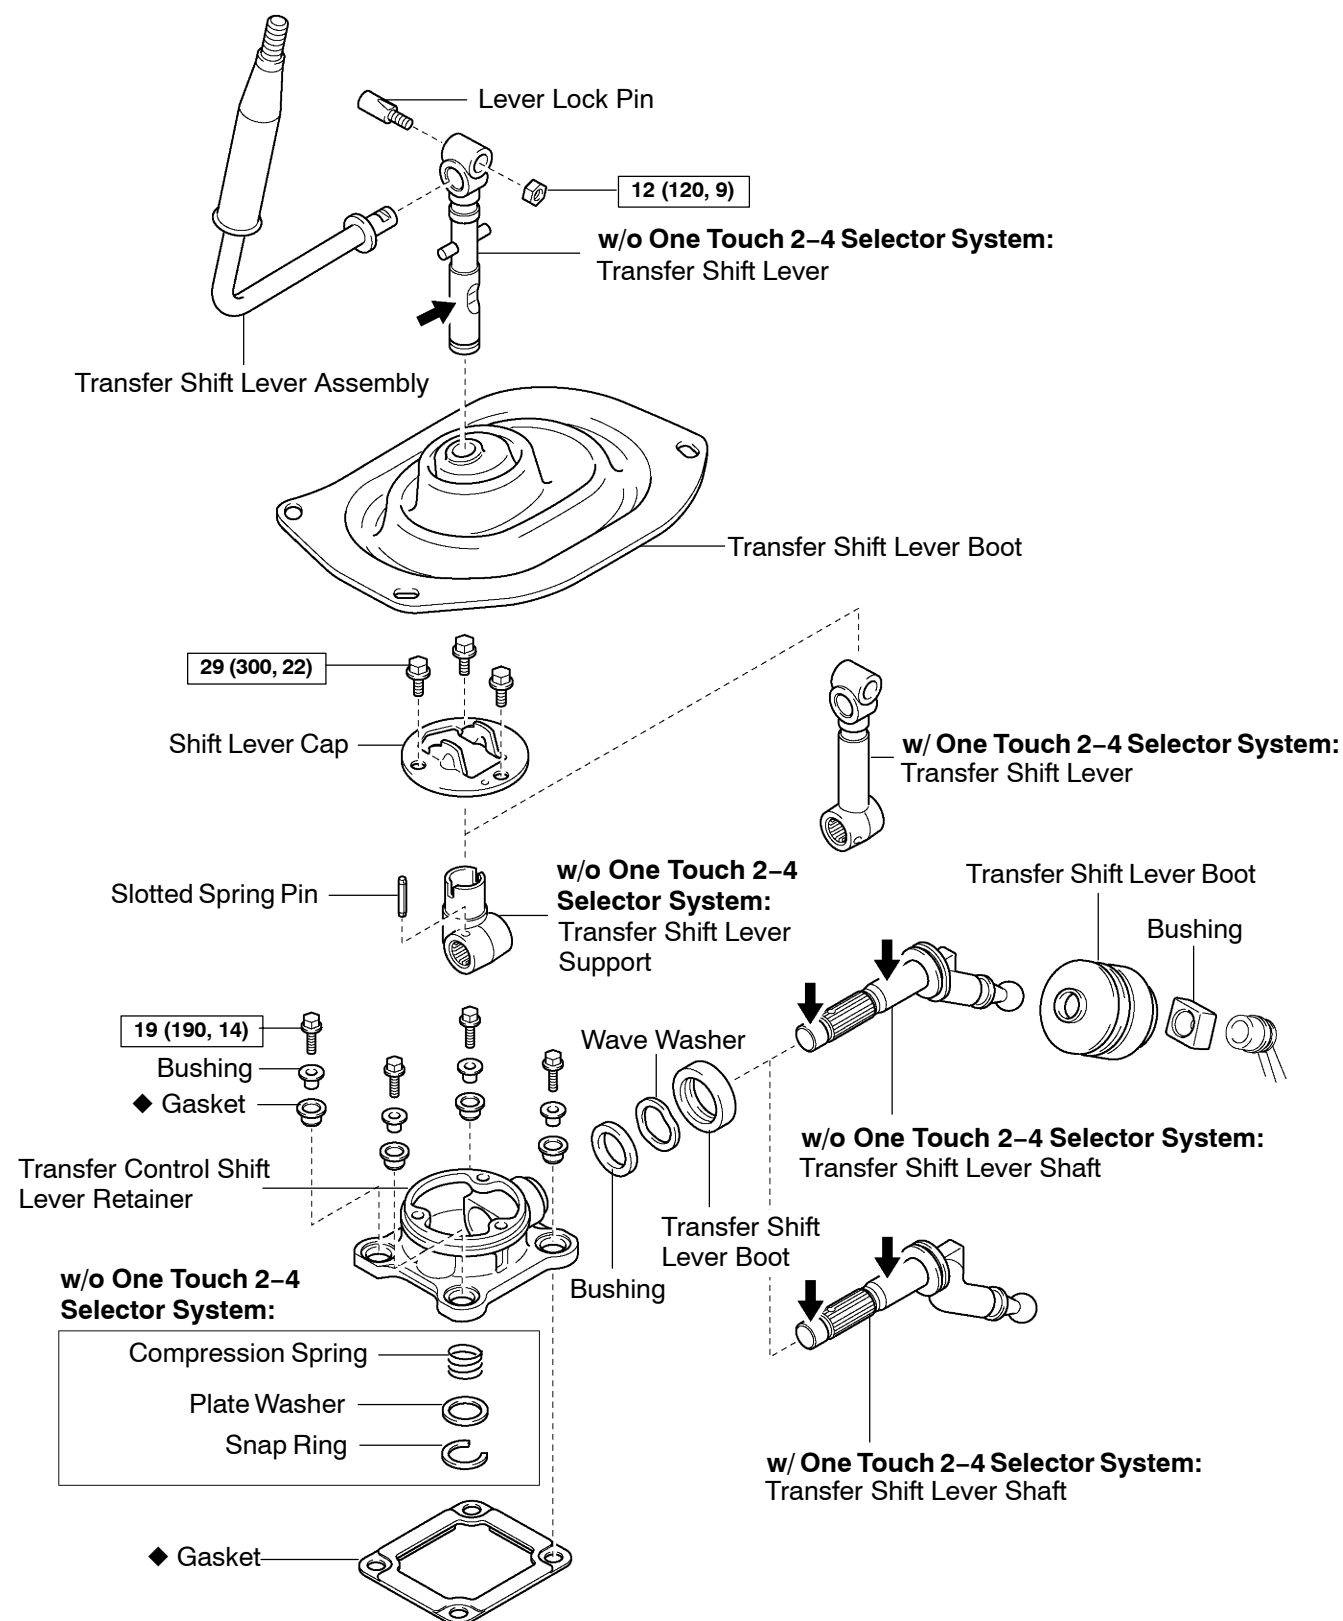
Separate Seat (M/T):

N·m (kgf·cm, ft·lbf) : Specified torque

◆ Non-reusable part

← : MP Grease

LHD (A/T):

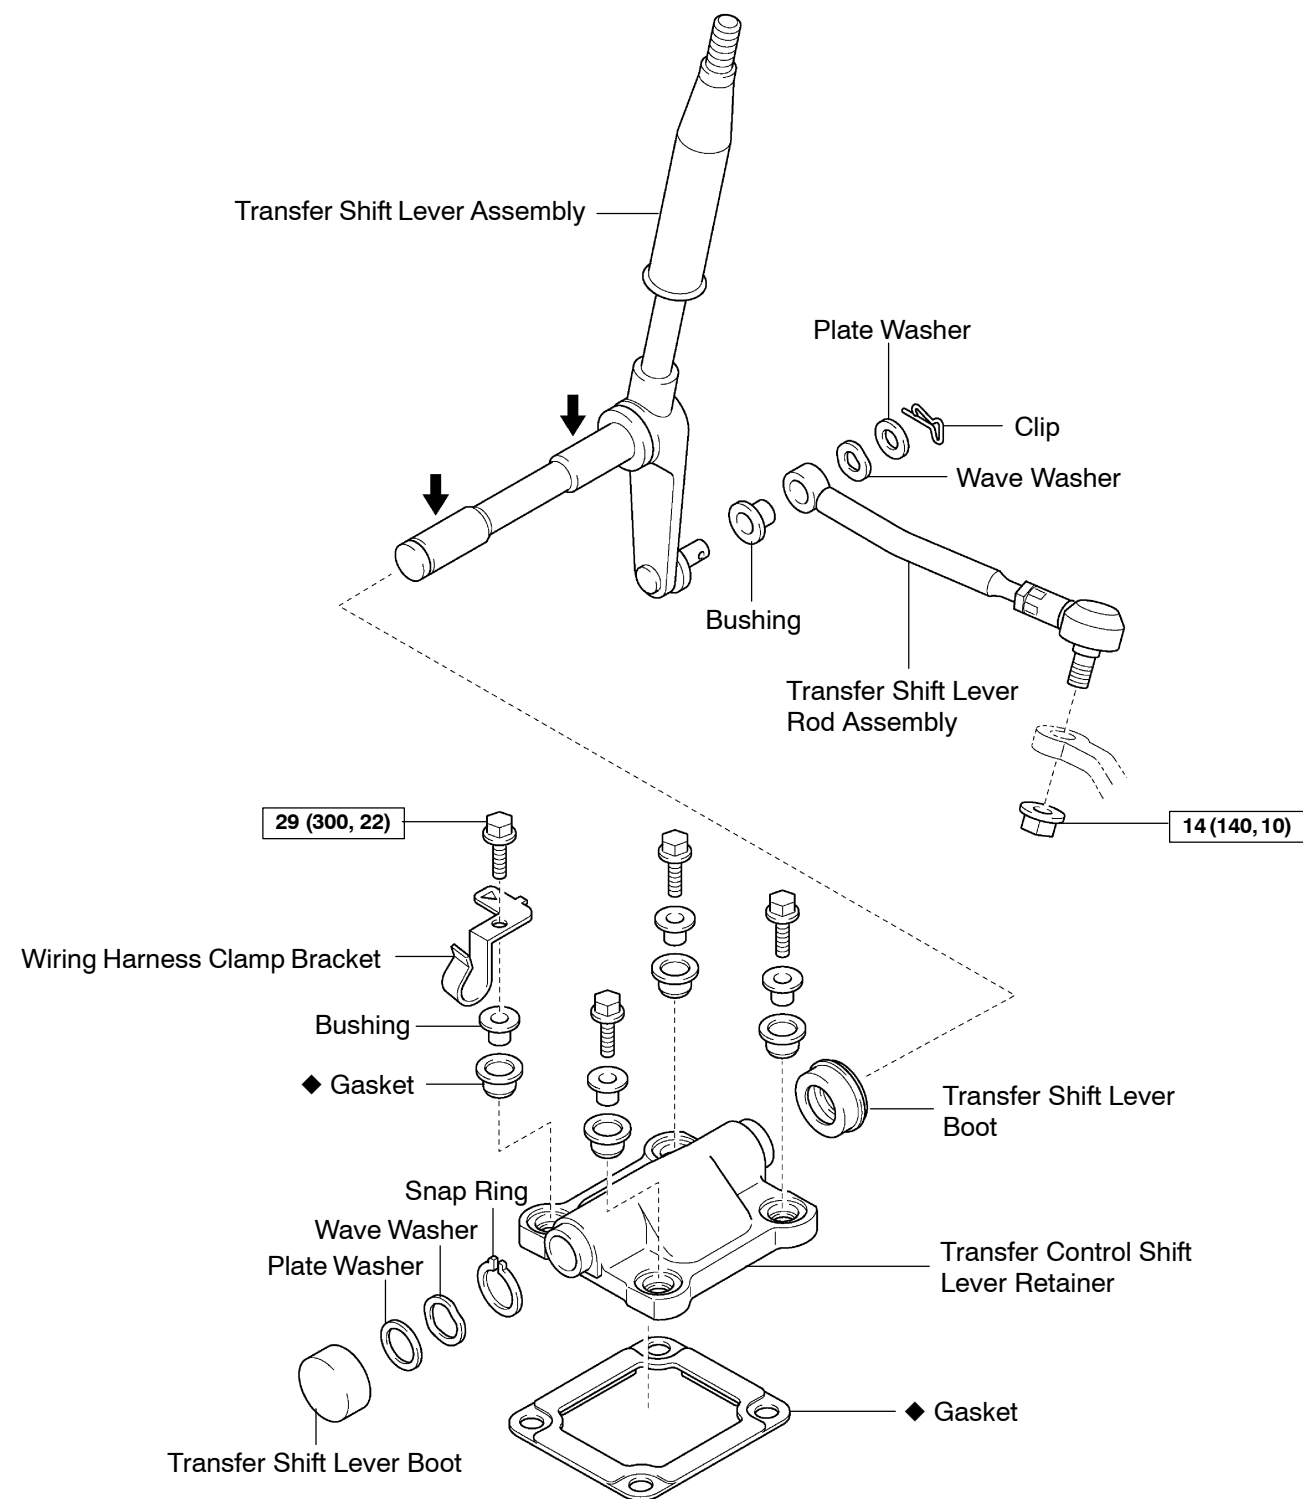


N·m (kgf·cm, ft·lbf) : Specified torque

◆ Non-reusable part

➡ : MP Grease

D03172

RHD (A/T):

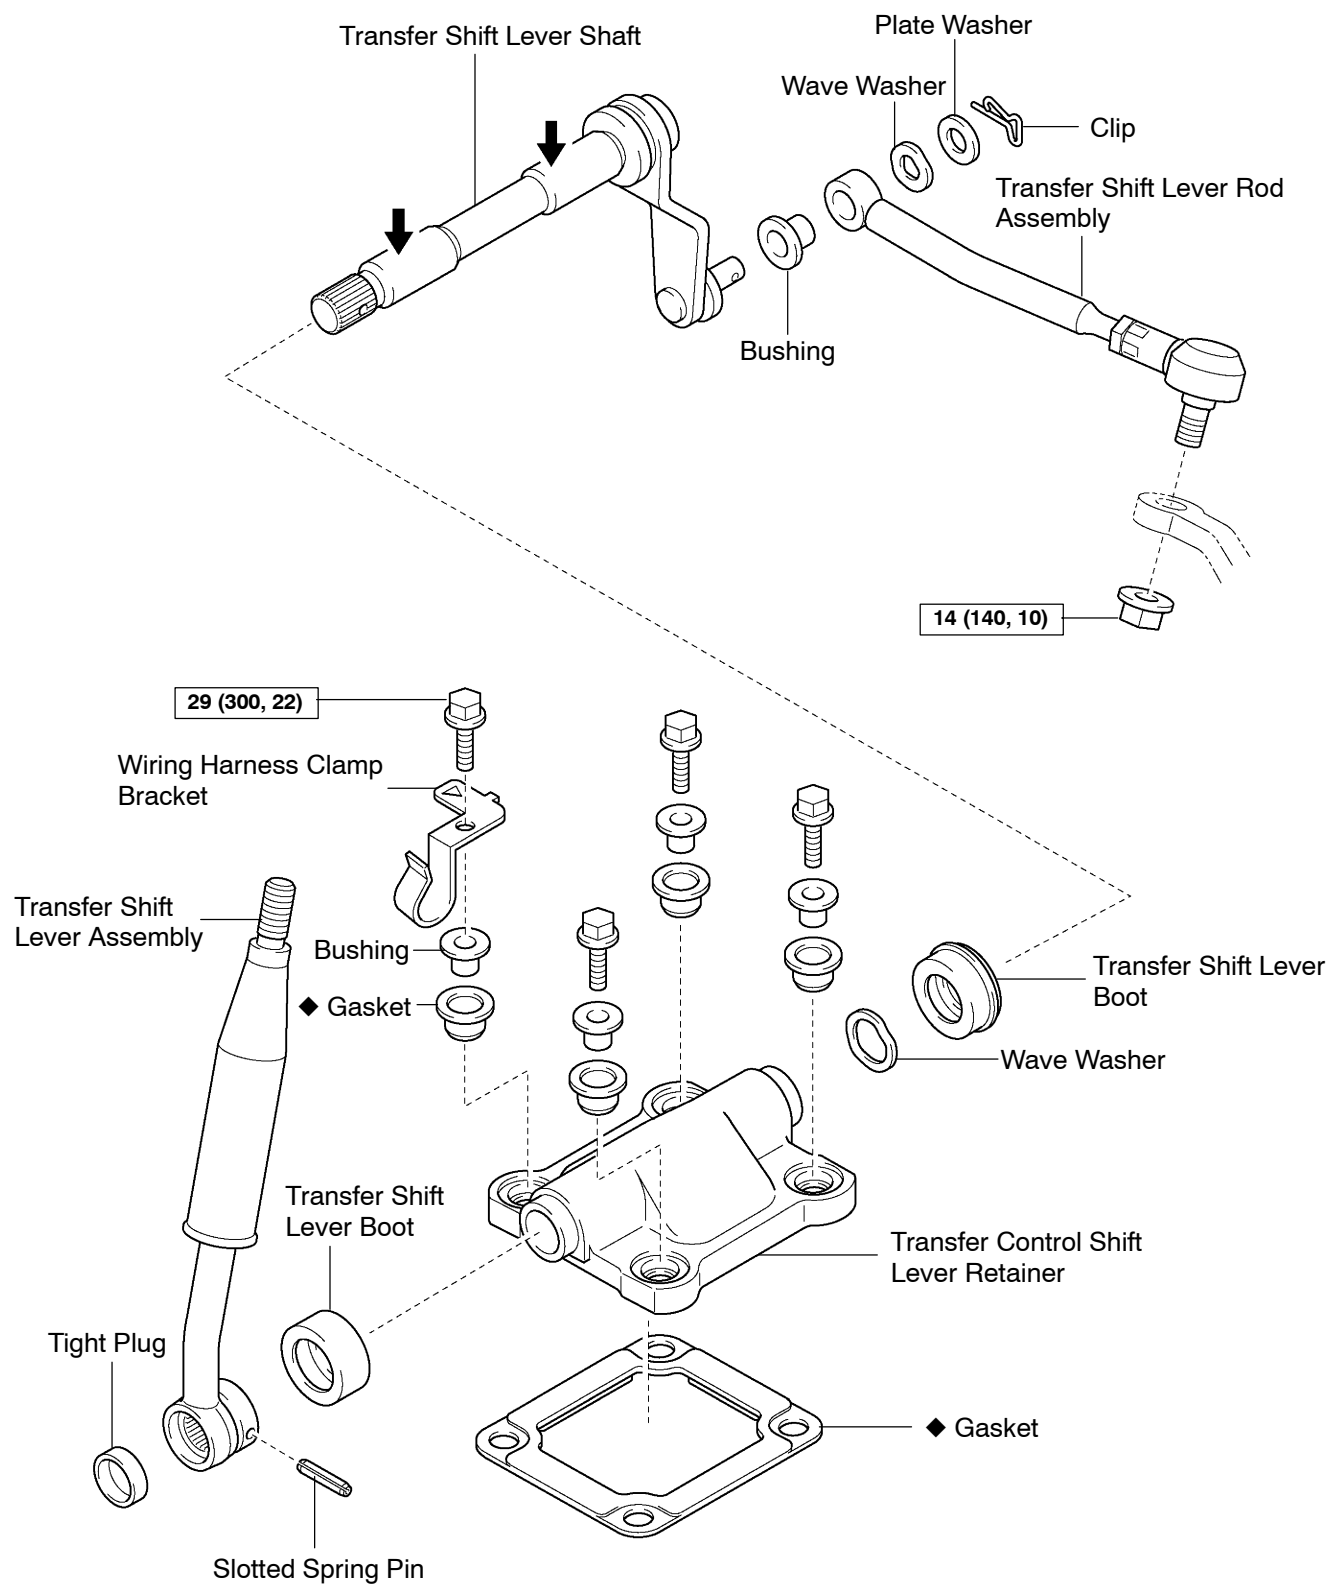

N·m (kgf·cm, ft·lbf) : Specified torque

◆ Non-reusable part

← : MP Grease

D03173