



REMOVAL

1. **REMOVE FRONT BUMPER COVER**
(See page BO-4)
2. **REMOVE WINCH HOOK HOLDER**

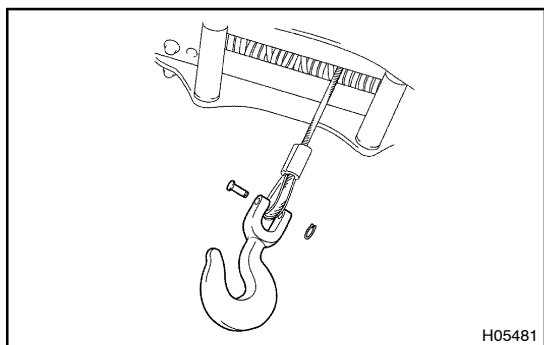

3. **REMOVE WINCH WIRE HOOK**
Remove the snap ring, pin and winch wire hook.

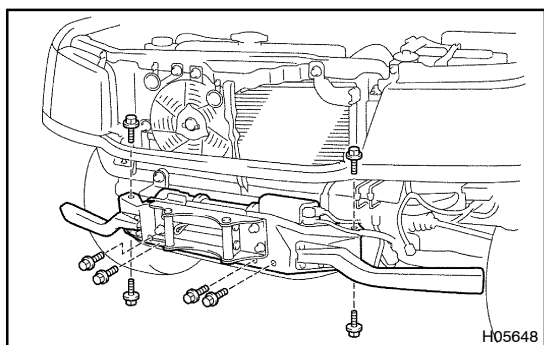

4. **REMOVE FRONT BASE MEMBER**
 - (a) Remove the 8 bolts and front base member.
Torque:
A bolt: 99 N·m (1,010 kgf·cm, 73 ft·lbf)
B bolt: 22 N·m (220 kgf·cm, 16 ft·lbf)
 - (b) Remove the 4 bolts, 2 nuts and winch roller bracket from the front base member.
Torque:
Upper bolt: 22 N·m (220 kgf·cm, 16 ft·lbf)
Lower bolt: 28 N·m (290 kgf·cm, 21 ft·lbf)
5. **REMOVE WINCH BASE BRACKET**
Remove the 2 bolts and winch base bracket.
Torque: 16 N·m (160 kgf·cm, 12 ft·lbf)
6. **REMOVE WINCH ASSEMBLY**
 - (a) Disconnect the connector.
 - (b) Remove the 2 wire harness.
 - (c) Remove the 8 bolts and winch assembly.
Torque:
Left side bolts: 59 N·m (600 kgf·cm, 43 ft·lbf)
Right side bolts: 32 N·m (330 kgf·cm, 24 ft·lbf)