


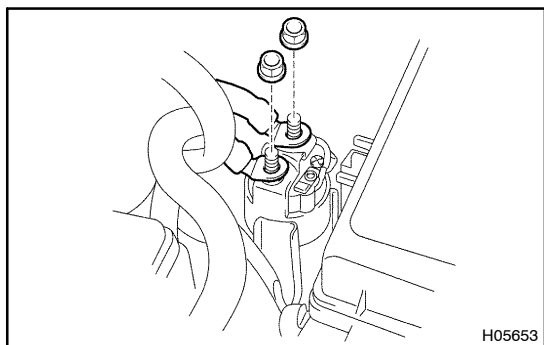


REMOVAL

REMOVE MAGNET SWITCH NO.1

- (a) Remove the 2 nuts and wire harness.

Torque: 9.3 N·m (95 kgf·cm, 82 in·lbf)

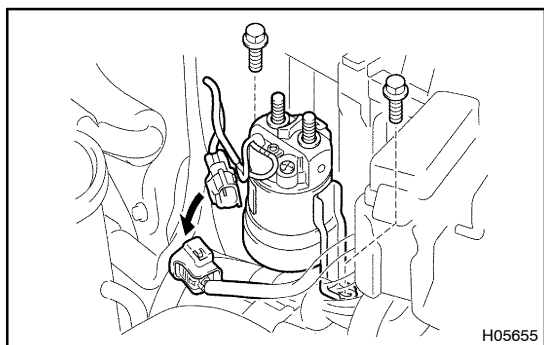

- (b) Disconnect the connector, remove the 2 bolts and magnet switch No.1.