


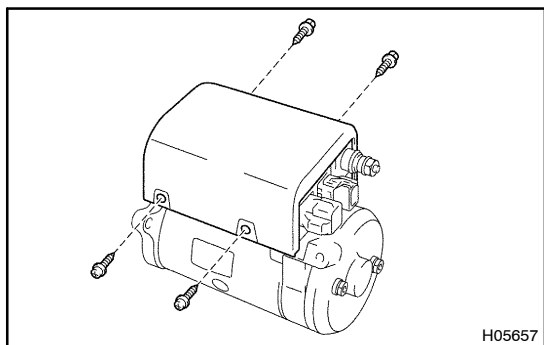


DISASSEMBLY

1. REMOVE MAGNET SWITCH COVER

Remove the 4 screws and magnet switch cover.

Torque: 1.5 N·m (15 kgf·cm, 13 in.·lbf)

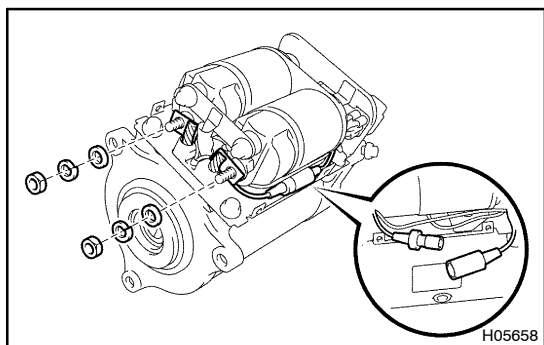


2. REMOVE MAGNET SWITCH NO.2 ASSEMBLY

(a) Disconnect the connector.


(b) Remove the 2 nuts, 2 spring washers, 2 washers and wire harness.

Torque: 9.3 N·m (95 kgf·cm, 82 in.·lbf)

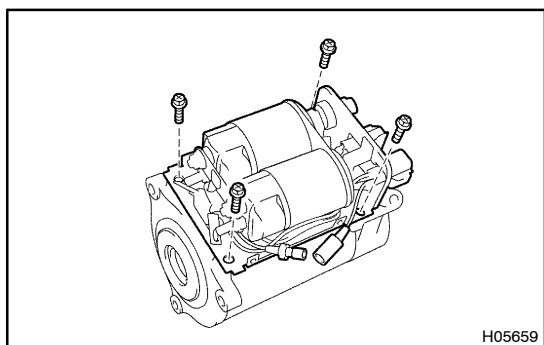

(c) Remove the 4 bolts and magnet switch No.2 assembly.

Torque: 4.9 N·m (50 kgf·cm, 43 in.·lbf)

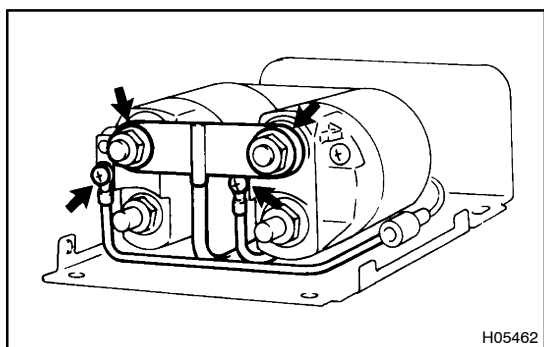


3. REMOVE MAGNET SWITCH NO.2

(a) Remove the 2 screws, disconnect the wire harness.

Torque: 18 N·m (20 kgf·cm, 16 in.·lbf)


(b) Remove the 2 nuts and terminal plate.

Torque: 9.3 N·m (95 kgf·cm, 82 in.·lbf)

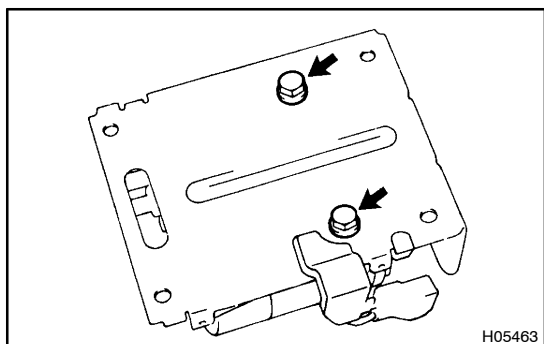

(c) Remove the 2 bolts and magnet switches.

Torque: 4.9 N·m (50 kgf·cm, 43 in.·lbf)

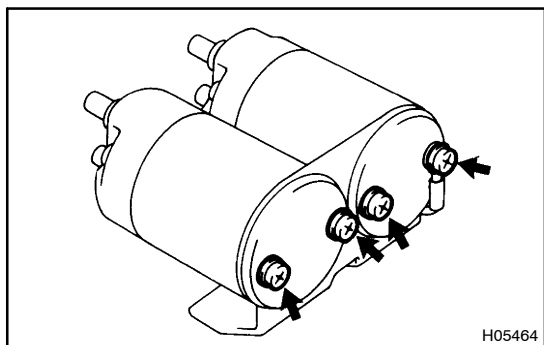

- (d) Remove the 4 screws, bracket and stoppers.