


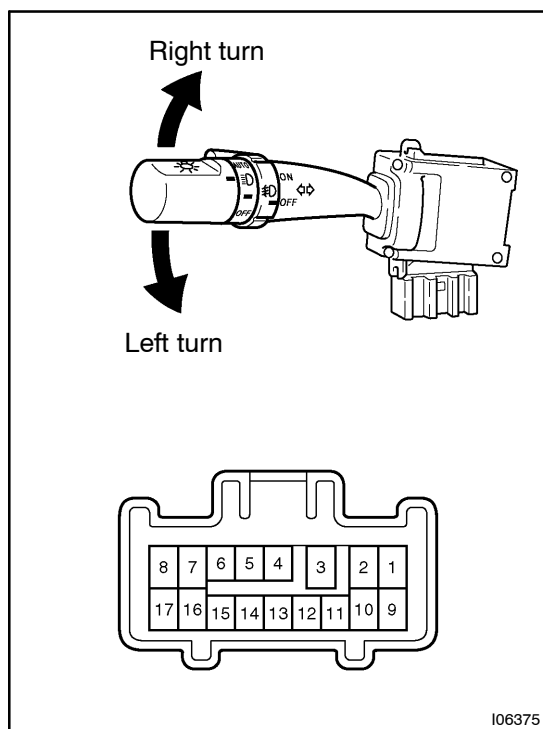


INSPECTION

1. INSPECT TURN SIGNAL SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
Left turn	7 – 8	Continuity
Neutral	–	No continuity
Right turn	6 – 7	Continuity


If continuity is not as specified, replace the switch.

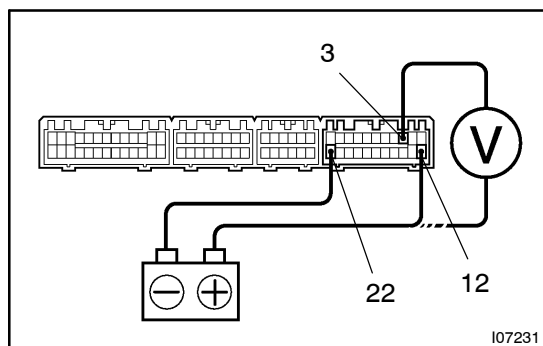

2. INSPECT HAZARD WARNING SWITCH OPERATION

- Connect the positive (+) lead from the battery to terminal 12 and 3 of panel switch connector and negative (–) lead to terminal 22.
- Push the hazard warning switch and check that the voltage is battery positive voltage.

If operation is not as specified, see page [AC-88](#).

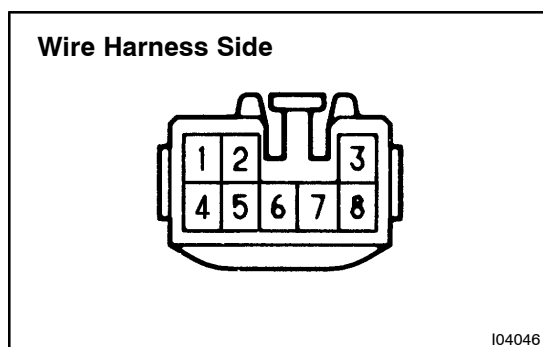

3. INSPECT TURN SIGNAL FLASHER CIRCUIT

Disconnect the connector from the combination switch and inspect the connector on the wire harness side, as shown.

Tester connection	Condition	Specified condition
2 – Ground	Constant	Continuity
3 – Ground	Constant	Continuity
5 – Ground	Turn signal switch RIGHT or OFF	No continuity
5 – Ground	Turn signal switch LEFT	Continuity
6 – Ground	Turn signal switch LEFT or OFF	No continuity
6 – Ground	Turn signal switch RIGHT	Continuity
7 – Ground	Constant	Continuity
8 – Ground	Hazard warning switch OFF	No continuity

BODY ELECTRICAL – TURN SIGNAL AND HAZARD WARNING SYSTEM

8 – Ground	Hazard warning switch ON	Continuity
1 – Ground	Ignition switch LOCK or ACC	No voltage
1 – Ground	Ignition switch ON	Battery positive voltage
4 – Ground	Constant	Battery positive voltage

If circuit is as specified, replace the relay.

If circuit is not as specified, inspect the circuits connected to other parts.