


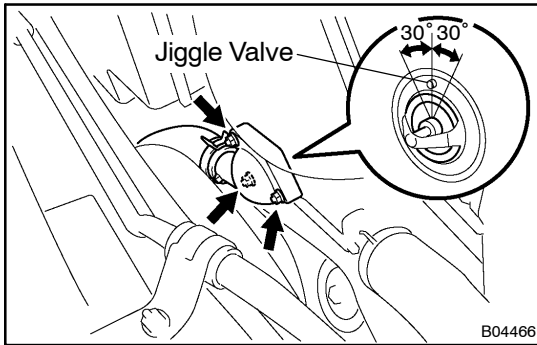

## INSTALLATION

### 1. PLACE THERMOSTAT IN WATER INLET HOUSING

- Install a new gasket to the thermostat.
- Insert the thermostat into the water inlet housing with the jiggle valve facing straight upward.

#### HINT:

The jiggle valve may be set within 30° of either side of the prescribed position.

### 2. INSTALL WATER INLET

Install the water inlet with the 3 nuts.

**Torque: 19 N·m (195 kgf·cm, 14 ft·lbf)**

### 3. FILL WITH ENGINE COOLANT

### 4. START ENGINE AND CHECK FOR ENGINE COOLANT LEAKS

### 5. RECHECK ENGINE COOLANT LEVEL