


TERMINALS OF ECU

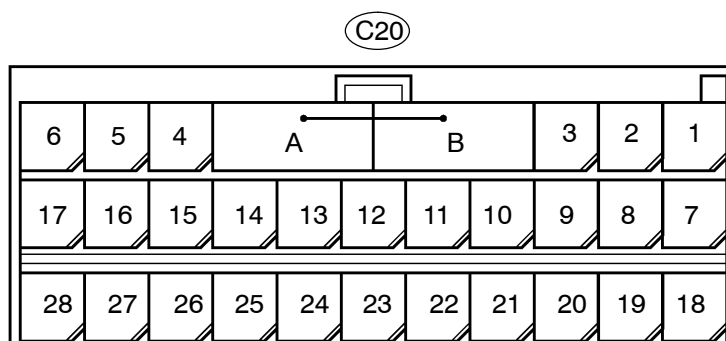

H01318

No.	Symbol	Terminal Name
A	–	Electrical Connector Check Mechanism
B	–	Electrical Connector Check Mechanism
C20 – 3	LA	SRS Warning Light
C20 – 5	IG2	Power Source (IGN Fuse)
C20 – 6	ACC	Power Source (CIG Fuse)
C20 – 7	PR–	Squib (Seat Belt Pretensioner, RH)
C20 – 8	PR+	Squib (Seat Belt Pretensioner, RH)
C20 – 9	SR+	Front Airbag Sensor (RH)
C20 – 10	P+	Squib (Passenger)
C20 – 11	P–	Squib (Passenger)
C20 – 12	SIL	Diagnosis
C20 – 13	D–	Squib (Driver)
C20 – 14	D+	Squib (Driver)
C20 – 15	SL+	Front Airbag Sensor (LH)
C20 – 16	PL+	Squib (Seat Belt Pretensioner, LH)
C20 – 17	PL–	Squib (Seat Belt Pretensioner, LH)
C20 – 19	Tc	Diagnosis
C20 – 20	SR–	Front Airbag Sensor (RH)
C20 – 26	SL–	Front Airbag Sensor (LH)
C20 – 27	E1	Ground
C20 – 28	E2	Ground