



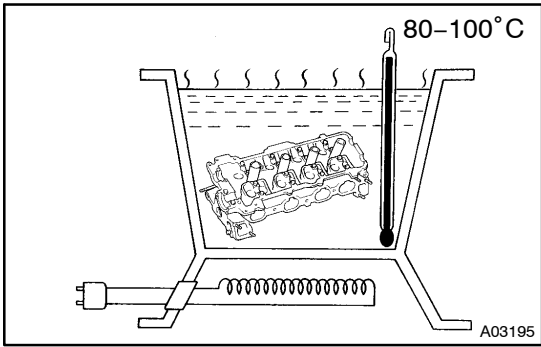


REPLACEMENT

1. REPLACE VALVE GUIDE BUSHINGS

- (a) Gradually heat the cylinder head to 80 – 100°C (176 – 212°F).

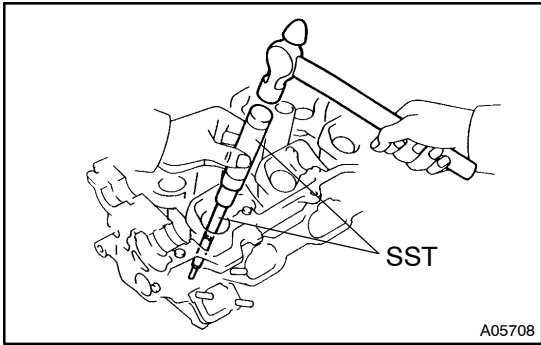

- (b) Using SST and a hammer, tap out the guide bushing.
SST 09201-10000 (09201-01060),
09950-70010 (09951-07100)

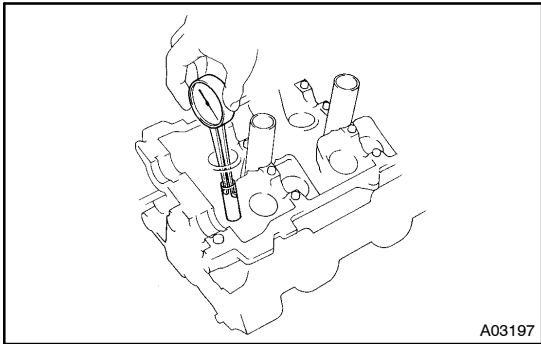

- (c) Using a caliper gauge, measure the bushing bore diameter of the cylinder head.

Both intake and exhaust


Bushing bore diameter mm (in.)	Bushing size
10.285 – 10.306 (0.4049 – 0.4057)	Use STD
10.335 – 10.356 (0.4069 – 0.4077)	Use O/S STD

- (d) Select a new guide bushing (STD or O/S 0.05).

If the bushing bore diameter of the cylinder head is greater than 10.306 mm (0.4057 in.), machine the bushing bore to the following dimension:


10.335 – 10.356 mm (0.4069 – 0.4077 in.)

If the bushing bore diameter of the cylinder head is greater than 10.356 mm (0.4077 in.), replace the cylinder head.

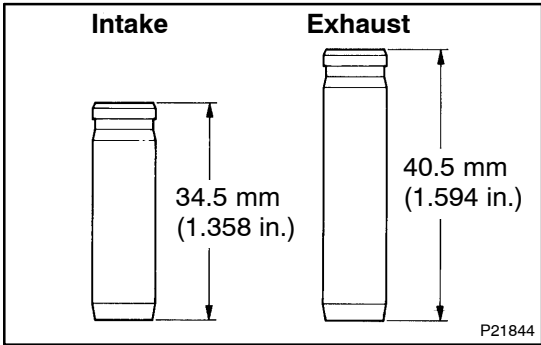

HINT:

Different the bushings are used for the intake and exhaust.

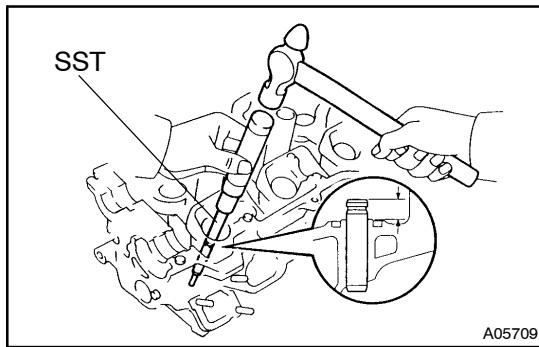

- (e) Gradually heat the cylinder head to 80 – 100°C (176 – 212°F).
- (f) Using SST and a hammer, tap in a new guide bushing to the specified protrusion height.

Protrusion height:**Intake**



9.2 – 9.8 mm (0.362 – 0.386 in.)

Exhaust


8.2 – 8.8 mm (0.323 – 0.346 in.)

SST 09201-10000 (09201-01060),
09950-70010 (09951-07100)

- (g) Using a sharp 5.5 mm reamer, ream the guide bushing to obtain the standard specified clearance (See page [EM-43](#)) between the guide bushing and valve stem.

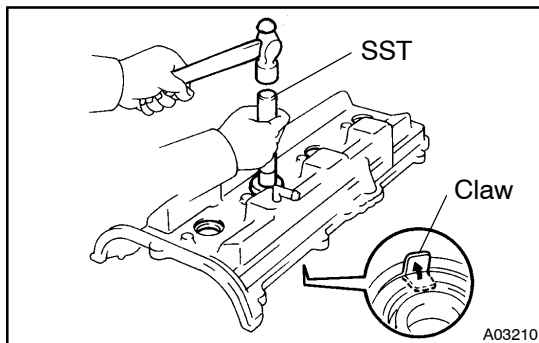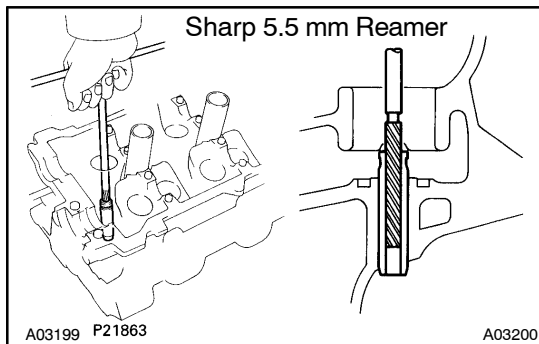**2. REPLACE SPARK PLUG TUBE GASKETS**

- (a) Bend the ventilation case claw installed on the cylinder head cover to an angle of 90° or more.
 - (b) Using SST and a hammer, tap out the gasket.
- SST 09950-60010 (09551-00240, 09951-00460,
09952-06010, 90155-60003),
09950-70010 (09951-07100)

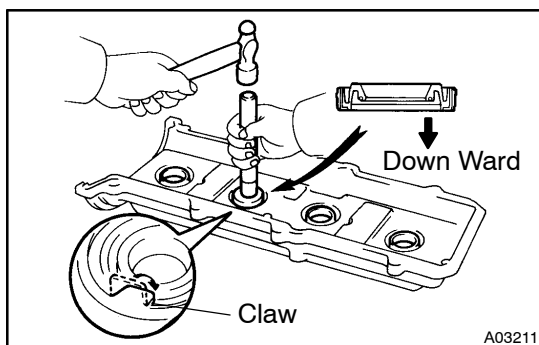

- (c) Using SST and a hammer, tap in a new gasket until its surface is flush with the upper edge of the cylinder head cover.
- SST 09950-60010 (09551-00240, 09951-00460,
09952-06010, 90155-60003),
09950-70010 (09951-07100)

NOTICE:**Be careful of the installation direction.**

- (d) Apply a light coat of MP grease to the gasket lip.
- (e) Return the ventilation case claw to its original position.