


## REMOVAL

1. REMOVE V-BANK COVER
2. DRAIN ENGINE COOLANT
3. DISCONNECT UPPER RADIATOR HOSE
4. REMOVE LH NO.3 TIMING BELT COVER

(See page [EM-15](#))

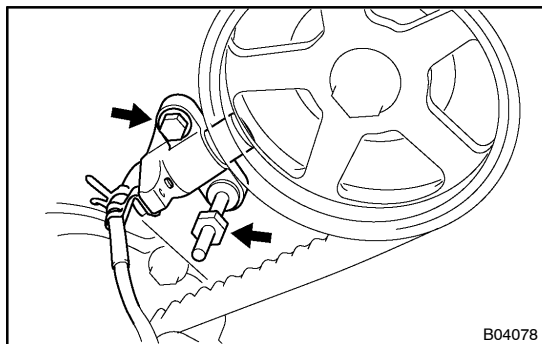

5. REMOVE CAMSHAFT POSITION SENSOR

Remove the bolt, stud bolt and camshaft position sensor.