

REMOVAL

NOTICE:


Do not open the cover or the case of the ECU and various electrical devices unless absolutely necessary.

(If the IC terminals are touched, the IC may be destroyed by static electricity.)

1. REMOVE THESE PARTS:

(See page [BO-83](#))

- (a) Front seat
- (b) Upper console panel
- (c) Rear end console panel
- (d) Heater control
- (e) Rear console box
- (f) Front console box
- (g) Center lower cluster finish panel assembly

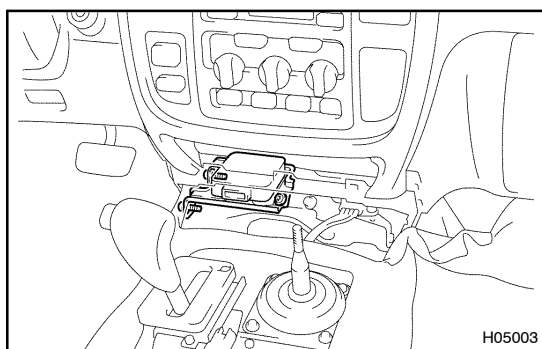

2. REMOVE AIRBAG SENSOR ASSEMBLY

- (a) Disconnect the airbag sensor connector.

NOTICE:

Remove the connector with the airbag sensor assembly installed.

- (b) Using a torx wrench, remove the 3 screws and airbag sensor assembly.

Torx wrench: T40 (Part No.09042-00020 or locally manufactured tool)