


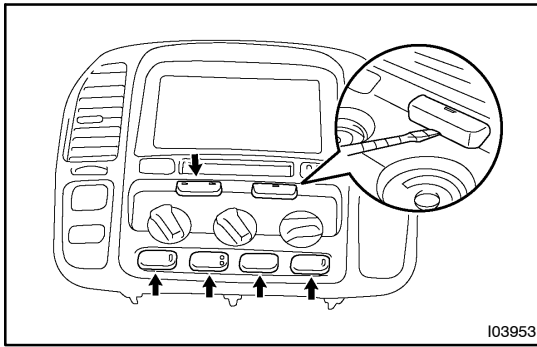


DISASSEMBLY

1. REMOVE KNOB

- (a) Pull out the dial knobs.
- (b) Using a screwdriver, pull out the switch knobs.


HINT:

Tape the screwdriver tip before use.

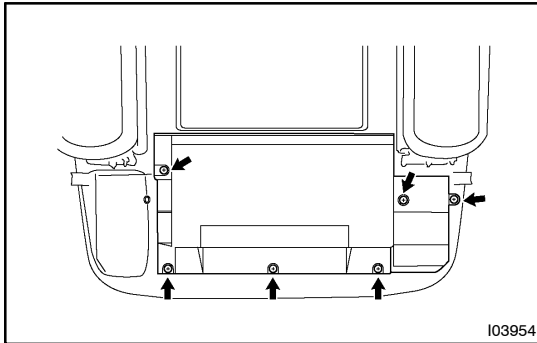


2. REMOVE A/C AMPLIFIER

- (a) Remove the 6 screws and cover.

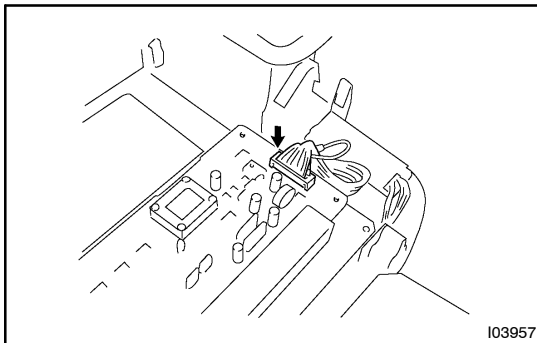

- (b) Disconnect the connector and remove the amplifier.

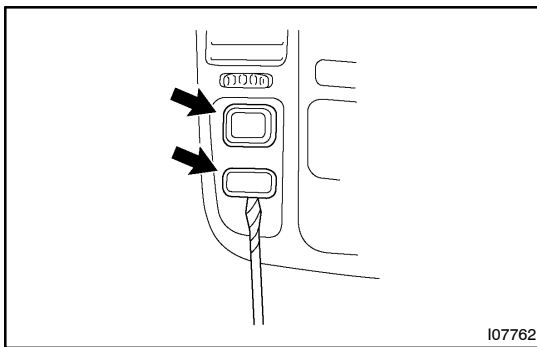


3. REMOVE DIFF LOCK AND HAZARD SWITCH


- (a) Using a screwdriver, pull out the switch knobs.

HINT:


Tape the screwdriver tip before use.

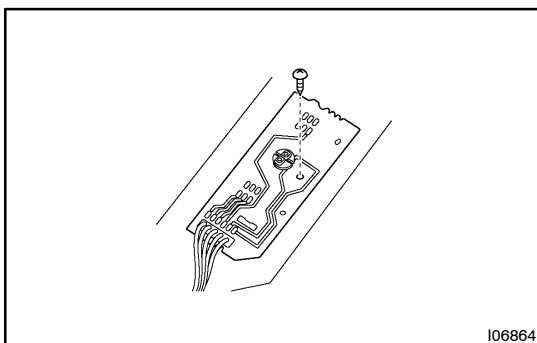


- (b) Remove the screw and switch.
- (c) Using a screwdriver, turn the bulb to the left and pull out the bulb.

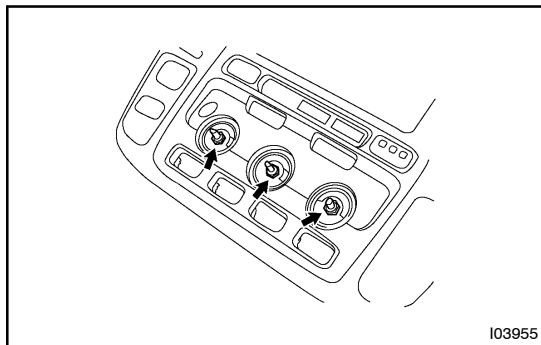**4. REMOVE HEATER CONTROL**

(a) Remove the 3 nuts from the control switches.

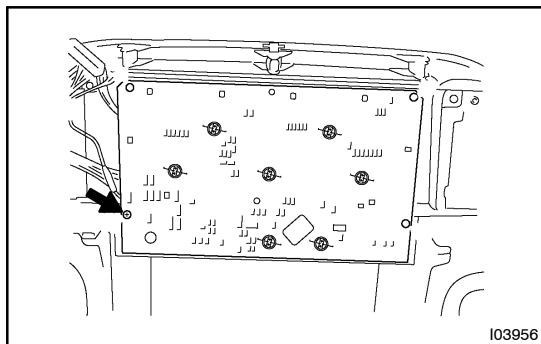


(b) Remove the screw and heater control, then disconnect the connectors.

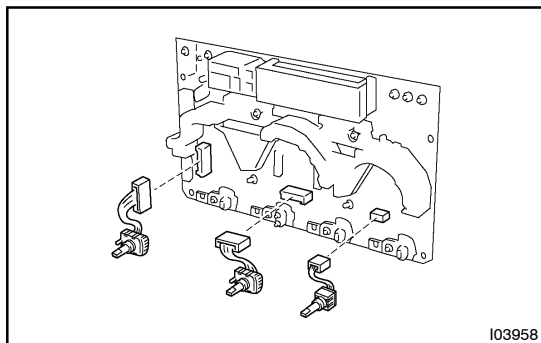**5. REMOVE CONTROL SWITCHES**

Disconnect the connectors and remove the switches.

6. REMOVE BULBS

Using a screw driver, turn the bulb to the left and pull out the bulb.

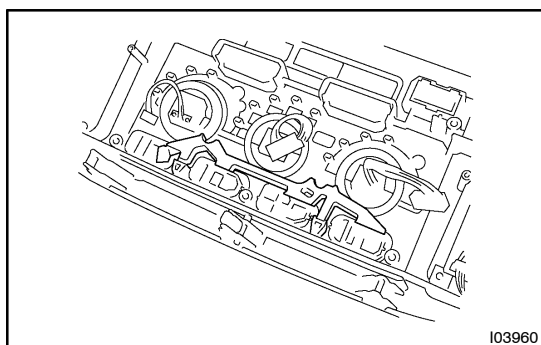**7. REMOVE HEATER CONTROL LENS**