


REMOVAL

1. REMOVE NO.2 ENGINE UNDER COVER

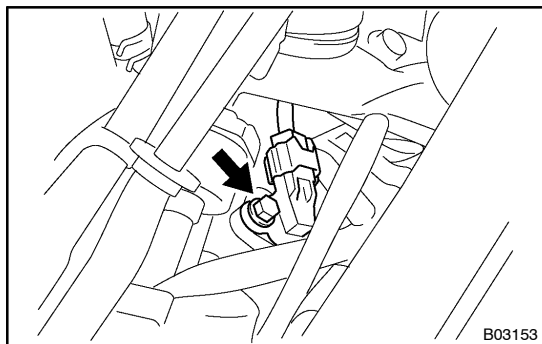

2. REMOVE CRANKSHAFT POSITION SENSOR

- (a) Disconnect the crankshaft position sensor connector.
- (b) Remove the bolt and crankshaft position sensor.

Torque: 6.5 N·m (65 kgf·cm, 58 in.·lbf)