



COMBINATION METER CIRCUIT

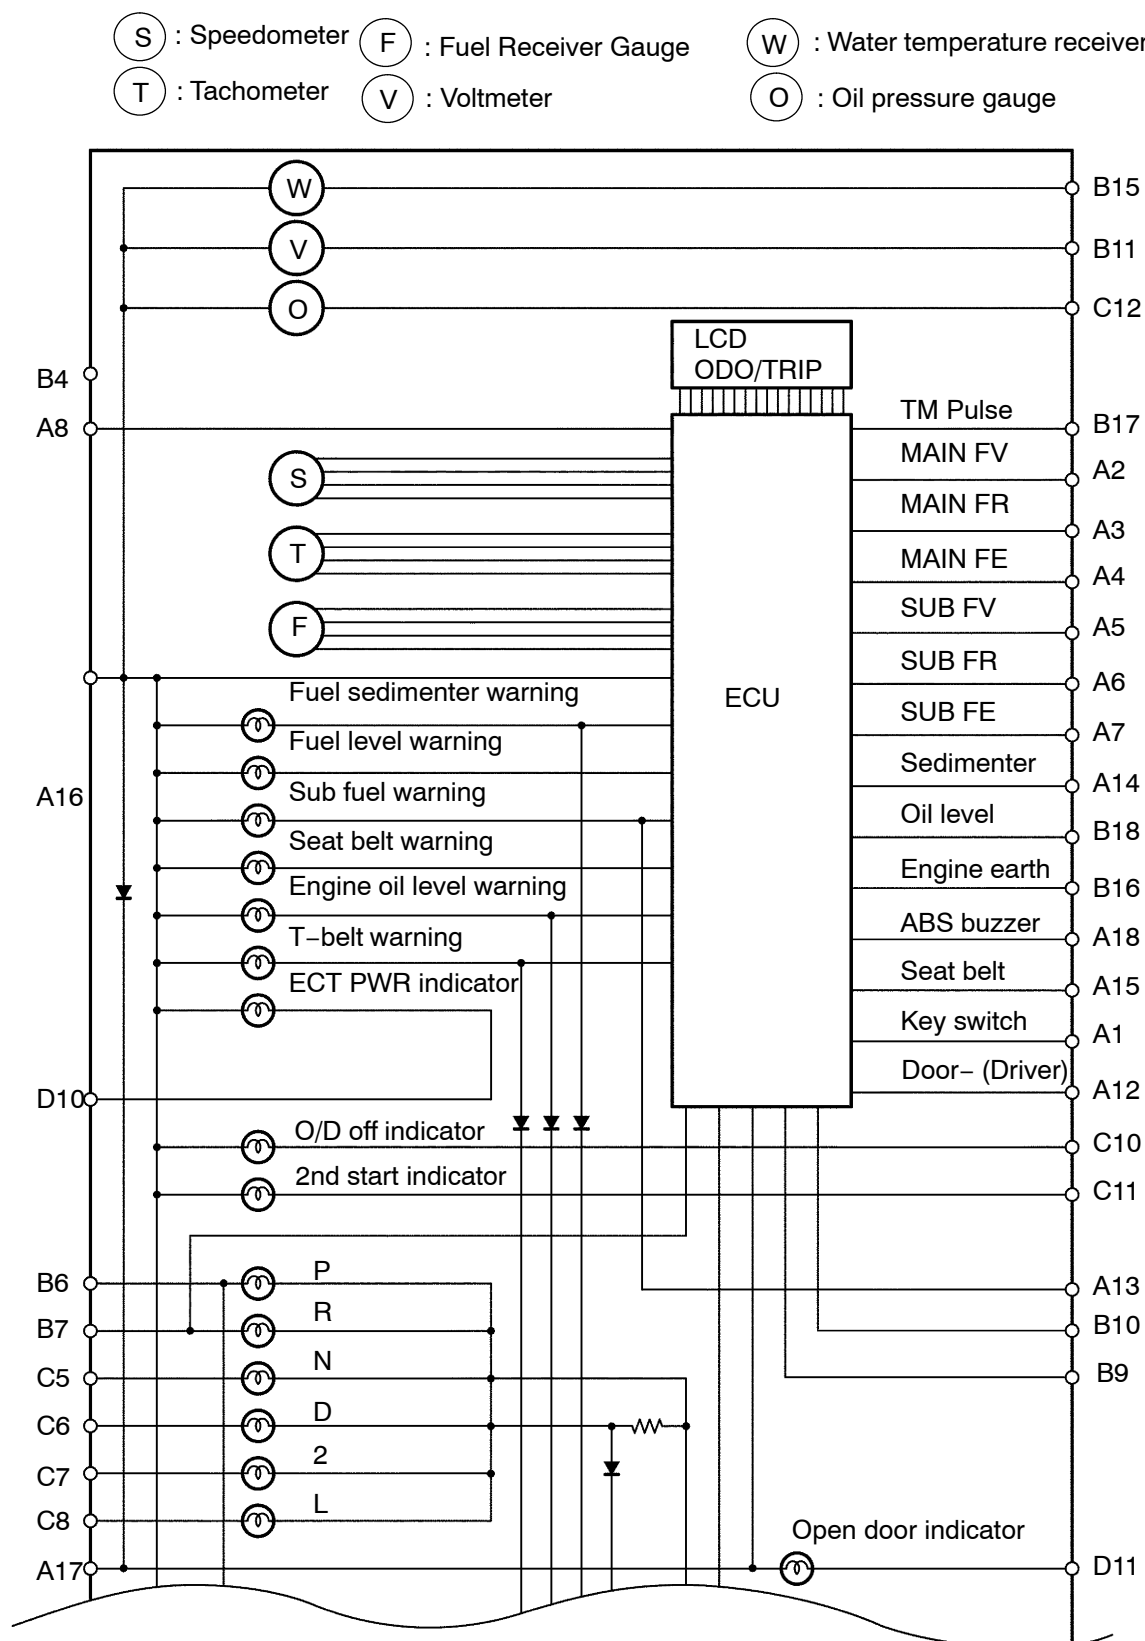

P

I14254

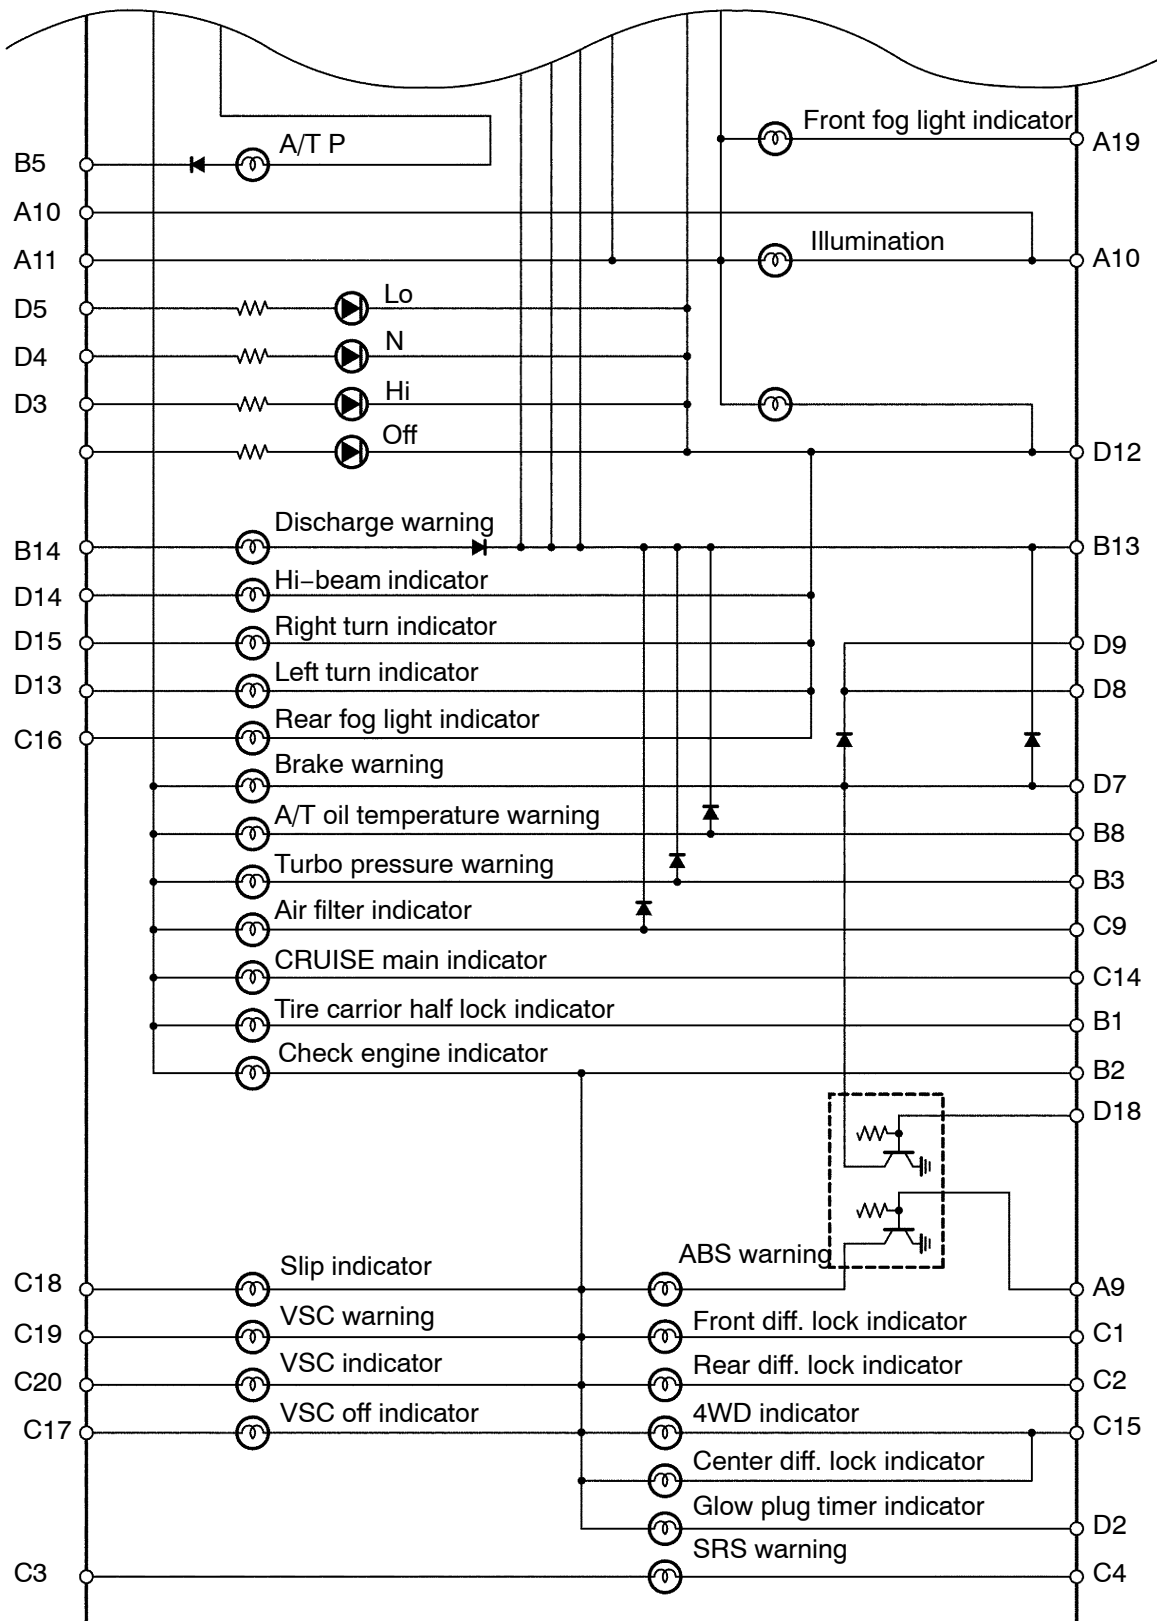

P

BODY ELECTRICAL – COMBINATION METER

No.		Wiring connector side	No.		Wiring connector side
A	1	Key unlock warning switch	C	1	Front diff. lock detection switch
	2	Fuel main sender gauge		2	Rear diff. lock detection switch
	3	Fuel main sender gauge		3	ECU-B fuse
	4	Fuel main sender gauge		4	Center airbag sensor assembly
	5	Fuel sub sender gauge		5	Neutral start switch (N range)
	6	Fuel sub sender gauge		6	Neutral start switch (D range)
	7	Fuel sub sender gauge		7	Neutral start switch (2 range)
	8	Sub fuel switch		8	Neutral start switch (L range)
	9	ABS ECU		9	Air filter warning switch
	10	Light control rheostat		10	O/D main switch
	11	TAIL fuse		11	Engine and ECT ECU
	12	Driver door courtesy switch		12	Low oil pressure warning switch
	13	Engine and ECT ECU		14	Engine and ECT ECU
	14	Fuel sedimenter warning switch		15	Transfer 4WD position switch
	15	Seat belt buckle switch			Center diff. lock indicator switch
	16	GAUGE fuse		16	Rear fog light switch
	17	DOME fuse		17	ABS, TRC, VSC ECU
	18	ABS ECU		18	ABS, TRC, VSC ECU
	19	Front fog light switch		19	ABS, TRC, VSC ECU
				20	ABS, TRC, VSC ECU
B	1	Tire half lock indicator switch	D		
	2	Engine and ECT ECU		2	Glow plug timer
	3	Turbo pressure gauge		3	Suspension control ECU
	4	CIGAR fuse		4	Suspension control ECU
	5	Neutral start switch (P range)		5	Suspension control ECU
	6	Neutral start switch (P range)		6	Suspension control ECU
	7	Neutral start switch (R range)		7	Brake fluid level warning switch
	8	A/T oil temperature indicator switch		8	Parking brake switch
	9	Speed control unit		9	Body control ECU (M/T)
	10	Speed sensor		10	ECT pattern select switch
	11	Ground		11	Body control ECU
	13	Alternator		12	Ground
	14	IGN fuse		13	Turn signal switch (Left)
	15	Water temperature sender gauge		14	Headlight dimmer switch
	16	Ground		15	Turn signal switch (Right)
	17	Engine and ECT ECU		18	ABS, TRC, VSC ECU
	18	Engine oil level sensor			