

COMPONENTS

LHD:

RHD:

Air Cleaner Case Assembly

Hydraulic Brake
Booster Assembly

◆ Gasket

15 (155, 11)

Pin

Clip

w/ ABS & BA &
TRC & VSC Only:

15 (155, 11)

15 (155, 11)

Fluid Level Warning
Switch Connectorw/ ABS & BA & TRC & VSC Only:
Master Cylinder Pressure Sensor ConnectorABS ECU or ABS &
BA & TRC & VSC
ECU

5.0 (51, 44 in.-lbf)

Lower No. 1 Panel

LH Lower Panel

No. 2 Heater to
Register Duct


Front Door Scuff Plate

Cowl Side Trim

N·m (kgf·cm, ft·lbf) : Specified torque

◆ Non-reusable part
N

F10035

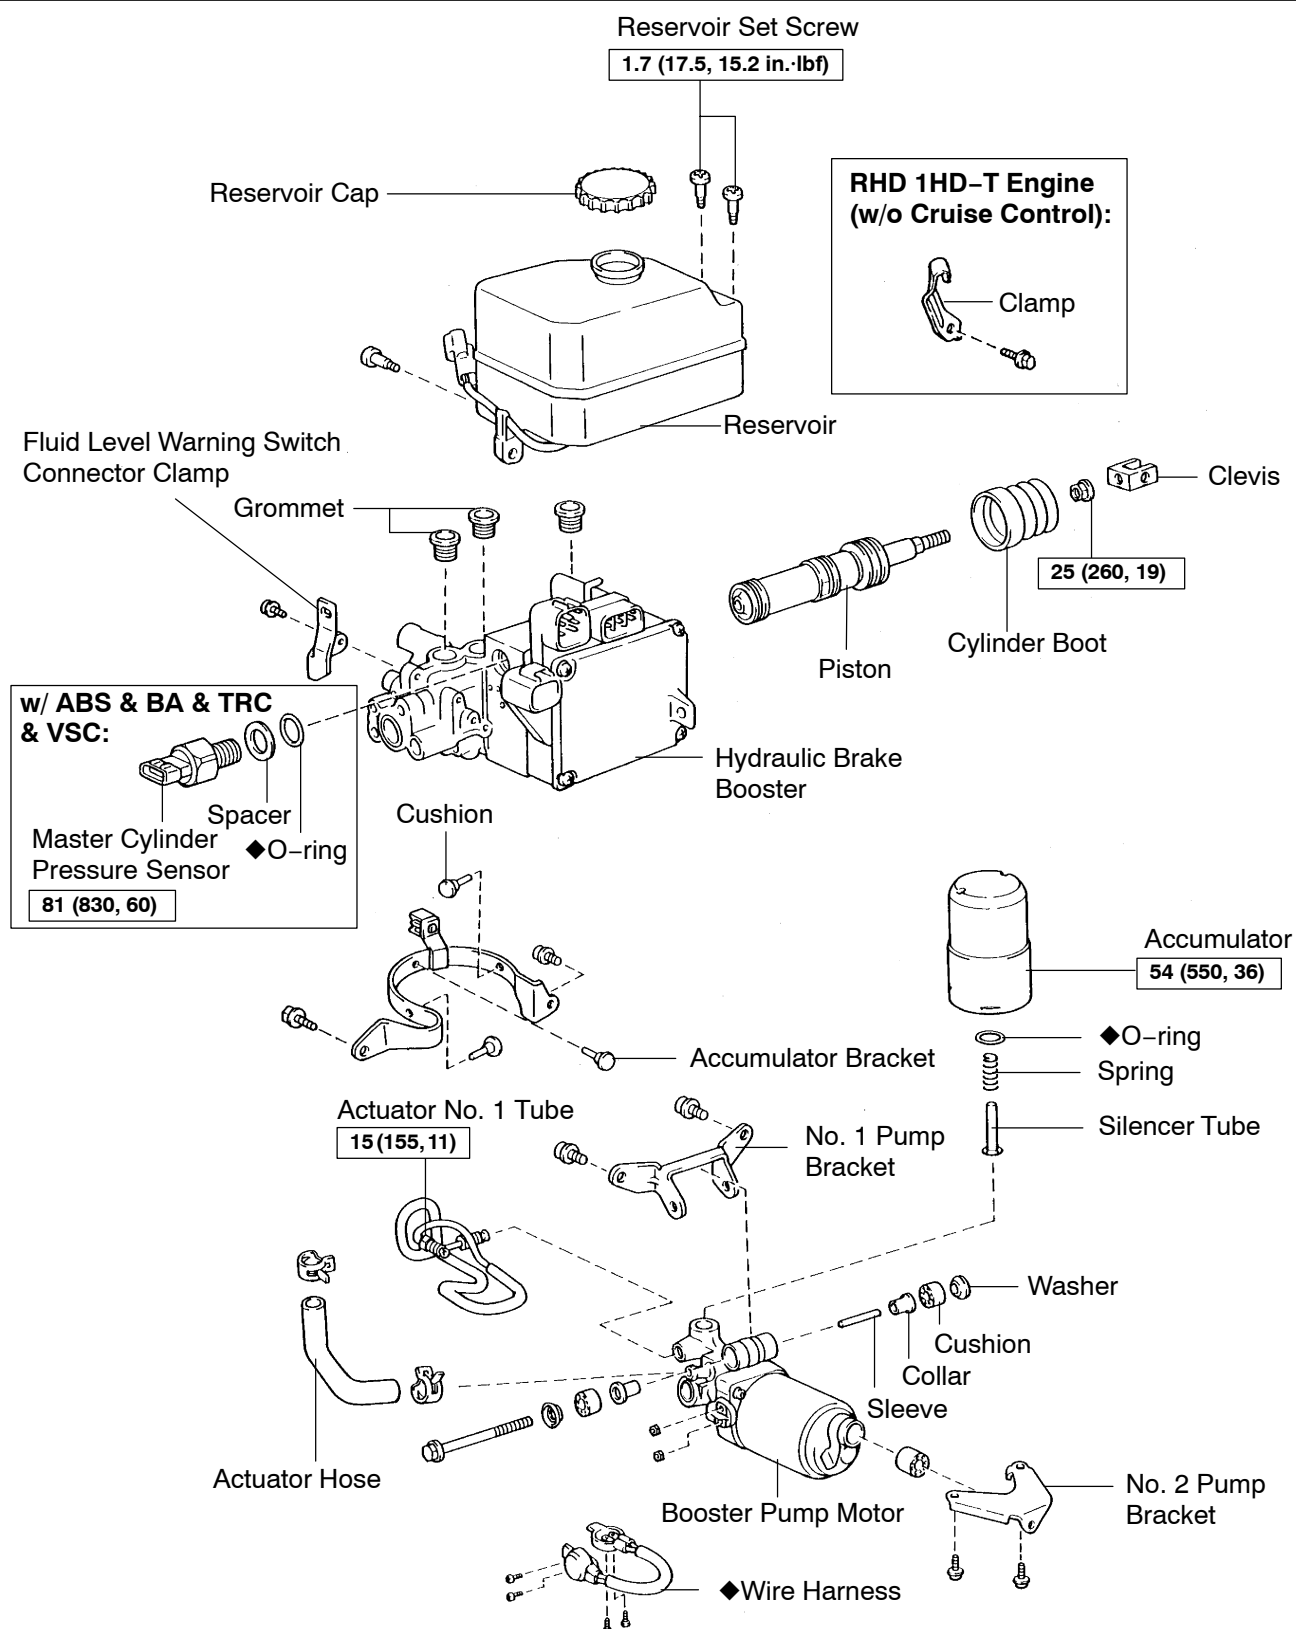

N·m (kgf·cm, ft·lbf) : Specified torque

N ◆ Non-reusable part

F10036